



# Starting and Ignition for 1MZ-FE and 3MZ-FE

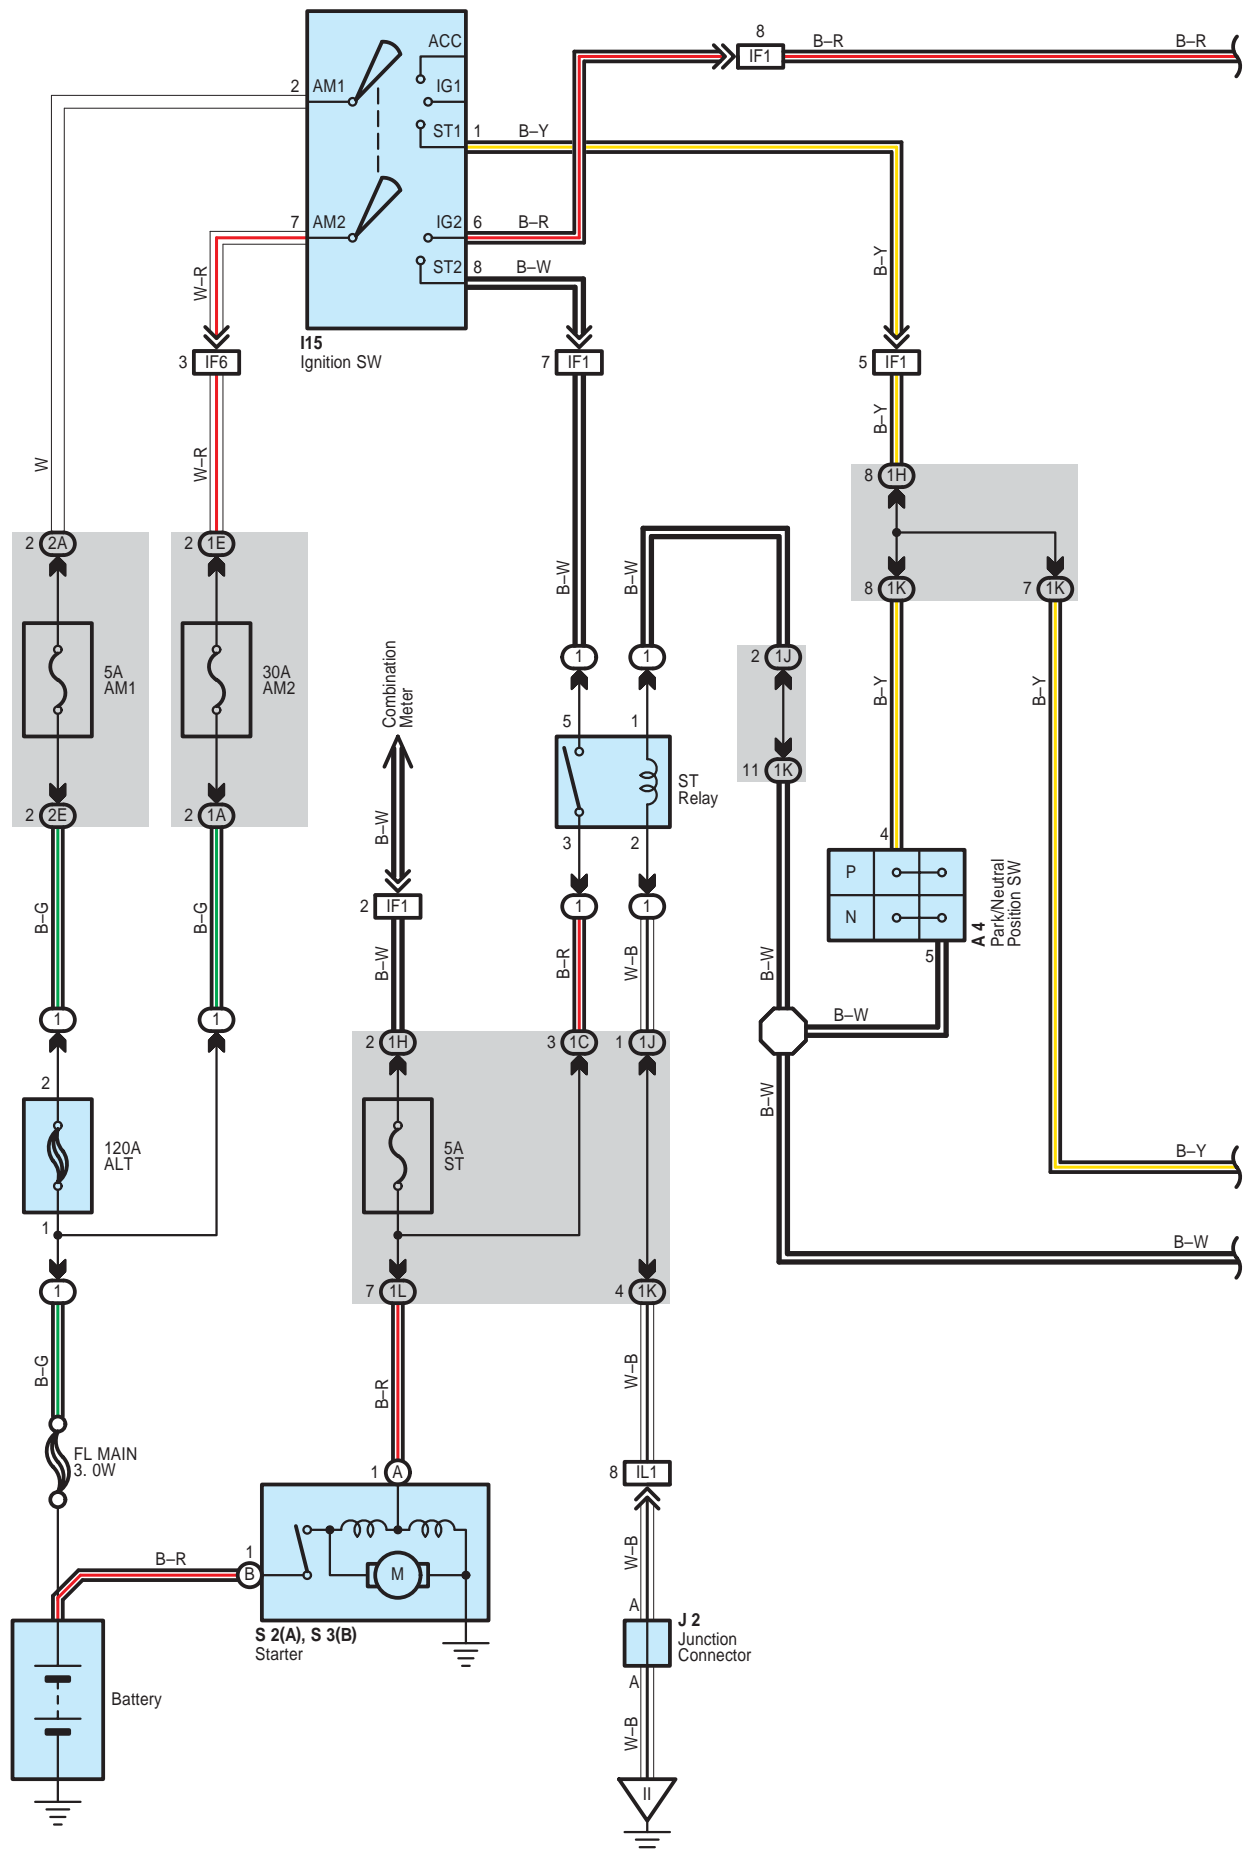

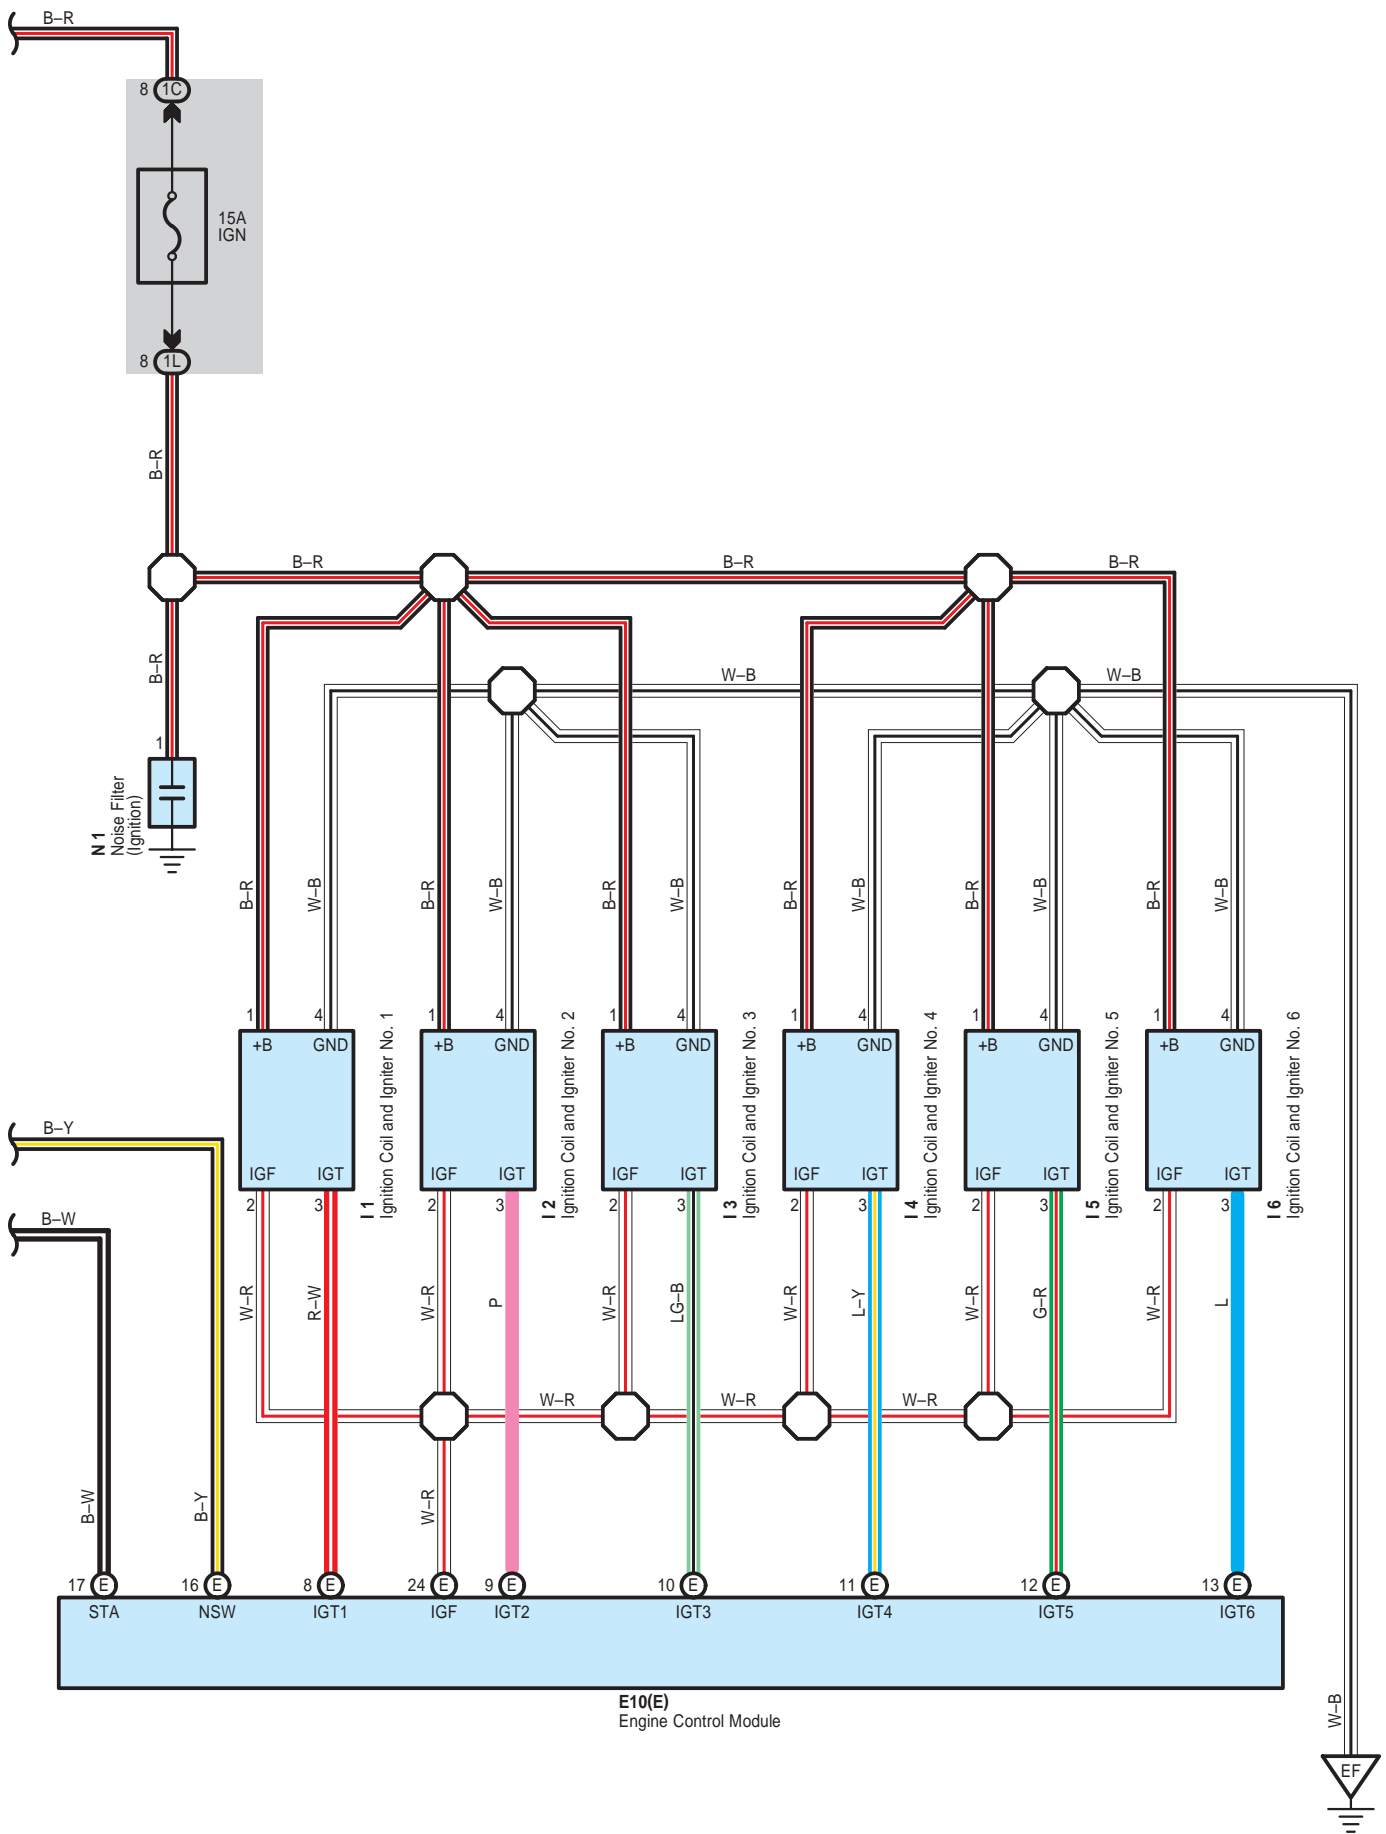

# Starting and Ignition for 1MZ-FE and 3MZ-FE

## : Parts Location

Code	See Page	Code	See Page	Code	See Page
A4	38 (*1)	I4	39 (*1)	N1	39 (*1)
E10	E 42	I5	39 (*1)	S2	A 39 (*1)
I1	39 (*1)	I6	39 (*1)	S3	B 39 (*1)
I2	39 (*1)	I15	43		
I3	39 (*1)	J2	43		

## : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
1	22	Engine Room R/B (Engine Compartment Left)

## : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1A	25	Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)
1C		
1E		
1H		
1J		
1K	25	Engine Wire and Engine Room J/B (Engine Compartment Left)
1L		
2A	28	Instrument Panel Wire and Driver Side J/B (Lower Finish Panel)
2E	28	Engine Room Main Wire and Driver Side J/B (Lower Finish Panel)

## : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IF1	50	Engine Room Main Wire and Instrument Panel Wire (Right Side of Steering Column Tube)
IF6		
IL1	51	Engine Wire and Instrument Panel Wire (Behind the Glove Box)

## : Ground Points

Code	See Page	Ground Points Location
EF	48 (*1)	Right Side of Cylinder Head
II	50	Cowl Side Panel LH

\* 1 : 1MZ-FE, 3MZ-FE      \* 2 : 2AZ-FE      \* 3 : w/ Power Seat      \* 4 : w/o Power Seat

