


Position of Parts in Instrument Panel

[RHD]

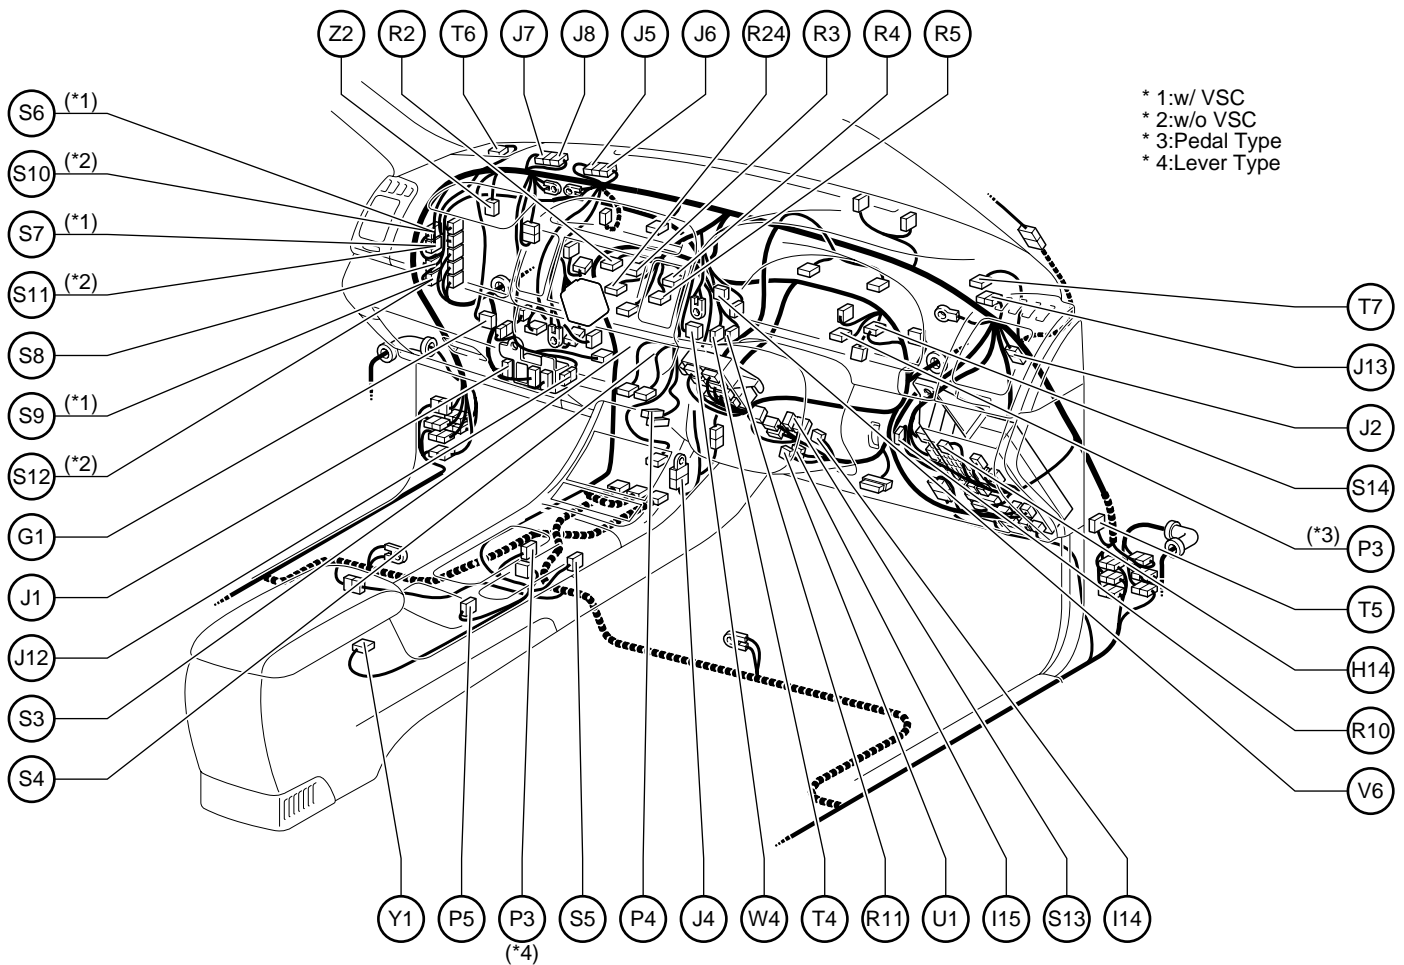

G 1 Glove Box Light and SW

H14 Headlight Beam Level Control SW

I 14 Ignition Key Cylinder Light
Transponder Key Amplifier
I 15 Ignition SW

J 1 Junction Connector
J 2 Junction Connector
J 4 Junction Connector
J 5 Junction Connector
J 6 Junction Connector
J 7 Junction Connector
J 8 Junction Connector
J 12 Junction Connector
J 13 Junction Connector

P 3 Parking Brake SW
P 4 Power Outlet (Front)
P 5 Power Outlet (Rear)

R 2 Radio and Player
R 3 Radio and Player
R 4 Radio and Player
R 5 Radio and Player
R10 Rear Fog Light SW
R11 Rheostat
R24 Radio and Player

S 3 Seat Heater SW LH
S 4 Seat Heater SW RH
S 5 Shift Lock Control ECU
S 6 Skid Control ECU
S 7 Skid Control ECU
S 8 Skid Control ECU
S 9 Skid Control ECU
S10 Skid Control ECU
S11 Skid Control ECU
S12 Skid Control ECU
S13 Steering Sensor
S14 Stop Light SW

T 4 TRC OFF SW
T 5 Turn Signal Flasher Relay
T 6 Tweeter LH
T 7 Tweeter RH

U 1 Unlock Warning SW

V 6 VSC Warning Buzzer

W 4 Wiper Relay

Y 1 Yaw Rate Sensor

Z 2 Option Connector (TVSS ECU)