


PARKING BRAKE CONTROL PEDAL ASSY OVERHAUL

3304V-03

HINT:


COMPONENTS: See page 33-3 and 71-9

1. REMOVE INSTRUMENT CLUSTER FINISH PANEL(See page 71-16)
2. REMOVE COMBINATION METER ASSY(See page 71-16)
3. REMOVE FRONT DOOR SCUFF PLATE LH(See page 71-16)
4. REMOVE COWL SIDE TRIM SUB-ASSY LH(See page 71-16)
5. REMOVE INSTRUMENT PANEL SUB-ASSY UPPER(See page 71-16)
6. REMOVE INSTRUMENT PNL INSERT SUB-ASSY LWR LH(See page 71-16)

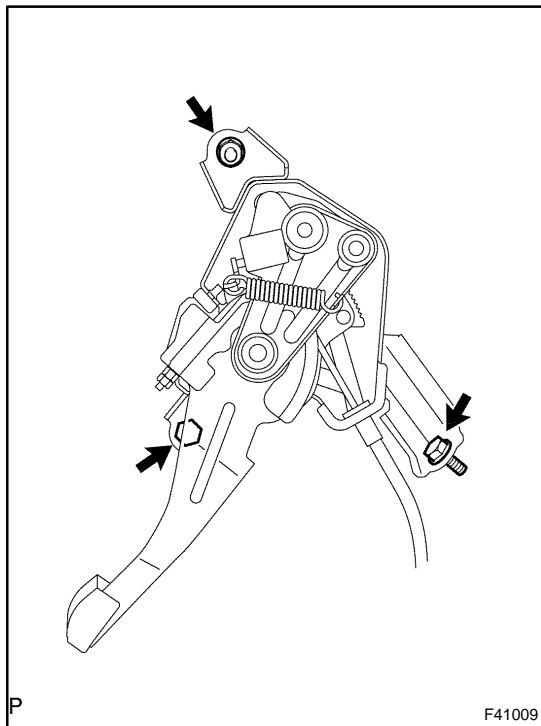

7. REMOVE PARKING BRAKE CONTROL PEDAL ASSY

- (a) Disconnect the parking brake switch connector.
- (b) Remove the 2 bolts, nut and parking brake control pedal assy.

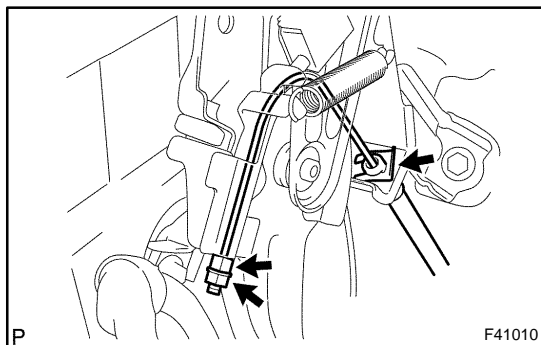

8. REMOVE PARKING BRAKE CABLE ASSY NO.1

- (a) Remove the lock nut, adjusting nut, clip and parking brake assy No. 1.

9. REMOVE PARKING BRAKE SWITCH ASSY

- (a) Remove the screw and parking brake switch assy.


10. REMOVE TENSION SPRING

11. REMOVE RETURN SPRING DAMPER

12. REMOVE PARKING PEDAL PAD


13. INSTALL PARKING PEDAL PAD
14. INSTALL RETURN SPRING DAMPER
15. INSTALL TENSION SPRING
16. INSTALL PARKING BRAKE SWITCH ASSY

(a) Install the parking brake switch assy with the screw.

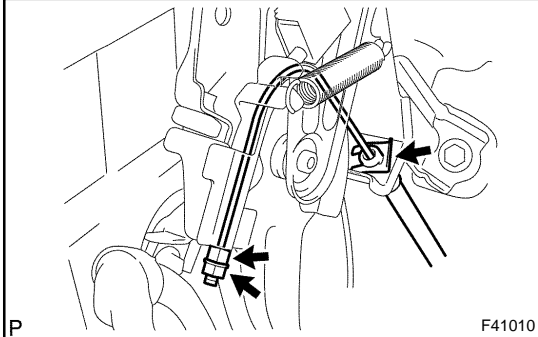

17. INSTALL PARKING BRAKE CABLE ASSY NO.1

- (a) Install the parking brake cable assy No.1 with the clip, adjusting nut and lock nut.

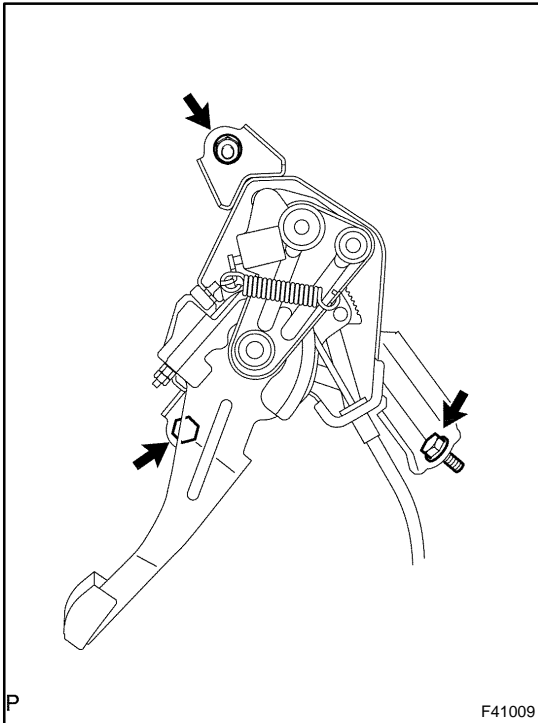

18. INSTALL PARKING BRAKE CONTROL PEDAL ASSY

- (a) Install the parking brake control pedal assy with the 2 bolts and nut.

Torque: 39 N·m (398 kgf·cm, 29 ft·lbf)

- (b) Connect the parking brake switch connector.

19. INSTALL INSTRUMENT PNL INSERT SUB-ASSY LWR LH(See page 71-16)
20. INSTALL INSTRUMENT PANEL SUB-ASSY UPPER(See page 71-16)
21. INSTALL COWL SIDE TRIM SUB-ASSY LH(See page 71-16)
22. INSTALL FRONT DOOR SCUFF PLATE LH(See page 71-16)
23. INSTALL COMBINATION METER ASSY(See page 71-16)
24. INSTALL INSTRUMENT CLUSTER FINISH PANEL(See page 71-16)
25. INSPECT AND ADJUST PARKING BRAKE PEDAL TRAVEL(See page 33-2)