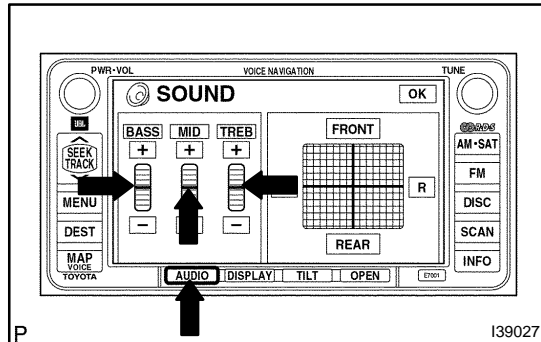


**POOR SOUND QUALITY IN ALL MODES (LOW VOLUME)****INSPECTION PROCEDURE****1 CHECK AUDIO SETTINGS**

- (a) Enter the sound adjustment screen by pressing the "SOUND" switch on the AUDIO display.
- (b) Set "BASS", "MID" and "TREB" to the initial values and check if sound is normal.

**Standard: Returns to normal.**

**HINT:**

Sound quality adjustment items vary depending on the type of the amplifier.

**OK** **END**

**NG**

**PROCEED TO NEXT CIRCUIT INSPECTION SHOWN IN PROBLEM SYMPTOMS TABLE  
(SEE PAGE 05-1914)**