


REPLACEMENT

HINT:

Installation is in the reverse order of removal.

1. **PRECAUTION** (See page 60-1)
2. **DISCONNECT BATTERY NEGATIVE TERMINAL**
3. **PLACE FRONT WHEELS FACING STRAIGHT AHEAD**
4. **REMOVE STEERING WHEEL COVER LOWER NO.2**
5. **REMOVE STEERING WHEEL COVER LOWER NO.2 (W/O STEERING PAD SWITCH 4 SPOKE STEERING WHEEL)**
6. **REMOVE STEERING WHEEL COVER LOWER NO.3 (3 SPOKE STEERING WHEEL ASSY)**
7. **REMOVE CONNECTOR COVER (W/ STEERING PAD SWITCH 4 SPOKE STEERING WHEEL)**
8. **REMOVE HORN BUTTON ASSY** (See page 60-25)
9. **REMOVE STEERING WHEEL ASSY** (See page 50-9)
SST 09950-50013 (09951-05010, 09952-05010, 09953-05020, 09954-05021)
10. **REMOVE STEERING COLUMN COVER** (See page 50-9)

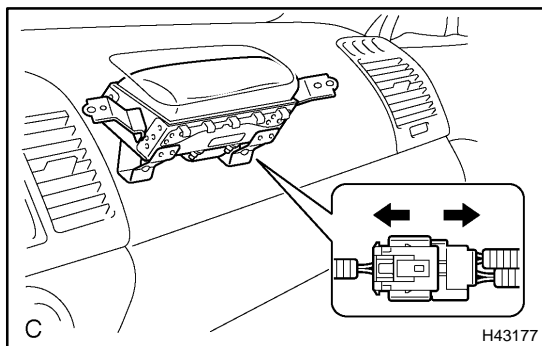


11. DISCONNECT FRONT PASSENGER AIRBAG ASSY CONNECTOR

- (a) Disconnect the connector.

NOTICE:

When handling the airbag connector, take care not to damage the airbag wire harness.

12. **REMOVE INSTRUMENT PANEL SAFETY PAD SUB-ASSY** (See page 71-16)
13. **REMOVE INSTRUMENT PANEL REGISTER ASSY NO.2** (See page 71-16)
14. **REMOVE INSTRUMENT PANEL REGISTER ASSY NO.1** (See page 71-16)
15. **REMOVE SIDE DEFROSTER NOZZLE DUCT NO.2** (See page 71-16)
16. **REMOVE SIDE DEFROSTER NOZZLE DUCT NO.1** (See page 71-16)
17. **REMOVE DEFROSTER NOZZLE ASSY** (See page 71-16)
18. **REMOVE HEATER TO REGISTER DUCT NO.1** (See page 71-16)
19. **REMOVE HEATER TO REGISTER DUCT NO.3** (See page 71-16)
20. **REMOVE HEATER TO REGISTER DUCT NO.2** (See page 71-16)

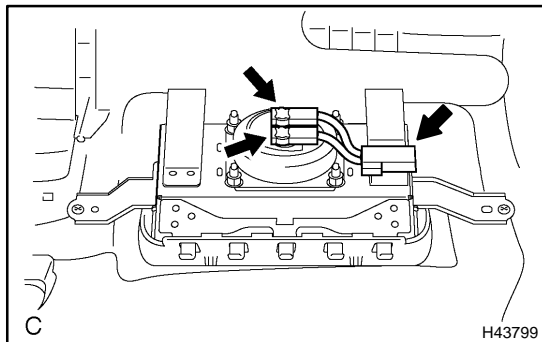


21. DISCONNECT INSTRUMENT PANEL WIRE NO.2


- (a) Remove the clip.
(b) Disconnect the connectors from the front passenger airbag assy.

NOTICE:


When handling the airbag connector, take care not to damage the airbag wire harness.

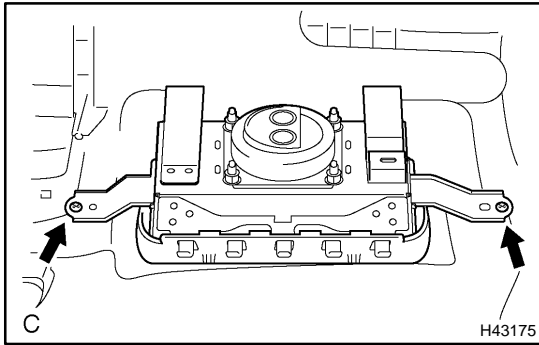**22. REMOVE FRONT PASSENGER AIRBAG ASSY**

- (a) Remove the 2 screws.

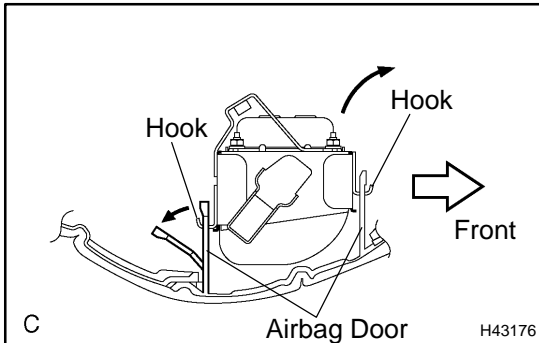

- (b) Release the rear side wall of the airbag door from the hook by slightly deflecting it and roll the front passenger airbag assy forward.
- (c) Release the front side wall of the airbag door from the other hook and remove the front passenger airbag assy.

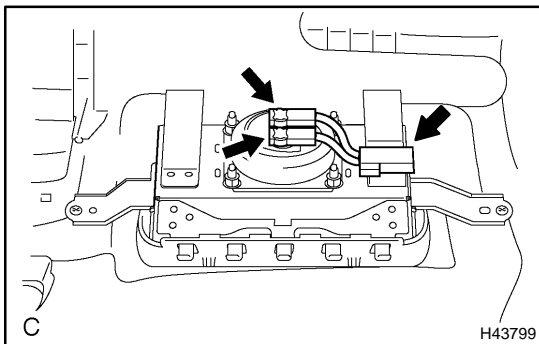
23. INSTALL FRONT PASSENGER AIRBAG ASSY**24. INSPECT FRONT PASSENGER AIRBAG ASSY (See page 60-17)****25. CONNECT INSTRUMENT PANEL WIRE NO.2**

- (a) Connect the connectors to the front passenger airbag assy.

NOTICE:

When handling the airbag connector, take care not to damage the airbag wire harness.

- (b) Install the clip.

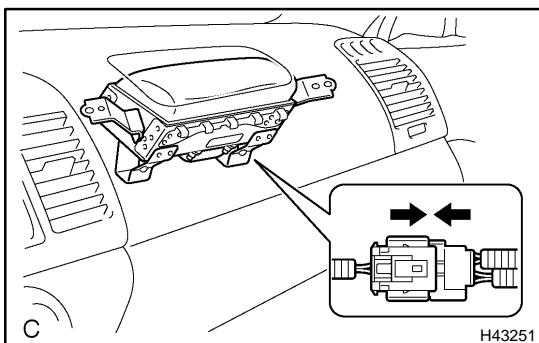26. INSTALL INSTRUMENT PANEL SAFETY PAD SUB-ASSY (See page 71-16)**27. CONNECT FRONT PASSENGER AIRBAG ASSY CONNECTOR**

- (a) Connect the connector.

NOTICE:

When handling the airbag connector, take care not to damage the airbag wire harness.

- 28. INSTALL SPIRAL CABLE SUB-ASSY (See page 60-34)
- 29. ADJUST SPIRAL CABLE SUB-ASSY (See page 60-34)
- 30. INSTALL STEERING WHEEL ASSY (See page 50-9)
- 31. INSPECT STEERING WHEEL CENTER POINT
- 32. INSTALL HORN BUTTON ASSY (See page 60-25)
- 33. INSPECT HORN BUTTON ASSY (See page 60-25)
- 34. INSPECT SRS WARNING LIGHT (See page 05-1456)