

DTC	P1600/96	ECM BATT MALFUNCTION
-----	----------	----------------------

CIRCUIT DESCRIPTION

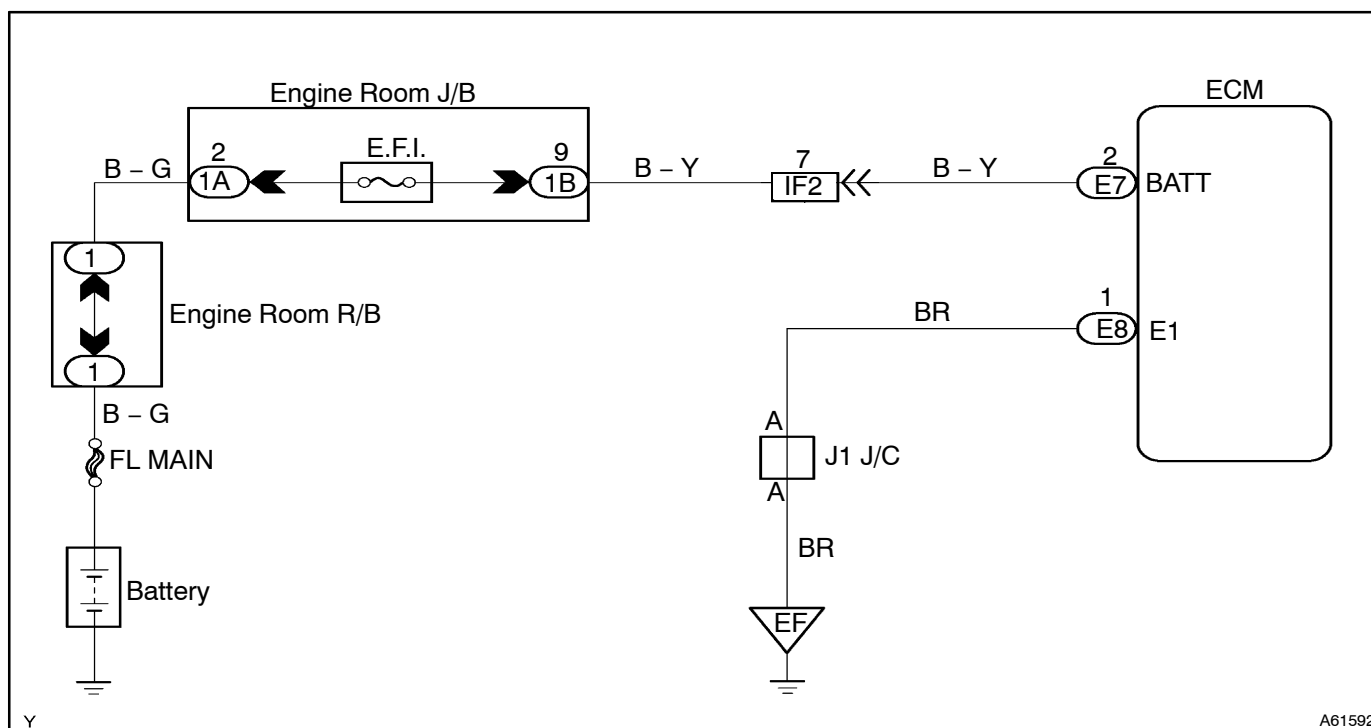
Battery positive voltage is supplied to terminal BATT of the ECM even when the ignition switch is OFF for use by the DTC memory and air-fuel ratio adaptive control value memory, etc.

DTC No.	DTC Detecting Condition	Trouble Area
P1600/96	Open in back up power source circuit	<ul style="list-style-type: none"> • Open in back up power source circuit • ECM

HINT:

If DTC P1600 appear, the ECM does not store another DTC.

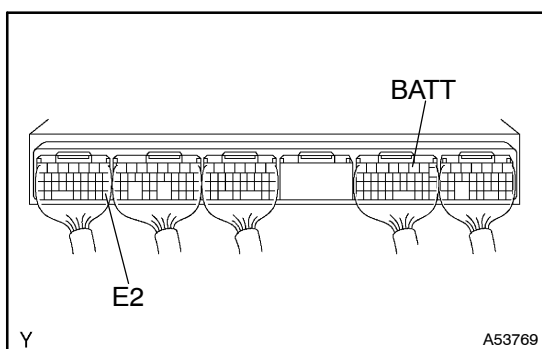
WIRING DIAGRAM



INSPECTION PROCEDURE

HINT:

Read freeze frame data using hand-held tester. Because freeze frame records the engine conditions when the malfunction is detected. When troubleshooting, it is useful for determining whether the vehicle was running or stopped, the engine was warmed up or not, the air-fuel ratio was lean or rich, etc. at the time of the malfunction.

1 INSPECT ECM

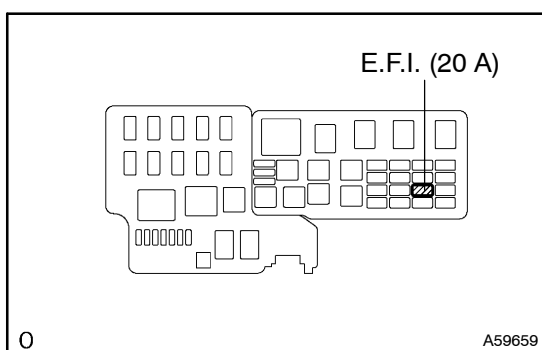
- (a) Measure the voltage between terminal BATT and E2 of the ECM connector.

Voltage: 9 - 14 V

OK

CHECK AND REPLACE ECM

NG

2 CHECK FUSE(E.F.I.)

- (a) Check the continuity of the E.F.I. fuse.

Result: Continuity

NG

CHECK FOR SHORT IN ALL HARNESS AND COMPONENTS CONNECTED EFI FUSE

OK

REPAIR OR REPLACE HARNESS AND CONNECTOR