


## Position of Parts in Engine Compartment

[RHD : 2AZ-FE, 1AZ-FE]

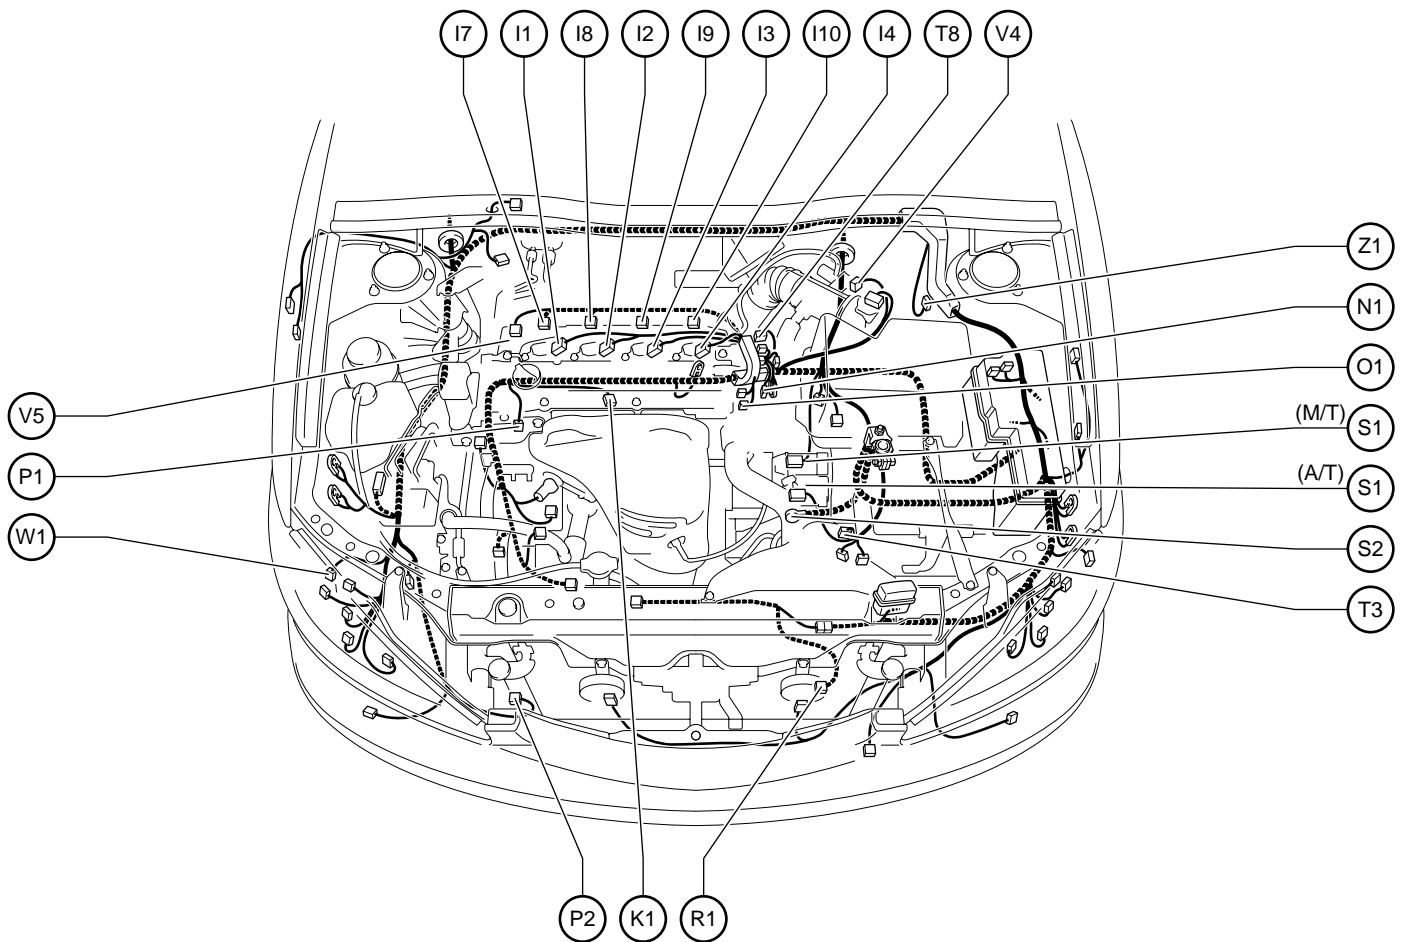

I 1 Ignition Coil and Igniter No.1  
 I 2 Ignition Coil and Igniter No.2  
 I 3 Ignition Coil and Igniter No.3  
 I 4 Ignition Coil and Igniter No.4  
 I 7 Injector No.1  
 I 8 Injector No.2  
 I 9 Injector No.3  
 I 10 Injector No.4

K 1 Knock Sensor (Bank 1)

N 1 Noise Filter (Ignition)

O 1 Oil Pressure Sensor

P 1 Power Steering Oil Pressure SW

P 2 Pressure SW

R 1 Radiator Fan Motor

S 1 Starter

S 2 Starter

T 3 Turbine Speed Sensor

T 8 Throttle Control Motor  
 Throttle Position Sensor

V 4 VSV (EVAP)

V 5 VVT Solenoid

W 1 Washer Motor

Z 1 Option Connector (Engine Hood Courtesy SW)