


INSPECTION

1. LIGHT CONTROL RHEOSTAT

- (a) Inspect continuity.
 - (1) Check the continuity between the light control rheostat connector terminals when operating the rheostat volume knob.

Standard:

Switch	Tester connection (Symbol)	Condition
Turn the knob to maximum	1 (TC) – 4 (T)	Below 1 Ω
Conditions other than the above	1 (TC) – 4 (T)	10 k Ω or higher

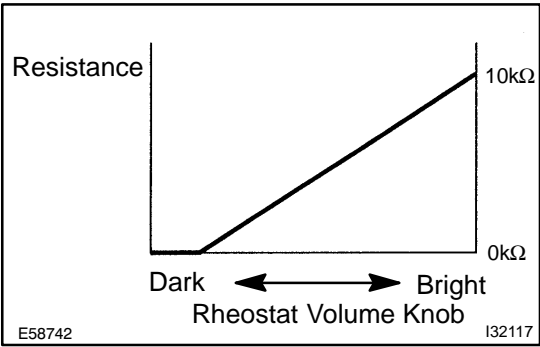

- (b) Check the resistance between terminal 3 (RV) and terminal 4 (T) when operating the light control rheostat volume knob. Also, check that the resistance changes continuously.

Standard:

Turn the knob to maximum: Approx. 10 k Ω

Turn the knob to minimum: Approx. 0 k Ω