


## TC TERMINAL CIRCUIT

### CIRCUIT DESCRIPTION


Connecting terminals Tc and CG of the DLC3 causes the ECU to display the DTC by flashing the ABS warning light.

### WIRING DIAGRAM

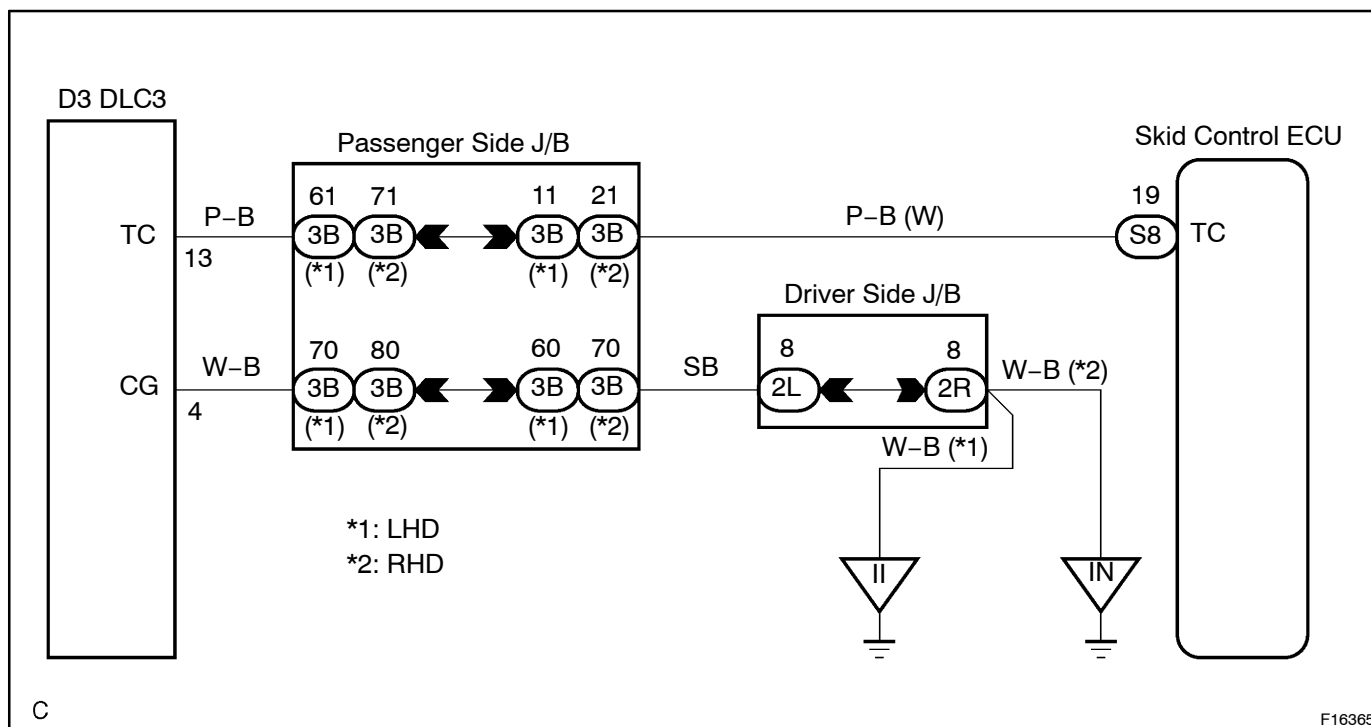

### INSPECTION PROCEDURE

#### 1 INSPECT DLC3

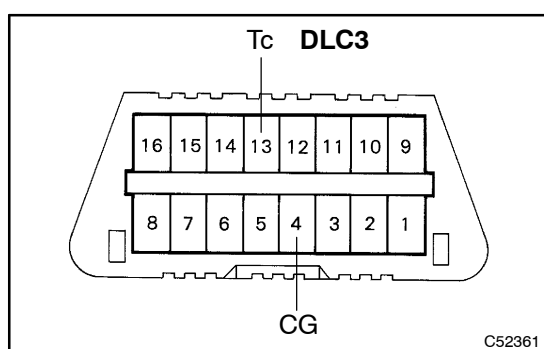

- Turn the ignition switch ON.
- Measure voltage between terminals Tc and CG of DLC3.  
**OK: 10 - 14 V**

OK

Go to step 3

NG

2 **CHECK HARNESS AND CONNECTOR (DLC3 - SKID CONTROL ECU ASSY AND DLC3 - BODY GROUND) (See page 01-31)**

NG


REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

**CHECK AND REPLACE ABS & TRACTION ACTUATOR ASSY**

3 **CHECK ABS WARNING LIGHT AND VSC WARNING LIGHT**

SST 09843-18040

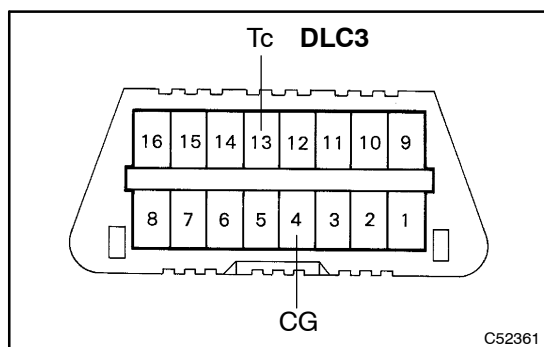

- (a) Using SST, connect the terminals Tc and CG of the DLC3.
- (b) Check the ABS and VSC warning right.

**OK: Warning light blinking**

OK

END

NG

**CHECK AND REPLACE SKID CONTROL ECU ASSY**