



SEAT BELT WARNING LAMP FOR DRIVER'S SEAT DOES NOT OPERATE

WIRING DIAGRAM

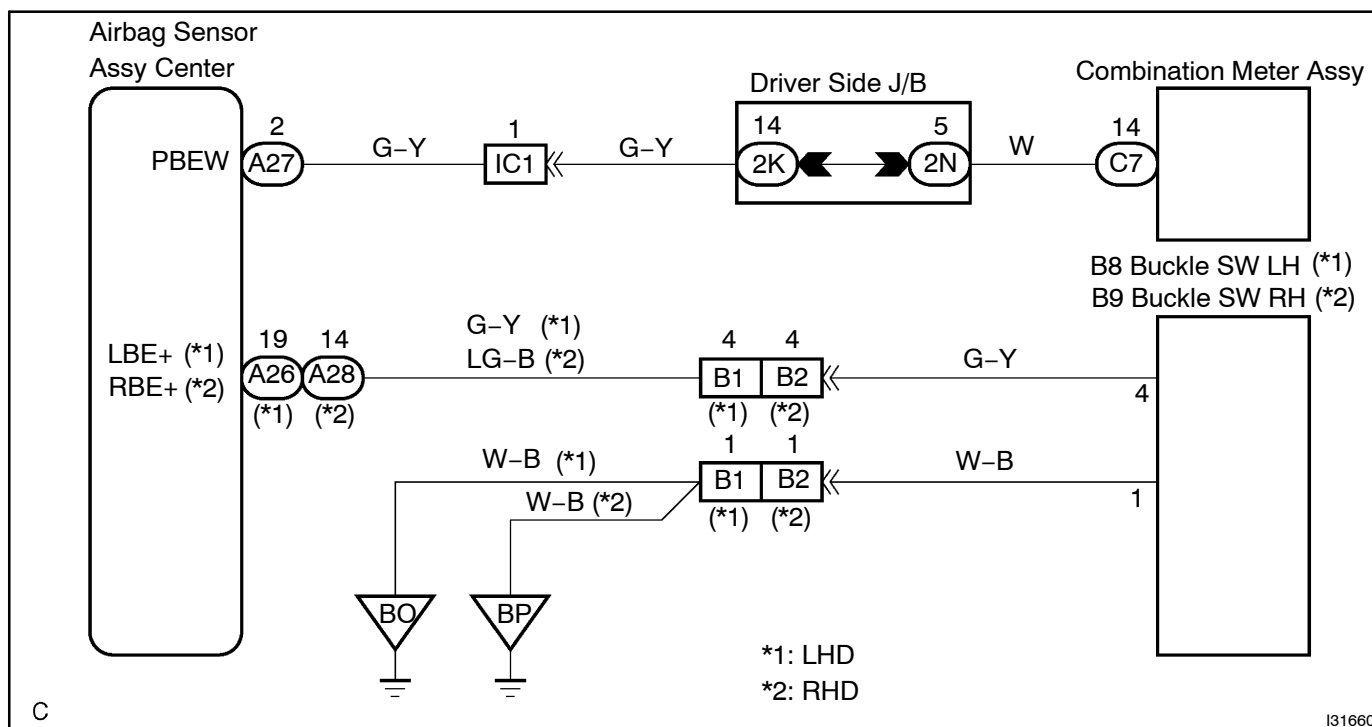

INSPECTION PROCEDURE

1 CHECK COMBINATION METER ASSY

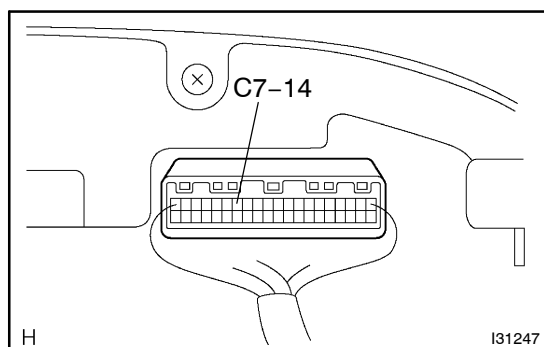

- (a) Check driver seat belt warning operation.
- (1) Remove the combination meter assy with connectors still connected.
 - (2) Ground the terminal C7-14 of combination meter assy connector.
 - (3) Check that the driver seat belt warning light lights up.

OK: Warning light lights up.

A	OK (LHD)
B	OK (RHD)
C	NG

B Go to step 6

C CHECK AND REPLACE COMBINATION METER ASSY

A


2 CHECK HARNESS AND CONNECTOR(BETWEEN COMBINATION METER ASSY AND FRONT SEAT INNER BELT ASSY LH)

NG

REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

3 INSPECT FRONT SEAT INNER BELT ASSY LH

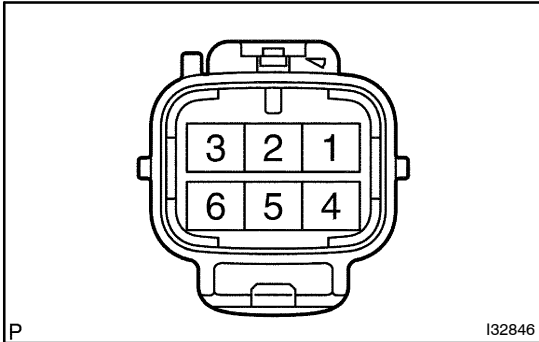

(a) Check continuity.

- (1) Check the continuity in between terminals 1 and 4 of front seat inner belt assy LH.

OK:

Condition	Continuity
Seat belt is fastened	Continuity
Seat belt is unfastened	No continuity

NG

REPLACE FRONT SEAT INNER BELT ASSY LH

OK

4 CHECK HARNESS AND CONNECTOR(BETWEEN AIRBAG SENSOR ASSY CENTER AND FRONT SEAT INNER BELT ASSY LH)

NG

REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

5 CHECK HARNESS AND CONNECTOR(BETWEEN FRONT SEAT INNER BELT ASSY LH AND BODY GROUND)

NG

REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

CHECK AND REPLACE AIR BAG SENSOR ASSY CENTER

6 CHECK HARNESS AND CONNECTOR(BETWEEN COMBINATION METER ASSY AND FRONT SEAT INNER BELT ASSY RH)

NG

REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

7 INSPECT FRONT SEAT INNER BELT ASSY RH



(a) Check continuity.

- (1) Check the continuity in between terminals 1 and 4 of front seat inner belt assy RH.

OK:

Condition	Continuity
Seat belt is fastened	Continuity
Seat belt is unfastened	No continuity

NG

REPLACE FRONT SEAT INNER BELT ASSY RH

OK

8 CHECK HARNESS AND CONNECTOR(BETWEEN AIRBAG SENSOR ASSY CENTER AND FRONT SEAT INNER BELT ASSY RH)

NG

REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

9 CHECK HARNESS AND CONNECTOR(BETWEEN FRONT SEAT INNER BELT ASSY RH AND BODY GROUND)

NG

REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

CHECK AND REPLACE AIR BAG SENSOR ASSY CENTER