

TOUCH PANEL SWITCH DOES NOT FUNCTION

INSPECTION PROCEDURE

1 CHECK TOUCH PANEL

- (a) Check for dirt on the display surface.  
Standard: The display surface is clean.


NG

REMOVE ANY DIRT FOUND AND RECHECK TOUCH PANEL

OK

2 DISPLAY CHECK MODE(TOUCH SWITCH CHECK)

- (a) Enter the "Display Check" mode (Touch Switch Check) (see page 05-1922).
- (b) Touch the display in the area where the abnormal switch occurs.  
Standard: A "+" mark appears at the touched position.

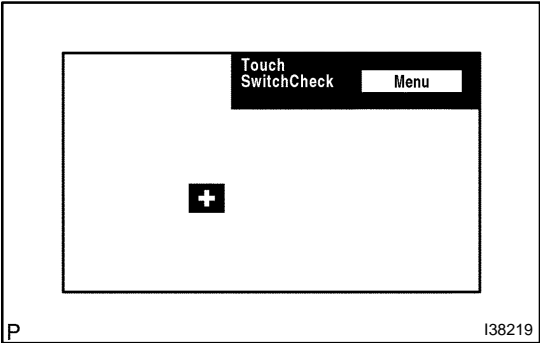

OK

REPLACE RADIO AND NAVIGATION ASSY (SEE PAGE 67-5)

NG

PROCEED TO NEXT CIRCUIT INSPECTION SHOWN IN PROBLEM SYMPTOMS TABLE (SEE PAGE 05-1914)