



# SEAT BELT WARNING LAMP FOR FRONT PASSENGER'S SEAT DOES NOT FLASH

## WIRING DIAGRAM

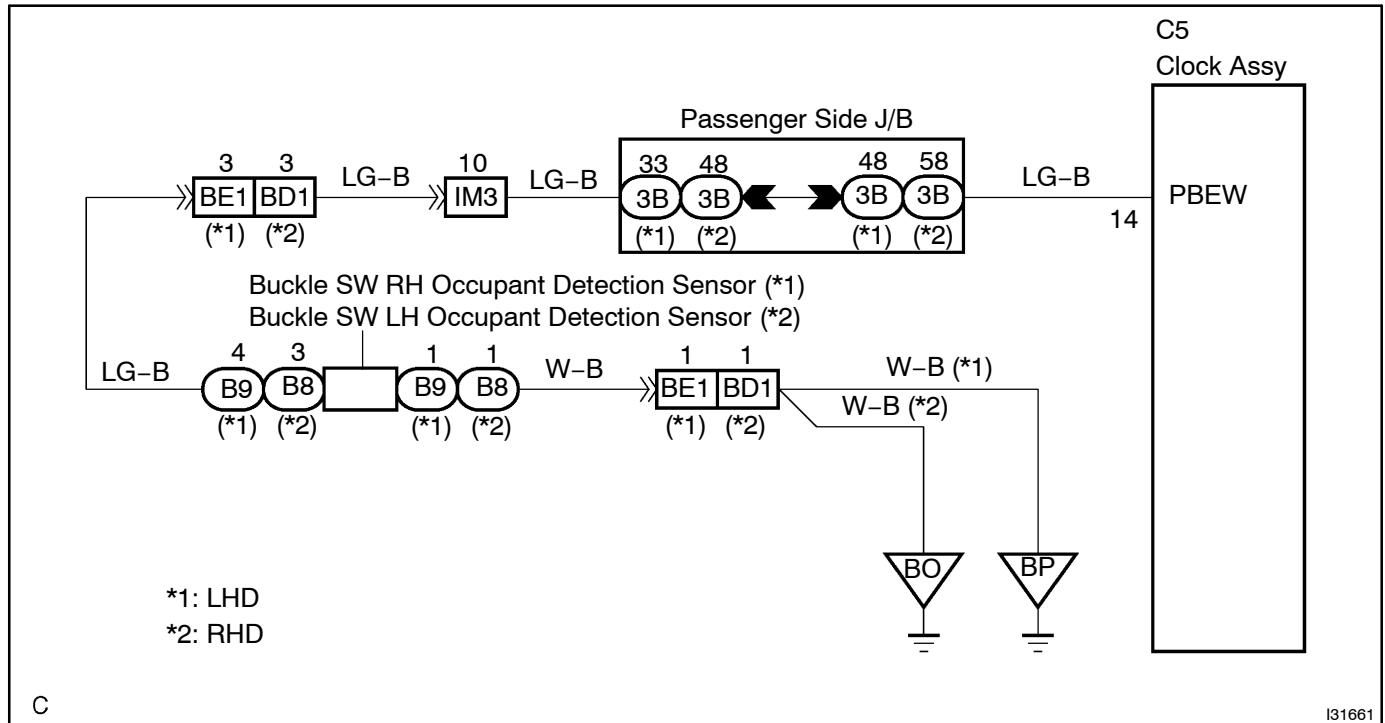

## INSPECTION PROCEDURE

## 1 CHECK PASSENGER SEAT BELT WARNING LIGHT

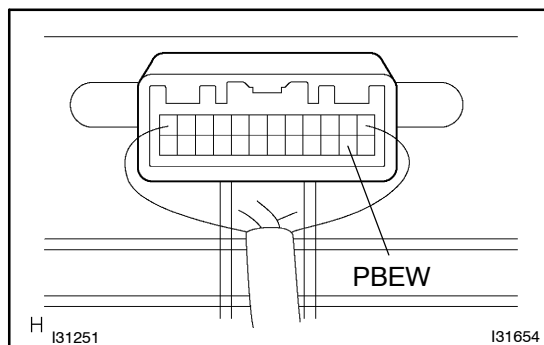

- (a) Check passenger seat belt warning operation.
- (1) Remove the clock assy with connector still connected.
  - (2) Ground the terminal 14 (PBEW) of clock assy connector.
  - (3) Check that the passenger seat belt warning light lights up.

**OK: Warning light lights up.**

## Result:


A	OK (LHD)
B	OK (RHD)
C	NG

**B** Go to step 3

**C** CHECK AND REPLACE CLOCK ASSY

**A**

## 2 INSPECT FRONT SEAT INNER BELT ASSY RH

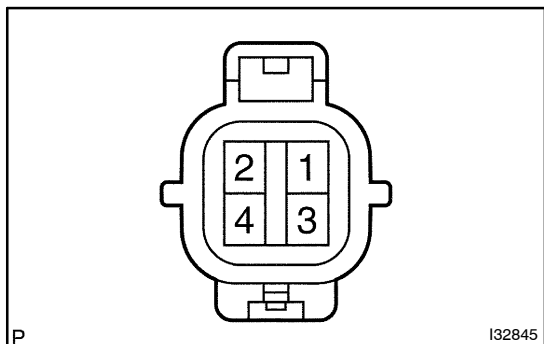

- (a) Check continuity.
- (1) Short the terminals 2 and 3 of the front seat inner belt assy RH connector.
  - (2) Check the continuity in between terminals 1 and 4 of front seat inner belt assy RH.

**OK:**

Condition	Continuity
Seat belt is fastened	Continuity
Seat belt is unfastened	No continuity


**NG** REPLACE FRONT SEAT INNER BELT ASSY RH

**OK**

**REPAIR OR REPLACE HARNESS OR CONNECTOR**

3

INSPECT FRONT SEAT INNER BELT ASSY LH

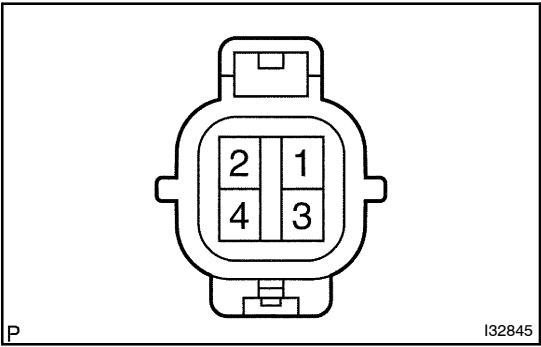

- (a) Check continuity.
- (1) Short the terminals 2 and 4 of the front seat inner belt assy LH connector.
  - (2) Check the continuity in between terminals 1 and 3 of front seat inner belt assy LH.

OK:

Condition	Continuity
Seat belt is fastened	Continuity
Seat belt is unfastened	No continuity

NG

REPLACE FRONT SEAT INNER BELT ASSY LH

OK

REPAIR OR REPLACE HARNESS OR CONNECTOR