


WATER PUMP ASSY (1AZ-FE/2AZ-FE)

INSPECTION

1609C-01

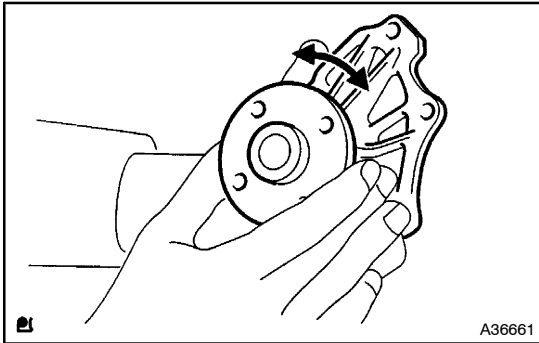

1. INSPECT WATER PUMP ASSY

- (a) Visually check the drain hole coolant leakage.
- (b) Turn the pulley, and check that the water pump bearing moves smoothly and quietly.