


OUTER REAR VIEW MIRROR SUB-ASSY RH REPLACEMENT

700BW-01

HINT:


In the LH side, work in the same procedure as in the RH side.

1. REMOVE POWER WINDOW REGULATOR MASTER SWITCH ASSY (See page 75-8)
2. REMOVE FRONT DOOR LOWER FRAME BRACKET GARNISH RH (See page 75-8)
3. REMOVE FRONT DOOR INSIDE HANDLE BEZEL PLUG RH (See page 75-8)
4. REMOVE FRONT DOOR TRIM BOARD SUB-ASSY RH (See page 75-8)

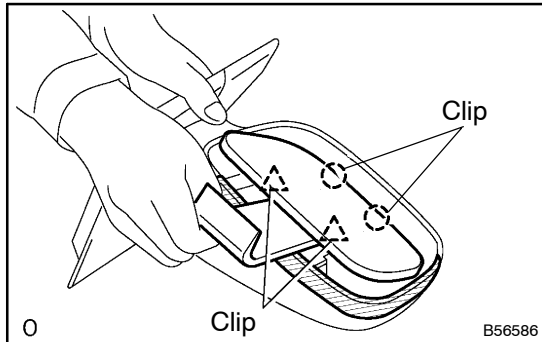


5. REMOVE OUTER REAR VIEW MIRROR SUB-ASSY RH (W/O OUTER MIRROR HEATER)

- (a) Tape the outer mirror body with protection tape.
- (b) Using a roof-moulding remover, disengage the clips placed in the lower part of mirror.
- (c) Pull out the outer rear view mirror.

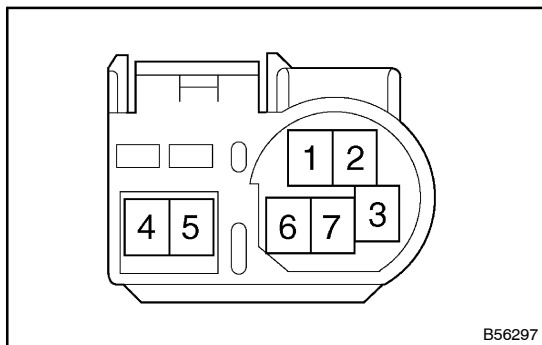

6. REMOVE OUTER REAR VIEW MIRROR SUB-ASSY RH (W/ OUTER MIRROR HEATER)

- (a) Disconnect the wire harness of terminals 4 and 5 from the connector.
 - (1) Using a screwdriver to hold the connector lance up, pull out the wire harness terminal.
- (b) Tape the outer mirror body with protection tape.
- (c) Using a roof-moulding remover, disengage the clips placed in the lower part of mirror.
- (d) Pull out the outer rear view mirror.

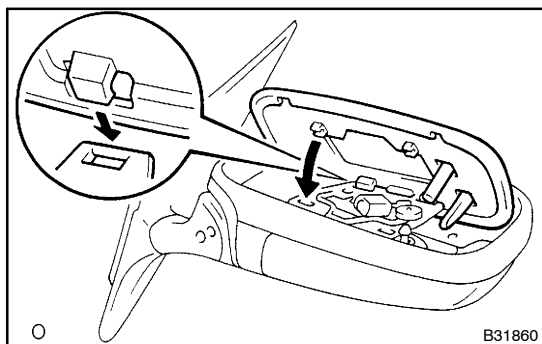

7. INSTALL OUTER REAR VIEW MIRROR SUB-ASSY RH (W/O OUTER MIRROR HEATER)

- (a) Insert the claws placed in the upper part of backside of the mirror into the actuator hole.
- (b) Set the mirror in the actuator.
- (c) Insert the lower portion of the mirror to engage the 2 clips securely.

8. INSTALL OUTER REAR VIEW MIRROR SUB-ASSY RH (W/ OUTER MIRROR HEATER)

- (a) Insert the claws placed in the upper part of backside of the mirror into the actuator hole.
- (b) Set the mirror in the actuator.
- (c) Insert the lower portion of mirror to engage the 2 clips securely.
- (d) Connect the wire harness terminal to the connector.