



ON-VEHICLE INSPECTION

1. OPERATIONAL INSPECTION ELECTRICALLY-RETRACT DOOR MIRROR


- (a) Turn the ignition switch to ACC position.
- (b) At each position of the outer mirror body, check the operation when operating the retract switch of the outer mirror.

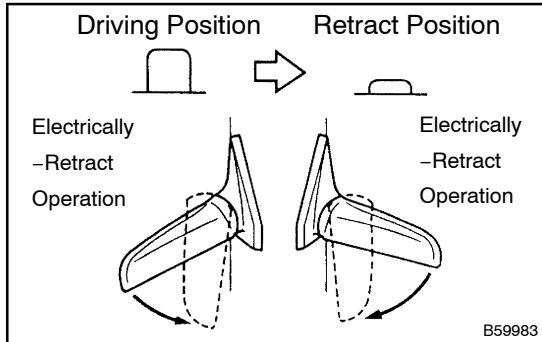


- (1) When the retract switch is in the driving position and the bodies of the right and left are also in the driving position, check that pressing the retract switch will operate the bodies of the right and left to move to the retract position from the driving position and stop at the retract position.

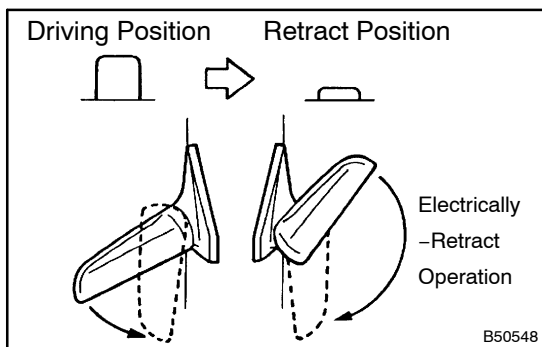


- (2) When the retract switch is in the driving position and the bodies of the right and left are also in the driving position, if one of the bodies is pressed forward with a hand, check that this condition is held and the body will move from the driving position and from the forward position to the retract position and stop then, if pressing the retract switch to the retract position.

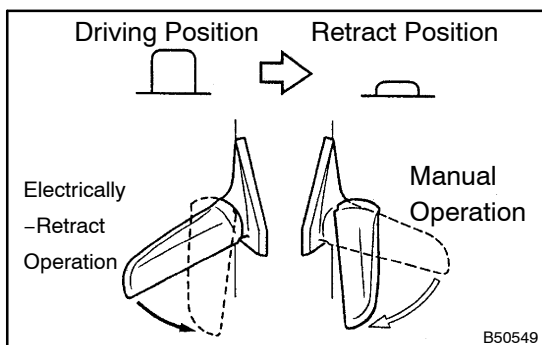

- (3) When the retract switch is in the driving position and the bodies of the right and left are in the driving position, if pressing one of the bodies to the retract position with a hand, check that this condition is held and only the body in the driving position will move to the retract position and stop there, if pressing the retract switch to the retract position.

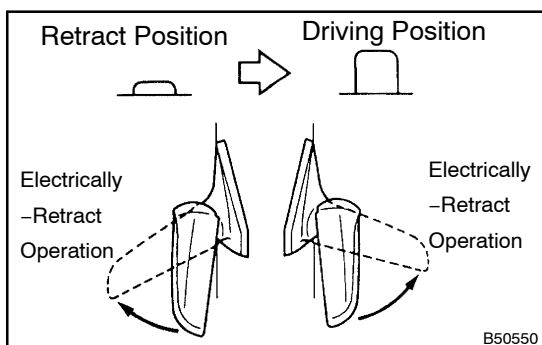

- (4) When the retract switch is in the retract position and the bodies of the right and left are in the retract position, if pressing the retract switch to the driving position, check that both right and left bodies will move from the retract position to the driving position and stop there.

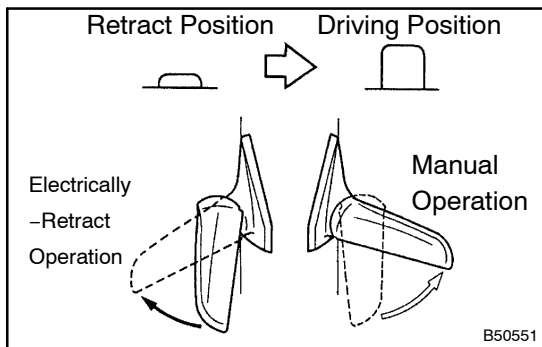

- (5) When the retract switch is in the retract position and the bodies of the right and left are in the retract position, if pressing one of the bodies to the driving position with a hand, check that this condition is held and only the body in the retract position will move to the driving position and stop there, if pressing the retract switch to the driving position.

- (c) During operation of the outer mirror body, check the operation when the ignition switch is turned OFF.
- (1) When turning the ignition switch OFF during the operation of the mirror body, check that the mirror body operation will stop.
 - (2) Check that the mirror body continues to operate when turning the ignition to ACC again.

HINT:

At the time of the ignition switch OFF, if switching the retract switch and turning the ignition to ACC again, the mirror body is operated to the opposite direction.

- (d) During the operation of the outer mirror body, check the operation when it is restrained by an obstacle.
- (1) While the mirror body is moving to the retract or driving position, check that the retract operation will stop when restraining the mirror body movement with a hand.
 - (2) When switching the retract switch at a stop, check that it will start retract operation (opposite direction from stopping).