


CAMSHAFT POSITION SENSOR (2AZ-FE)(From July, 2003) REPLACEMENT

1809S-03

HINT:

A bolt without torque specification is a standard bolt (see page 03-2).

1. REMOVE AIR CLEANER ASSY (See page 14-29)

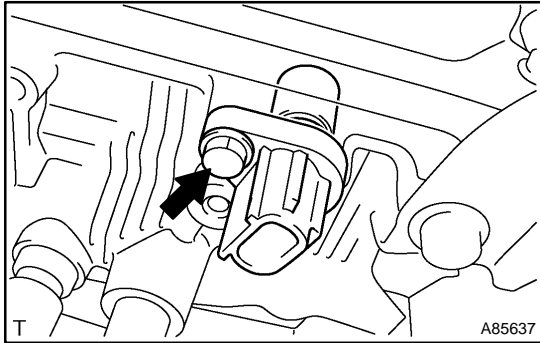

2. REMOVE CAMSHAFT POSITION SENSOR

- (a) Disconnect the sensor connector.
- (b) Remove the bolt and sensor.

3. INSTALL CAMSHAFT POSITION SENSOR

- (a) Apply a light coat of engine oil to the O-ring on the sensor.
- (b) Install the sensor with the bolt.

Torque: 9.0 N·m (92 kgf·cm, 80in.·lbf)

4. INSTALL AIR CLEANER ASSY (See page 14-29)

5. CHECK CONNECTION OF VACUUM HOSE