


CURRENT POSITION DISPLAY DOES NOT APPEAR

INSPECTION PROCEDURE

1 CHECK RADIO AND NAVIGATION ASSY

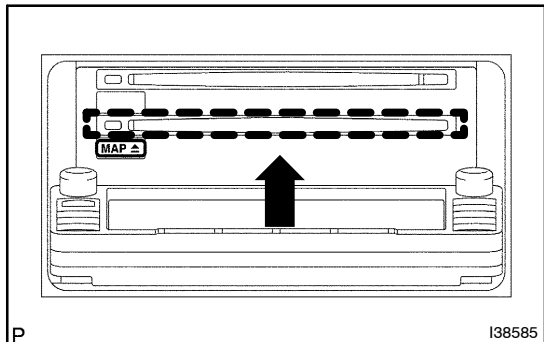


- (a) Check if a map disc is inserted in the map disc slot.
Standard: A map disc is inserted.

NG

INSERT THE MAP DISC IN THE "MAP" SIDE SLOT

OK

2 CHECK THE MAP DISC

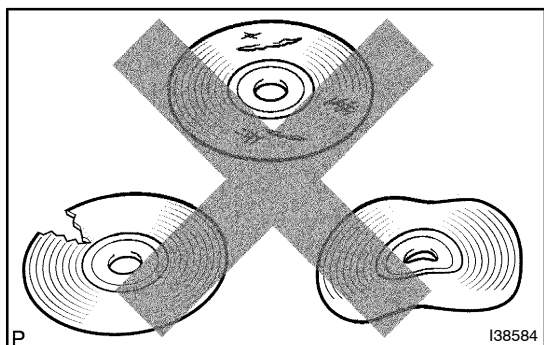

- (a) Check that the map disc is not deformed or cracked.
Standard: No deformations or cracks appear on the map disc.

NG

REPLACE THE MAP DISC

OK

PROCEED TO NEXT CIRCUIT INSPECTION SHOWN IN PROBLEM SYMPTOMS TABLE
(SEE PAGE 05-46)