


2 CHECK HARNESS AND CONNECTOR(BETWEEN COMBINATION METER ASSY AND FRONT SEAT INNER BELT ASSY (DRIVER SIDE))

NG

REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

3 INSPECT FRONT SEAT INNER BELT ASSY (DRIVER SIDE)

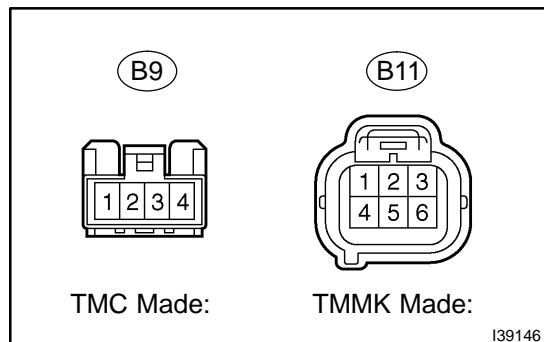

- (a) Check the continuity in between terminals 2 (3) and 3 (6) of the front seat inner belt assy (driver side).

Standard:

Tester connection	Condition	Specified condition
B9-2 – B9-3	Seat belt is fastened	Below 1 Ω
B11-3 – B11 – 6	Seat belt is not Ffastened	10 k Ω or higher

(): TMMK Made

NG

REPLACE FRONT SEAT INNER BELT ASSY (DRIVER SIDE)

OK

4 CHECK HARNESS AND CONNECTOR(BETWEEN FRONT SEAT INNER BELT ASSY (DRIVER SIDE) AND BODY GROUND)

NG

REPLACE COMBINATION METER ASSY (SEE PAGE 71-29)

OK

REPAIR OR REPLACE HARNESS OR CONNECTOR