

## SOUND QUALITY IS BAD ONLY WHEN PLAYING TAPE

### INSPECTION PROCEDURE

#### 1 REPLACE CASSETTE TAPE WITH ANOTHER AND RECHECK

- (a) Replace the cassette tape with another one and recheck.
- (1) Replace the cassette tape with another normal one to see if the same trouble occurs again.
- OK: Malfunction disappears.**


**OK****CASSETTE TAPE IS FAULTY****NG**

#### 2 CHECK FOR ANY FOREIGN OBJECT

- (a) Check for foreign objects.
- (1) Check that no foreign objects or defects are detected in the cassette tape player.
- OK: No foreign objects or defects are detected.**

**NG****REMOVE FOREIGN OBJECT****OK**

#### 3 CLEAN HEAD AND CHECK OPERATION

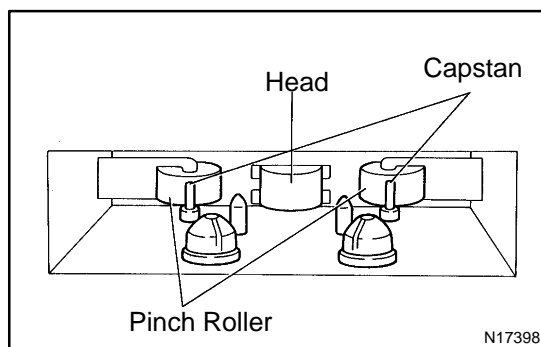

- (a) Head cleaning
- (1) Raise the cassette door with your finger. Using a pencil or similar object, push in the guide.
- (2) Using a cleaning pen or cotton applicator soaked in cleaner, clean the head surface, pinch rollers and capstans.
- (3) Check if the same trouble occurs again.

**OK: Malfunction disappears.**

**NG****REPLACE RADIO RECEIVER ASSY  
(SEE PAGE 67-4)****OK****HEAD IS DIRTY**