

REPLACEMENT

HINT:

COMPONENTS: [See page 60-38](#)

1. ☐ PRECAUTION [\(See page 60-1\)](#)
2. ☐ DISCONNECT BATTERY NEGATIVE TERMINAL [\(See page 60-1\)](#)
3. REMOVE FRONT DOOR SCUFF PLATE RH
[\(See page 71-10\)](#)
4. REMOVE FRONT DOOR SCUFF PLATE LH
[\(See page 71-10\)](#)
5. REMOVE REAR DOOR SCUFF PLATE RH
[\(See page 71-10\)](#)
6. REMOVE REAR DOOR SCUFF PLATE LH
[\(See page 72-21\)](#)
7. REMOVE FRONT SEAT ASSEMBLY RH
8. ☐ REMOVE FRONT SEAT ASSEMBLY LH [\(See page 72-7\)](#)
9. ☐ REMOVE REAR SEAT CUSHION ASSY [\(See page 72-21\)](#)
10. ☐ REMOVE REAR SEAT BACK ASSY [\(See page 72-21\)](#)
11. REMOVE CONSOLE PANEL UPPER REAR
[\(See page 71-10\)](#)
12. ☐ REMOVE RR CONSOLE BOX [\(See page 71-10\)](#)
13. REMOVE CONSOLE PANEL UPPER
[\(See page 71-10\)](#)
14. ☐ REMOVE CONSOLE BOX FRONT [\(See page 72-7\)](#)
15. REMOVE AIR DUCT REAR NO.1
[\(See page 71-10\)](#)
16. REMOVE AIR DUCT REAR NO.2
[\(See page 71-10\)](#)
17. REMOVE CONSOLE BOX DUCT NO.1
[\(See page 71-10\)](#)
18. REMOVE FLOOR SHIFT ASSY
19. REMOVE FRONT DOOR OPENING TRIM WEATHERSTRIP RH
[\(See page 61-6\)](#)
20. REMOVE FRONT DOOR OPENING TRIM WEATHERSTRIP LH
[\(See page 61-6\)](#)
21. REMOVE REAR DOOR OPENING TRIM WEATHERSTRIP RH
[\(See page 61-6\)](#)
22. REMOVE REAR DOOR OPENING TRIM WEATHERSTRIP LH
[\(See page 61-6\)](#)
23. REMOVE CENTER PILLAR GARNISH LOWER RH
[\(See page 61-6\)](#)
24. REMOVE CENTER PILLAR GARNISH LOWER LH
[\(See page 61-6\)](#)
25. REMOVE CENTER PILLAR GARNISH UPPER RH
[\(See page 76-21\)](#)
26. REMOVE CENTER PILLAR GARNISH UPPER LH
[\(See page 76-21\)](#)
27. REMOVE ROOF SIDE GARNISH INNER RH
[\(See page 76-21\)](#)

- 28. REMOVE ROOF SIDE GARNISH INNER LH
(See page 76-21)
- 29. REMOVE FRONT PILLAR GARNISH RH
(See page 76-21)
- 30. REMOVE FRONT PILLAR GARNISH LH
(See page 76-21)
- 31. REMOVE ASSIST GRIP SUB-ASSY
(See page 76-21)
- 32. REMOVE RH VISOR ASSY
(See page 76-21)
- 33. REMOVE LH VISOR ASSY
(See page 76-21)
- 34. REMOVE INNER REAR VIEW MIRROR ASSY
(See page 76-21)
- 35. REMOVE ROOF CONSOLE BOX ASSY
(See page 76-21)
- 36. REMOVE ROOM LAMP ASSY NO.1
(See page 76-21)
- 37. REMOVE VISOR HOLDER
(See page 76-21)
- 38. REMOVE ROOF HEADLINING ASSY
(See page 76-21)

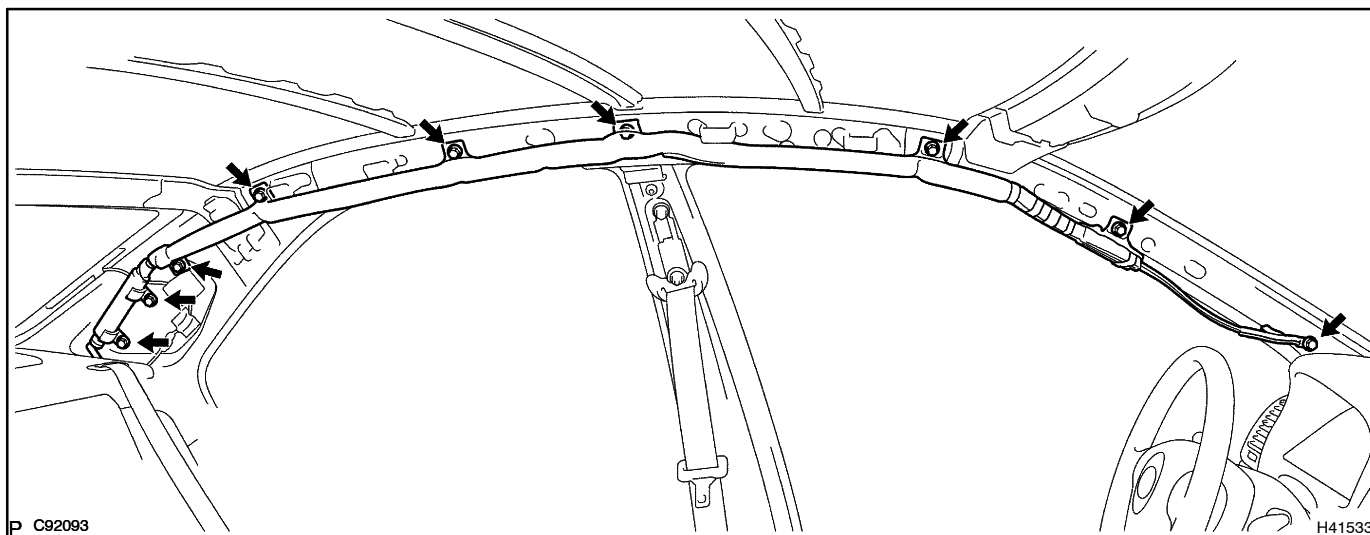
39. REMOVE CURTAIN SHIELD AIR BAG ASSY LH

(a) Disconnect the connector of the curtain shield air bag assy LH.

(b) Remove the 9 bolts and curtain shield air bag assy LH.

HINT:

Remove the bolts from front side of the vehicle in order.

**40. INSTALL CURTAIN SHIELD AIR BAG ASSY LH**

(See page 60-9)

41. INSPECT CURTAIN SHIELD AIR BAG ASSY LH

(a) Install the curtain shield air bag assy LH with the 9 bolts.

Torque: 9.8 N·m (100 kgf·cm, 87 in.·lb)

HINT:

Install the bolts from rear side of the vehicle in order.

(b) Connect the curtain shield air bag assy LH connector.

42. INSTALL ROOF HEADLINING ASSY**43. INSTALL REAR SEAT BACK ASSY (See page 72-21)****44. INSTALL REAR SEAT CUSHION ASSY (See page 72-21)****45. INSTALL FRONT SEAT ASSEMBLY LH (See page 72-7)****46. INSTALL FRONT SEAT ASSEMBLY RH****47. INSPECT SRS WARNING LIGHT (See page 05-758)**