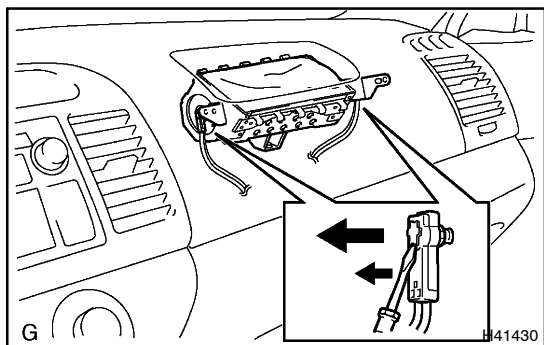


REPLACEMENT

HINT:

COMPONENTS: [See page 60-26](#)

1. ☐ PRECAUTION ([See page 60-1](#))
2. ☐ SEPARATE BATTERY NEGATIVE TERMINAL ([See page 60-1](#))
3. PLACE FRONT WHEELS FACING STRAIGHT AHEAD
4. REMOVE STEERING WHEEL COVER LOWER NO.2
5. REMOVE CONNECTOR COVER
6. REMOVE HORN BUTTON ASSY
([See page 60-15](#))
7. REMOVE STEERING WHEEL ASSY
([See page 50-6](#))
8. REMOVE STEERING COLUMN COVER
9. REMOVE HEADLAMP DIMMER SWITCH ASSY
([See page 50-6](#))
10. REMOVE WINDSHIELD WIPER SWITCH ASSY
([See page 50-6](#))
11. REMOVE COMBINATION METER ASSY
([See page 71-10](#))
12. REMOVE FRONT DOOR SCUFF PLATE LH
([See page 71-10](#))
13. REMOVE FRONT DOOR SCUFF PLATE RH
([See page 71-10](#))
14. REMOVE COWL SIDE TRIM SUB-ASSY LH
([See page 71-10](#))
15. REMOVE COWL SIDE TRIM SUB-ASSY RH
([See page 71-10](#))
16. REMOVE INSTRUMENT PANEL SUB-ASSY UPPER
([See page 71-10](#))
17. ☐ REMOVE AIR CONDITIONER CONTROL ASSEMBLY ([See page 71-10](#))
18. REMOVE INSTRUMENT CLUSTER FINISH PANEL SUB-ASSY CENTER
([See page 71-10](#))
19. REMOVE INSTRUMENT PANEL UNDER COVER SUB-ASSY NO.1
([See page 71-10](#))
20. REMOVE GLOVE COMPARTMENT DOOR PAD
([See page 71-10](#))
21. REMOVE INSTRUMENT PANEL SUB-ASSY LOWER
([See page 71-10](#))

**22. SEPARATE PASSENGER AIRBAG CONNECTOR**

- (a) Disconnect the instr/pnl/pass l/door airbag assy connectors.

23. REMOVE FLOOR SHIFT SHIFT LEVER KNOB SUB-ASSY (M/T TRANSAXLE)**24. REMOVE CONSOLE PANEL UPPER REAR**

(See page 71-10)

25. REMOVE CONSOLE BOX CARPET

(See page 71-10)

26. REMOVE RR CONSOLE BOX (See page 71-10)**27. REMOVE INSTRUMENT PANEL ASH RECEPTACLE ASSY**

(See page 71-10)

28. REMOVE CONSOLE PANEL UPPER

(See page 71-10)

29. REMOVE CONSOLE BOX FRONT

(See page 71-10)

30. REMOVE INSTRUMENT PANEL FINISH PANEL LOWER CENTER

(See page 71-10)

31. REMOVE FRONT PILLAR GARNISH LH (W/O CURTAIN SHIELD AIR BAG)

(See page 71-10)

32. REMOVE FRONT PILLAR GARNISH LH (W/ CURTAIN SHIELD AIR BAG)

(See page 71-10)

33. REMOVE FRONT PILLAR GARNISH RH (W/O CURTAIN SHIELD AIR BAG)

(See page 71-10)

34. REMOVE FRONT PILLAR GARNISH RH (W/ CURTAIN SHIELD AIR BAG)

(See page 71-10)

35. REMOVE INSTRUMENT PANEL SPEAKER PANEL SUB-ASSY NO.2

(See page 71-10)

36. REMOVE INSTRUMENT PANEL SPEAKER PANEL SUB-ASSY

(See page 71-10)

37. REMOVE FRONT NO.2 SPEAKER ASSY

(See page 71-10)

38. REMOVE INSTRUMENT PANEL SAFETY PAD CAP

(See page 71-10)

39. REMOVE INSTRUMENT PANEL SAFETY PAD SUB-ASSY

(See page 71-10)

40. REMOVE INSTRUMENT PANEL REGISTER ASSY NO.2

(See page 71-10)

41. REMOVE INSTRUMENT PANEL REGISTER ASSY NO.1

(See page 71-10)

42. REMOVE SWITCH HOLE BASE NO.1 (RHD STEERING POSITION TYPE)

(See page 71-10)

43. REMOVE GLOVE BOX LAMP ASSY

(See page 71-10)

44. REMOVE AUTOMATIC LIGHT CONTROL SENSOR (W/ CONLIGHT)

(See page 71-10)

45. REMOVE COOLER (SOLAR SENSOR) THERMISTOR (AUTO AIR CONDITIONER)

(See page 71-10)

46. REMOVE SIDE DEFROSTER NOZZLE DUCT NO.2

(See page 71-10)

47. REMOVE SIDE DEFROSTER NOZZLE DUCT NO.1

(See page 71-10)

48. REMOVE DEFROSTER NOZZLE ASSY

(See page 71-10)

49. REMOVE HEATER TO REGISTER DUCT NO.1

(See page 71-10)

50. REMOVE HEATER TO REGISTER DUCT NO.3


(See page 71-10)

51. REMOVE HEATER TO REGISTER DUCT NO.2


(See page 71-10)

52. REMOVE DEFROSTER NOZZLE GARNISH NO.1

(See page 71-10)

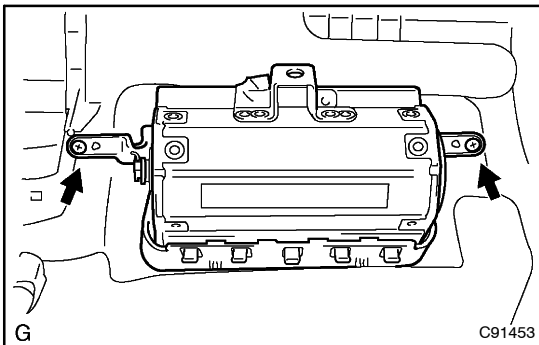**53. REMOVE INSTR PNL PASS L/DOOR AIR BAG ASSY**

(a) Remove the 2 screws.

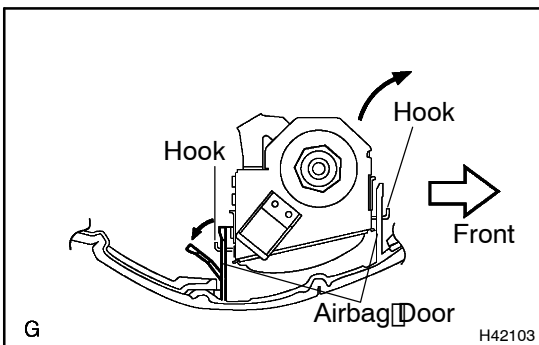

(b) Release the rear side wall of the air bag door from the hook by slightly deflecting it and roll the instr pnl pass L/door air bag assy forward.

(c) Release the front side wall of the air bag door from the other hook and remove the instr pnl pass L/door air bag assy.

54. INSPECT INSTR PNL PASS L/DOOR AIR BAG ASSY

(See page 60-9)

55. INSTALL INSTR PNL PASS L/DOOR AIR BAG ASSY**56. INSTALL FRONT PILLAR GARNISH LH (W/ CURTAIN SHIELD AIR BAG)**

(See page 71-10)

57. INSTALL FRONT PILLAR GARNISH RH (W/ CURTAIN SHIELD AIR BAG)

(See page 71-10)

58. PLACE FRONT WHEELS FACING STRAIGHT AHEAD

- 59. □ INSTALL SPIRAL CABLE SUB-ASSY
(See [page 60-24](#))
- 60. □ CENTER SPIRAL CABLE (See [page 60-24](#))
- 61. □ INSTALL STEERING WHEEL ASSY
(See [page 50-6](#))
- 62. □ INSTALL HORN BUTTON ASSY
(See [page 60-15](#))
- 63. INSPECT HORN BUTTON ASSY
(See [page 60-9](#))
- 64. □ INSPECT SRS WARNING LIGHT (See [page 05-758](#))