


REPLACEMENT

NOTICE:

Before changing the starter, check these items again:


- Connector connection
- Accessory installation

1. REMOVE BATTERY
2. REMOVE BATTERY TRAY

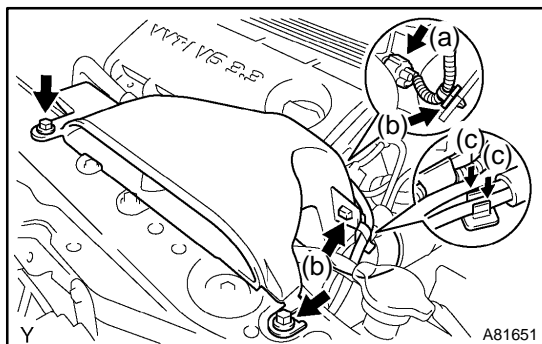


3. REMOVE AIR CLEANER INLET ASSY

- (a) Disconnect the VSV connector.
- (b) Remove the 2 wire harness clamps.
- (c) Remove the vacuum hoses from the hose clamp.
- (d) Remove the 2 bolts and air cleaner inlet.

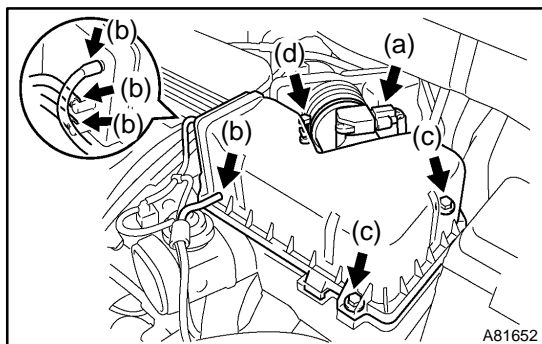


4. REMOVE AIR CLEANER ASSY

- (a) Disconnect the MAF meter connector.
- (b) Disconnect the 4 vacuum hoses.
- (c) Loosen the 2 air cleaner cap bolts.
- (d) Loosen the air cleaner hose clamp bolt and remove the air cleaner cap.
- (e) Remove the air cleaner filter element.

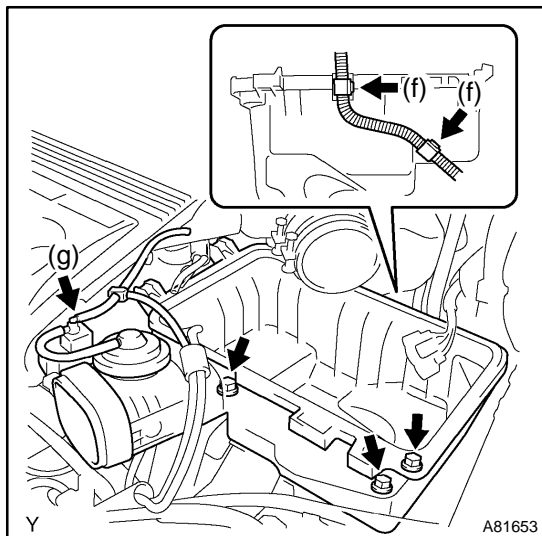


- (f) Remove the wire harness from the 2 wire harness clamps.
- (g) Disconnect the vacuum hose.
- (h) Remove the 3 bolts and air cleaner case.

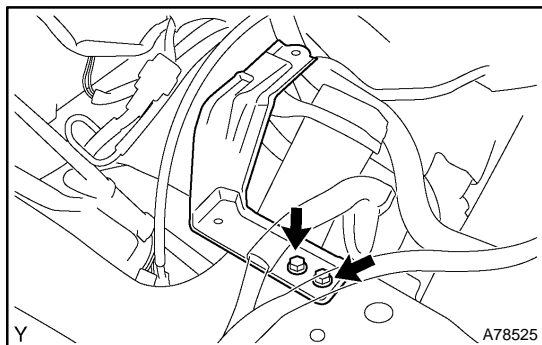


5. REMOVE AIR CLEANER BRACKET

- (a) Remove the 2 bolts and air cleaner bracket.

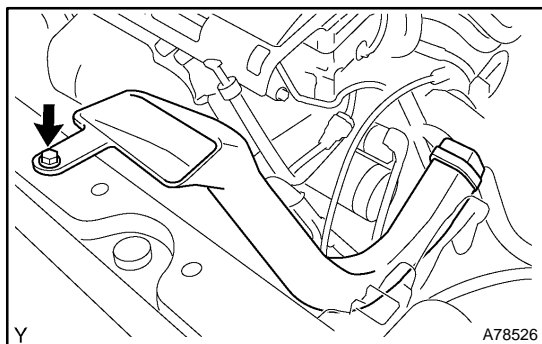


6. REMOVE AIR CLEANER INLET NO.1

- (a) Remove the bolt and cleaner inlet.

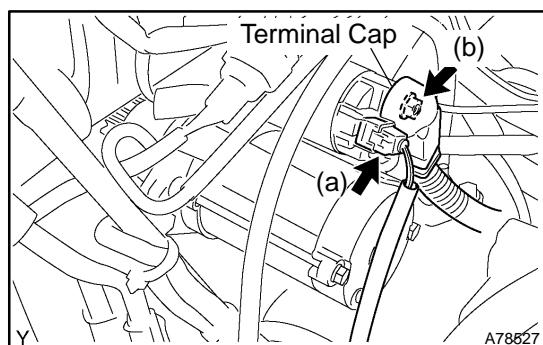

7. REMOVE STARTER ASSY

- (a) Disconnect the starter connector.
(b) Open the terminal cap, and remove the nut and disconnect the starter wire.

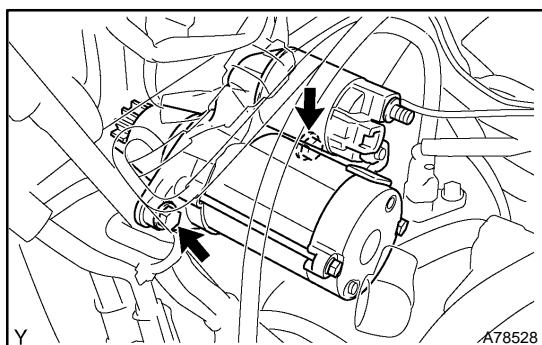

- (c) Remove the 2 bolts and starter.

8. INSTALL STARTER ASSY

- (a) Install the starter with the 2 bolts.
Torque: 37 N·m (380 kgf·cm, 26 ft·lbf) for bolt
(b) Connect the starter wire.
(c) Install the terminal nut and cover the nut with the cap.
Torque: 9.8 N·m (100 kgf·cm, 7 ft·lbf) for nut

9. INSTALL AIR CLEANER INLET NO.1


- (a) Install the cleaner inlet with the bolt.
Torque: 7.0 N·m (71 kgf·cm, 62 in·lbf)


10. INSTALL AIR CLEANER BRACKET

- (a) Install the air cleaner bracket with the 2 bolts. Tighten the 2 bolts little by little in the numerical order shown in the illustration.
Torque: 12 N·m (122 kgf·cm, 9 ft·lbf)

NOTICE:

Fully tightening each bolt one by one may damage the air cleaner bracket and bolts.

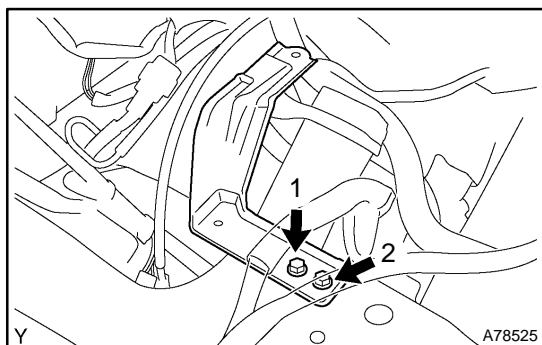

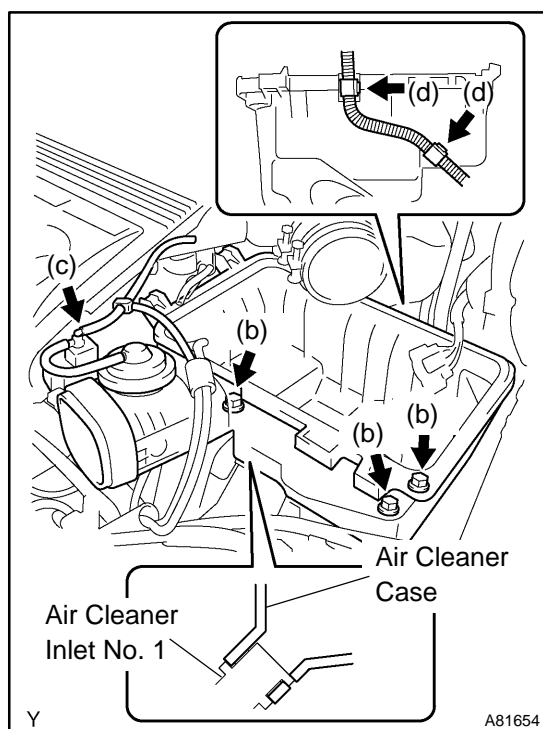**11. INSTALL AIR CLEANER ASSY**

- (a) Install the air cleaner case to the air cleaner inlet No. 1, as shown in the illustration.
- (b) Tighten the 3 bolts little by little in the numerical order shown in the illustration.

Torque: 5.0 N·m (51 kgf·cm, 44 in·lbf)

NOTICE:

Fully tightening each bolt one by one may damage the air cleaner case and bolts.

- (c) Connect the vacuum hose.
- (d) Install the 2 wire harness clamps.
- (e) Install the air cleaner filter element.
- (f) Connect the air cleaner hose No. 1 and tighten the air cleaner hose clamp bolt.
- (g) Tighten the 2 air cleaner cap bolts.
- Torque: 5.0 N·m (51 kgf·cm, 44 in·lbf)**
- (h) Connect the 4 vacuum hoses.
- (i) Connect the MAF meter connector.

12. INSTALL AIR CLEANER INLET ASSY

Torque: 7.0 N·m (71 kgf·cm, 62 in·lbf)

13. CHECK CONNECTION OF VACUUM HOSE**14. INSTALL BATTERY TRAY****15. INSTALL BATTERY**

- (a) Install the battery clamp with the bolt and nut.

Torque: 5.5 N·m (56 kgf·cm, 49 in·lbf)

- (b) Connect the wires to the battery terminals.

Torque: 3.5 N·m (36 kgf·cm, 31 in·lbf)