


RADIATOR ASSY (2AZ-FE)

Removal & Installation and Disassembly & Reassembly

1609G-01



1. DRAIN COOLANT (See page 16-18)
2. DISCONNECT RADIATOR HOSE INLET
3. DISCONNECT RADIATOR HOSE OUTLET
4. DISCONNECT OIL COOLER INLET HOSE (A/T TRANSAXLE)
5. DISCONNECT OIL COOLER OUTLET HOSE (A/T TRANSAXLE)

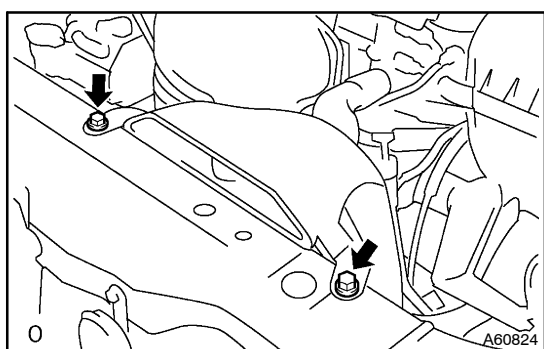

6. REMOVE AIR CLEANER INLET ASSY
 - (a) Remove the 2 bolts and the air cleaner inlet.

7. REMOVE RADIATOR SUPPORT UPPER

- (a) Disconnect the 2 horn connector.
- (b) Remove the hood lock release lever cover.

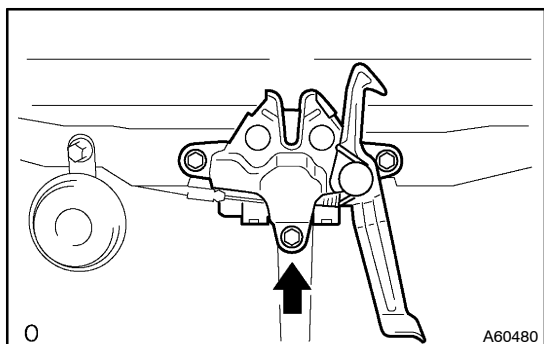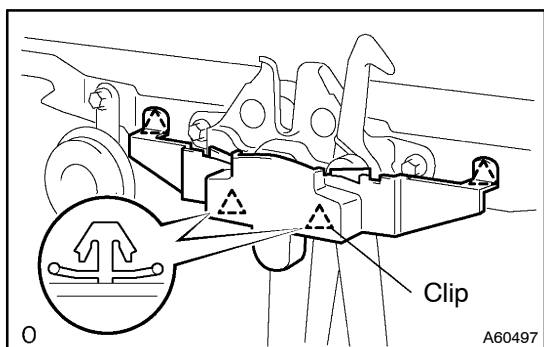

- (c) Remove the bolt shown in the illustration.
- (d) Remove the 4 bolts and radiator support upper.

8. REMOVE RADIATOR ASSY

- (a) Disconnect the fan motor connector.
- (b) Remove the radiator w/fan.

9. REMOVE RADIATOR SUPPORT CUSHION**10. REMOVE RADIATOR SUPPORT LOWER****11. REMOVE FAN ASSY, W/MOTOR****12. INSTALL FAN ASSY, W/MOTOR**

- (a) Install the fan assy w/motor to the radiator.
Torque: 5.0 N·m (51 kgf·cm, 44 in·lbf)

13. INSTALL RADIATOR SUPPORT UPPER

- (a) Install the radiator support upper with the 4 bolts.
Torque: 14 N·m (142 kgf·cm, 10 ft·lbf)

14. ADJUST HOOD SUB-ASSY

(See [page 16-18](#))

15. ADD COOLANT (See [page 16-18](#))**16. CHECK ENGINE COOLANT LEAK (See [page 16-18](#))**