





Combination Meter

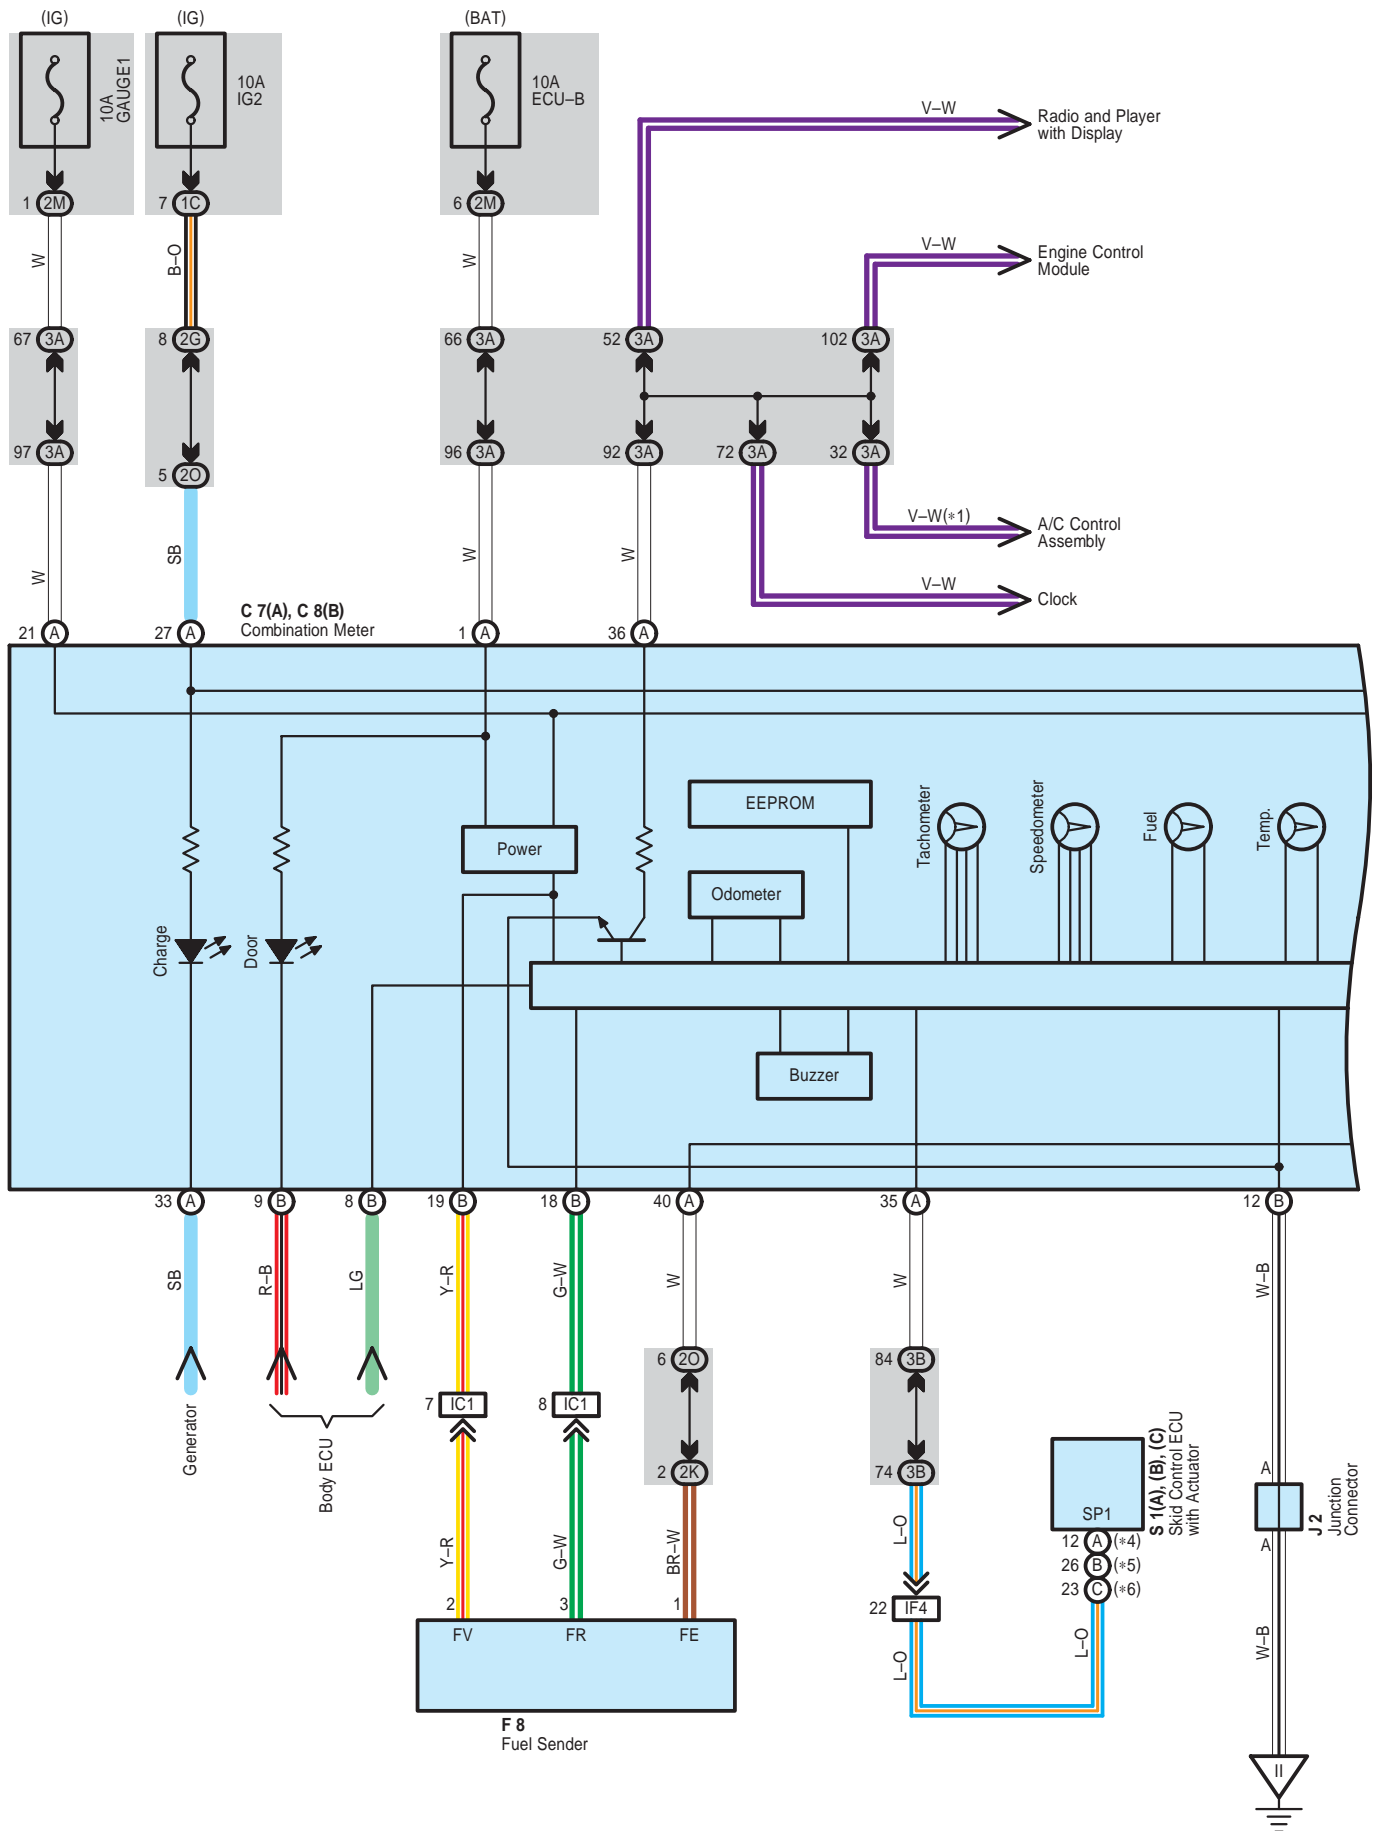

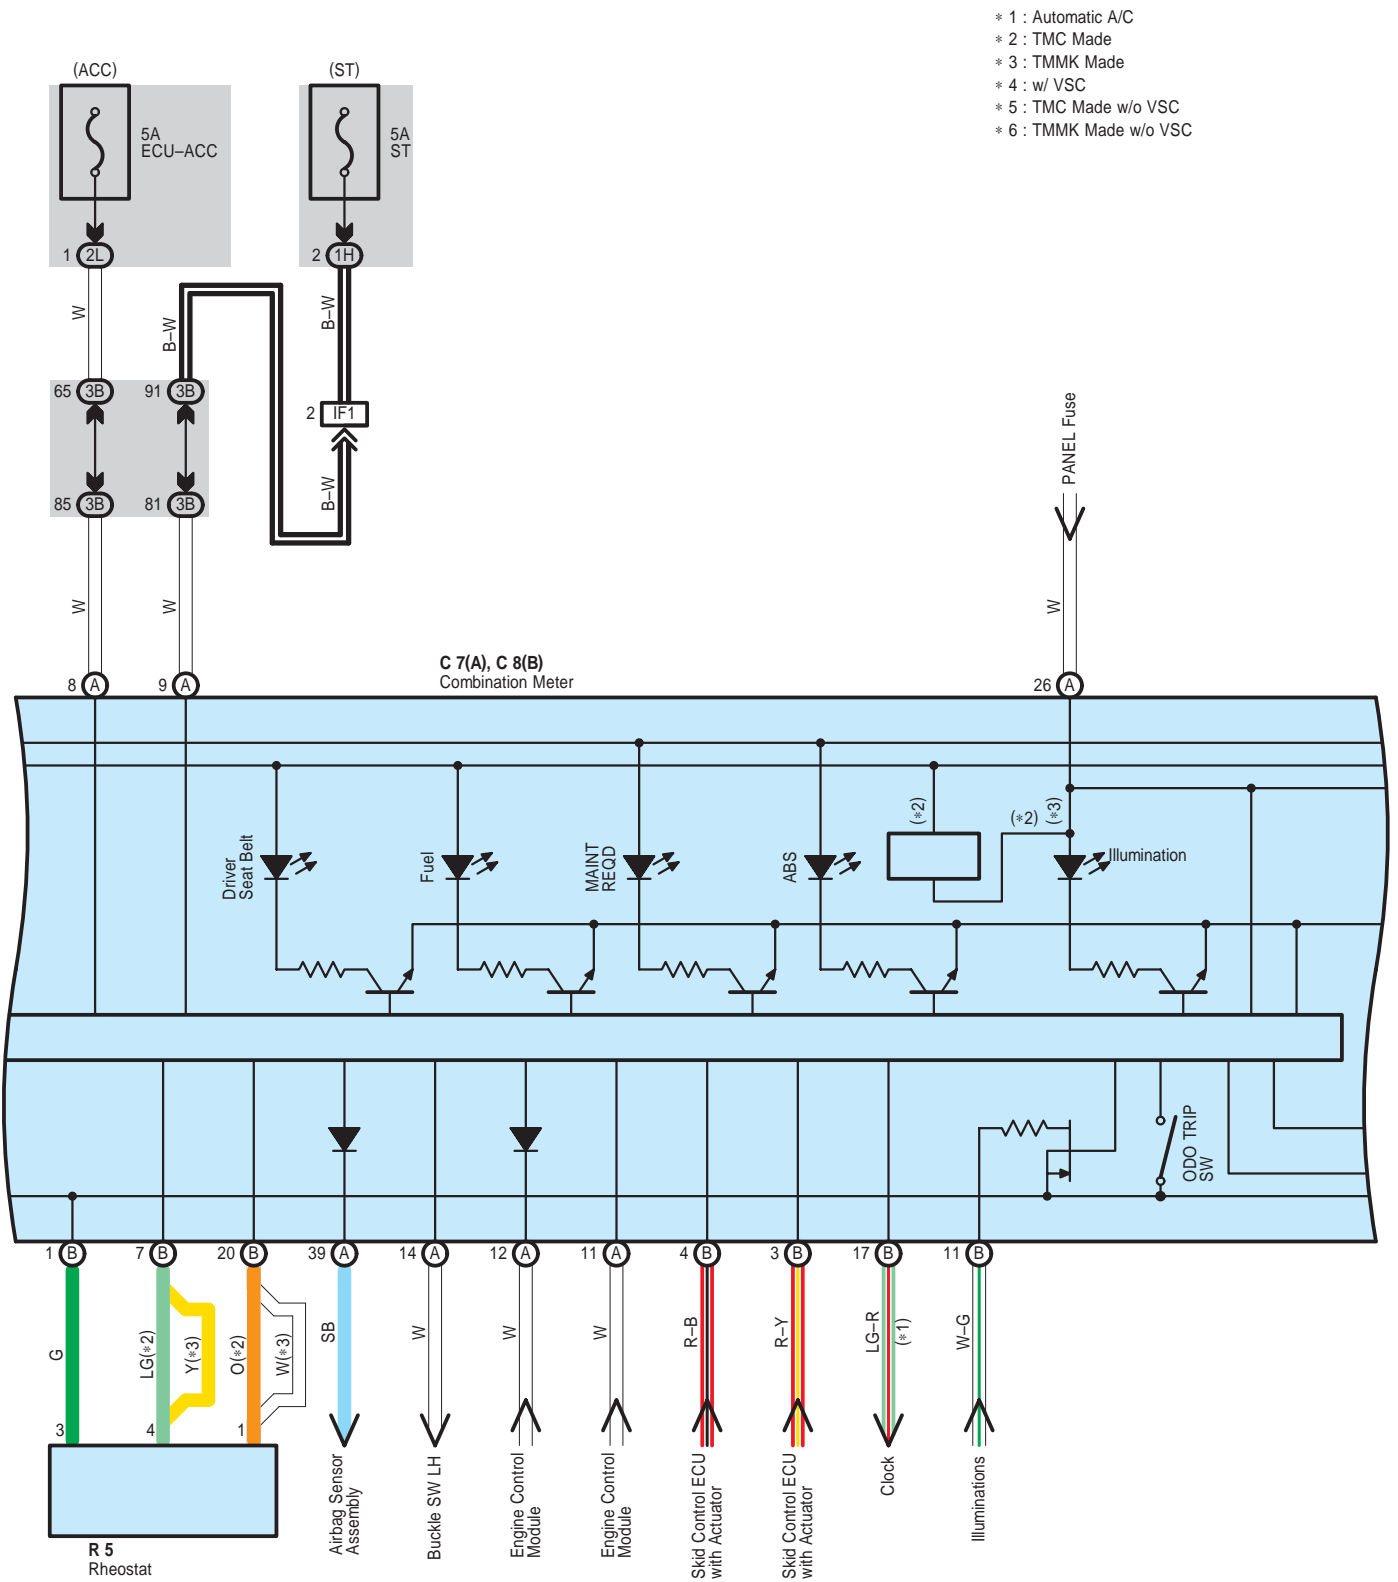

Combination Meter

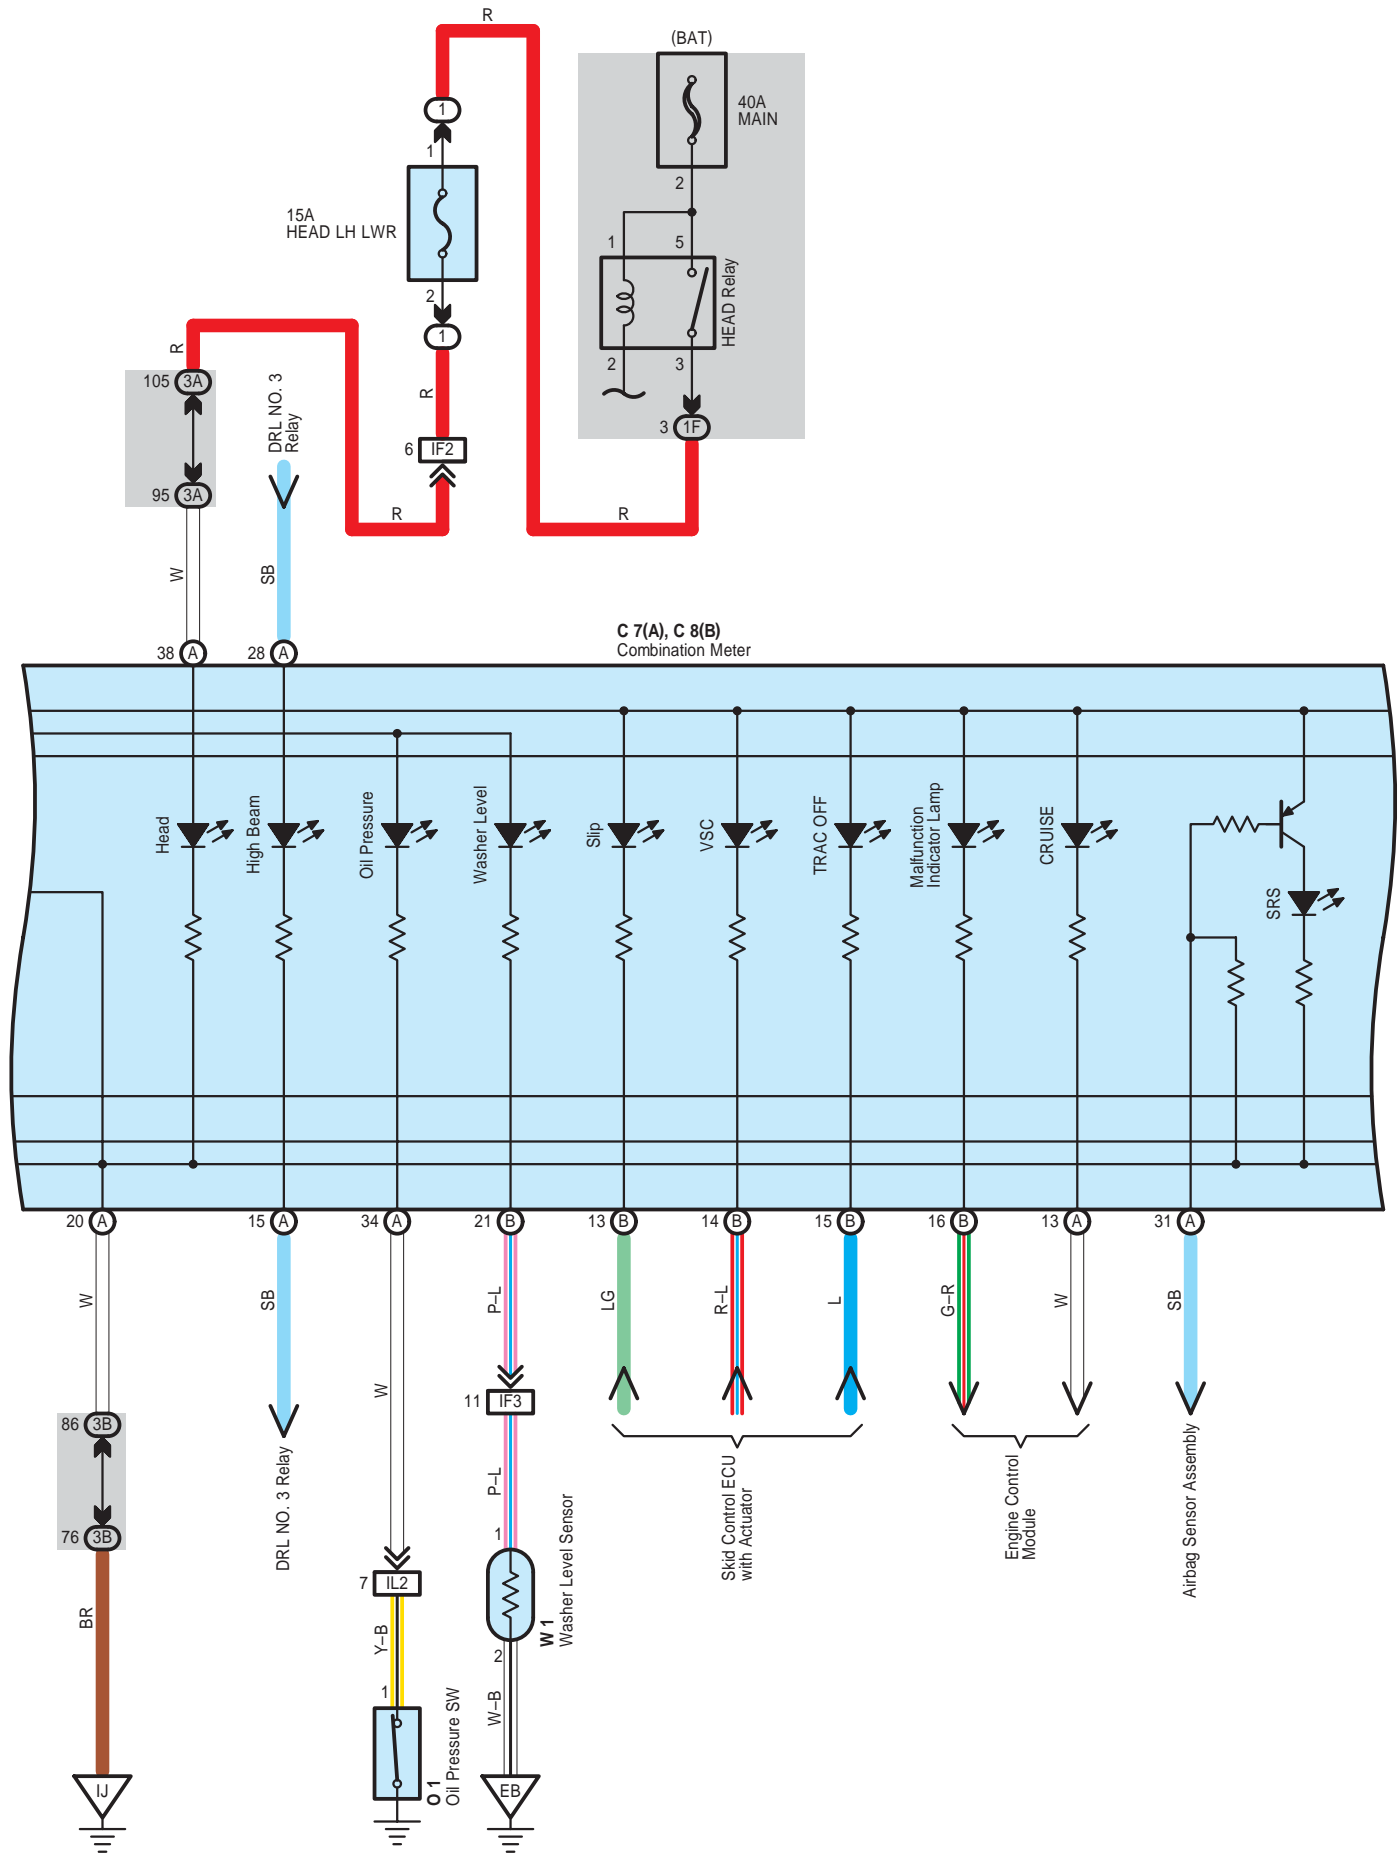

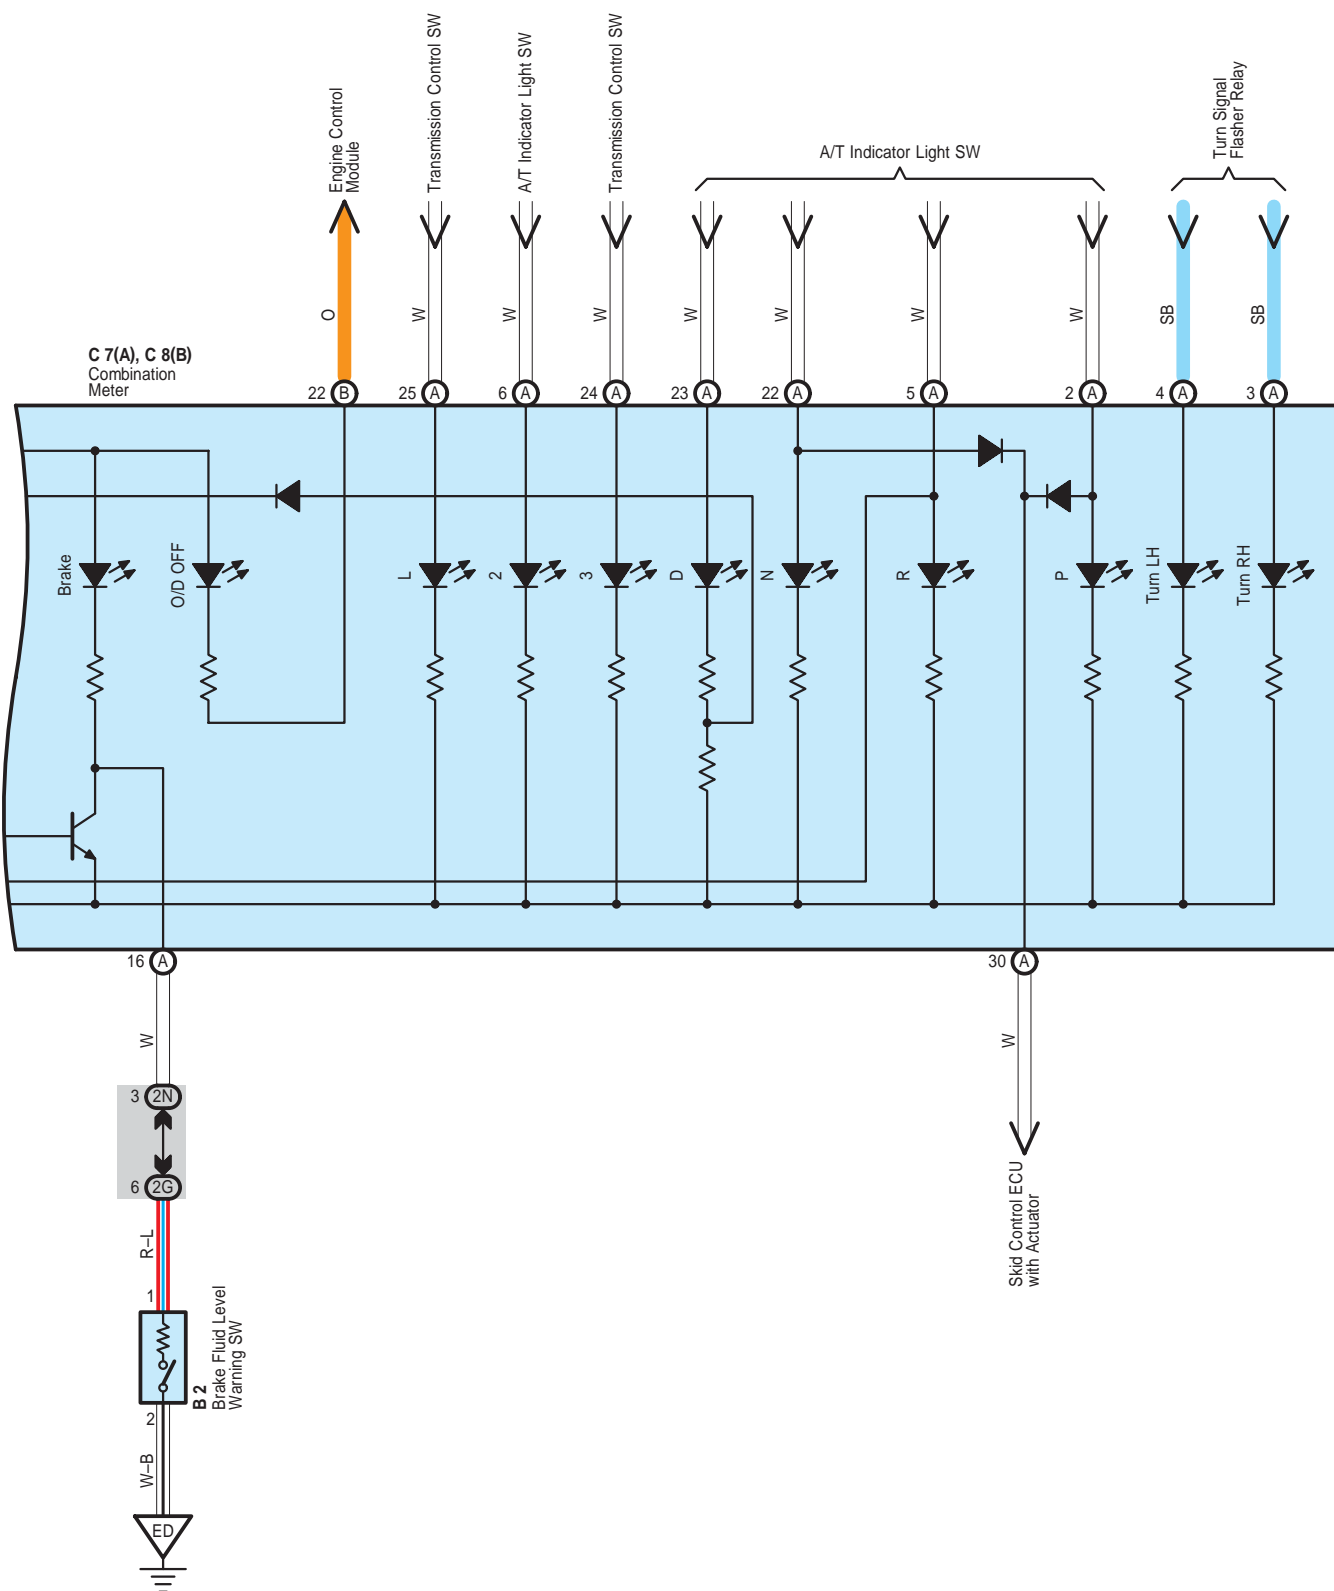

Combination Meter

: Parts Location

Code	See Page	Code	See Page	Code	See Page
B2	38 (*1)	O1	39 (*1)	S1	B 41 (*2)
	40 (*2)		41 (*2)		C 39 (*1)
C7	A 42	R5 43		W1	41 (*2)
C8	B 42	S1	A 39 (*1)		39 (*1)
F8	44		41 (*2)		41 (*2)
J2	43		B 39 (*1)		

: Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
1	22	Engine Room R/B (Engine Compartment Left)

: Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1C	25	Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)
1F		
1H		
2G	28	Engine Room Main Wire and Driver Side J/B (Lower Finish Panel)
2K	28	Floor Wire and Driver Side J/B (Lower Finish Panel)
2L	29	Instrument Panel Wire and Driver Side J/B (Lower Finish Panel)
2M		
2N		
2O		
3A	34	Instrument Panel Wire and Passenger Side J/B (Instrument Panel Brace RH)
3B		

: Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IC1	50	Instrument Panel Wire and Floor Wire (Left Kick Panel)
IF1	50	Engine Room Main Wire and Instrument Panel Wire (Right Side of Steering Column Tube)
IF2		
IF3		
IF4		
IL2	51	Engine Wire and Instrument Panel Wire (Behind the Glove Box)

: Ground Points

Code	See Page	Ground Points Location
EB	48 (*1)	Right Fender
	49 (*2)	
ED	48 (*1)	Left Fender
	49 (*2)	
II	50	Cowl Side Panel LH
IJ	50	Instrument Panel Brace LH

* 1 : 1MZ-FE, 3MZ-FE * 2 : 2AZ-FE * 3 : w/ Power Seat * 4 : w/o Power Seat

