


CLUTCH SWITCH ASSY

REPLACEMENT

8201S-01

1. REMOVE FRONT DOOR SCUFF PLATE LH
(See [page 71-10](#))
2. REMOVE COWL SIDE TRIM SUB-ASSY LH
(See [page 71-10](#))
3. REMOVE INSTRUMENT PANEL SUB-ASSY UPPER
(See [page 71-10](#))

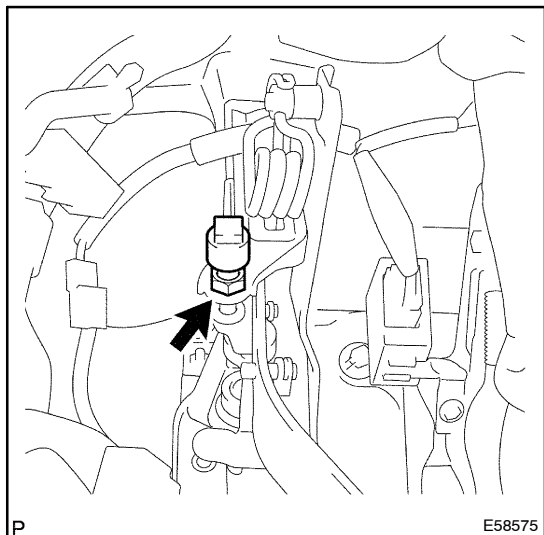

4. REMOVE CLUTCH SWITCH ASSY

- (a) Disconnect the connector.
- (b) Loosen the nut and remove the clutch switch assy.