


INSPECTION

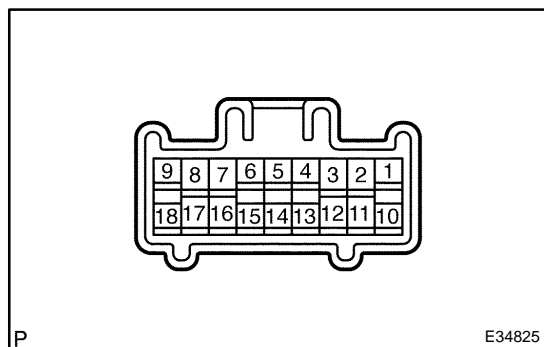

1. WINDSHIELD WIPER SWITCH ASSY

(a) Continuity Check

- (1) Check the continuity of each terminal of the connector.

Standard:

Front Wiper Switch


Switch position	Tester connection	Specified condition
MIST	7 (+1) – 17 (+B)	Continuity
OFF	16 (+S) – 7 (+1)	Continuity
INT	16 (+S) – 7 (+1)	Continuity
LO	7 (+1) – 17 (+B)	Continuity
HI	17 (+B) – 8 (+2)	Continuity

Front Washer Switch



Switch position	Tester connection	Specified condition
OFF	–	No continuity
ON	11 (WF) – 2 (EW)	Continuity

(b) Intermittent Operation Check

- (1) Connect the voltmeter (+) terminal to terminal 7 (+1) of the connector, the voltmeter (–) terminal to terminal 2 (EW) of the connector.
- (2) Connect the battery (+) to terminal 17 (+B) of the connector, the battery (–) to terminal 2 (EW) and 16 (+S) of the connector.
- (3) Turn the wiper switch to INT.
- (4) Connect the battery (+) to terminal 16 (+S) of the connector for 5 seconds.
- (5) Connect the battery (–) to terminal 16 (+S) of the connector. Operate the intermittent wiper relay and check voltage between terminal 7 (+1) and terminal 2 (EW).

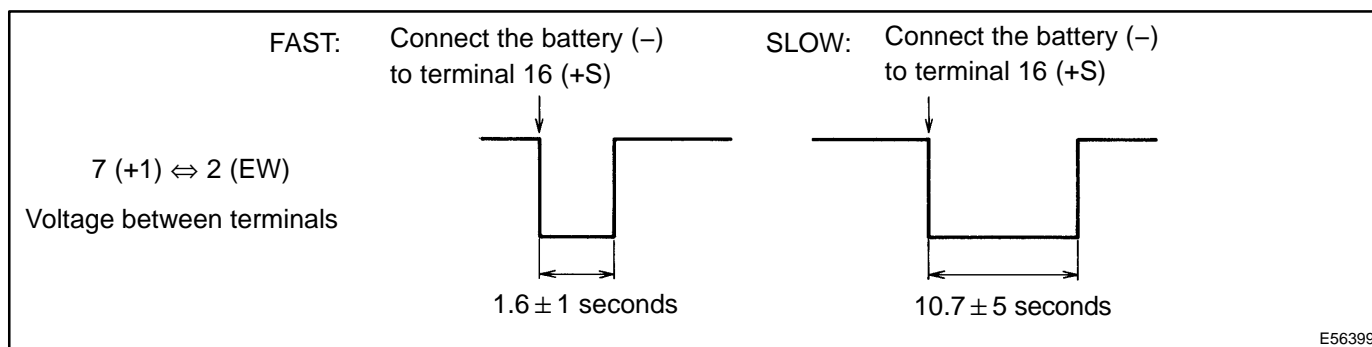

Voltage between terminal
7 (+1) and 5 (EW):

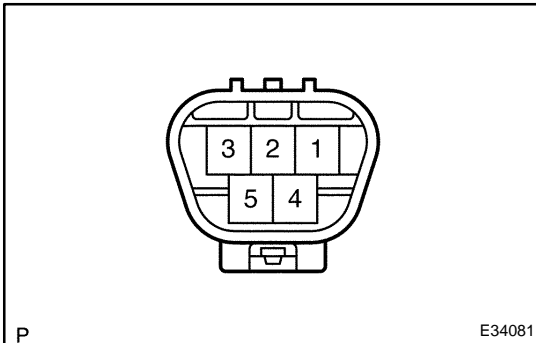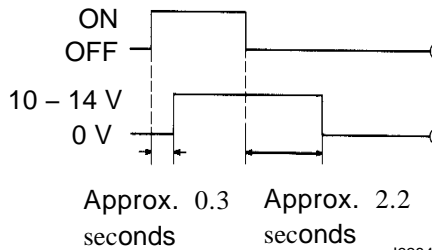

(c) Operation Check (Front Wiper)

- (1) Turn the wiper switch to OFF.
- (2) Connect the battery (+) to terminal 17 (+B) of the connector, the battery (-) to terminal 16 (+S) and 2 (EW) of the connector.
- (3) Connect the voltmeter (+) terminal to terminal 7 (+1) of the connector, and the voltmeter (-) terminal to terminal 2 (EW) of the connector. Turn the washer switch to ON and OFF, and check voltage between terminal 7 (+1) and terminal 2 (EW).

2. WINDSHIELD WIPER MOTOR ASSY

(a) LO Operation Check

- (1) Connect the battery (+) to terminal 1 (+1) of the connector, the battery (-) to terminal 5 (E) of the connector, and check that the motor operates at low speed (LO).


(b) HI Operation Check

- (1) Connect the battery (+) to terminal 4 (+2) of the connector, the battery (-) to terminal 5 (E) of the connector, and check that the motor operates at high speed (HI).

(c) Automatic Stop Operation Check

- (1) Connect the battery (+) to terminal 1 (+1) of the connector, the battery (-) to terminal 5 (E) of the connector. With the motor being rotated at low speed (LO), disconnect terminal 1 (+1) to stop the wiper motor operation at any position except the automatic stop position.
- (2) Connect terminals 1 (+1) and 3 (S), and the battery (+) to terminal 2 (B) to restart the motor operation at low speed.

SST 09843-18040

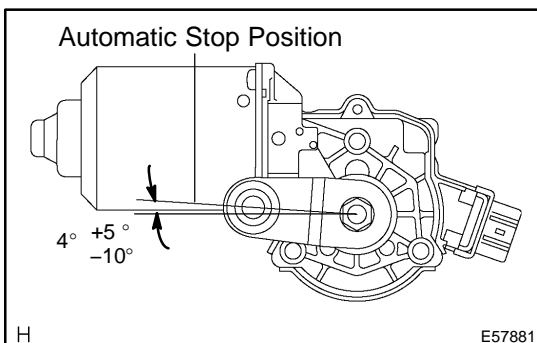

- (3) Check the automatic stop position.