


Position of Parts in Instrument Panel

[LHD]

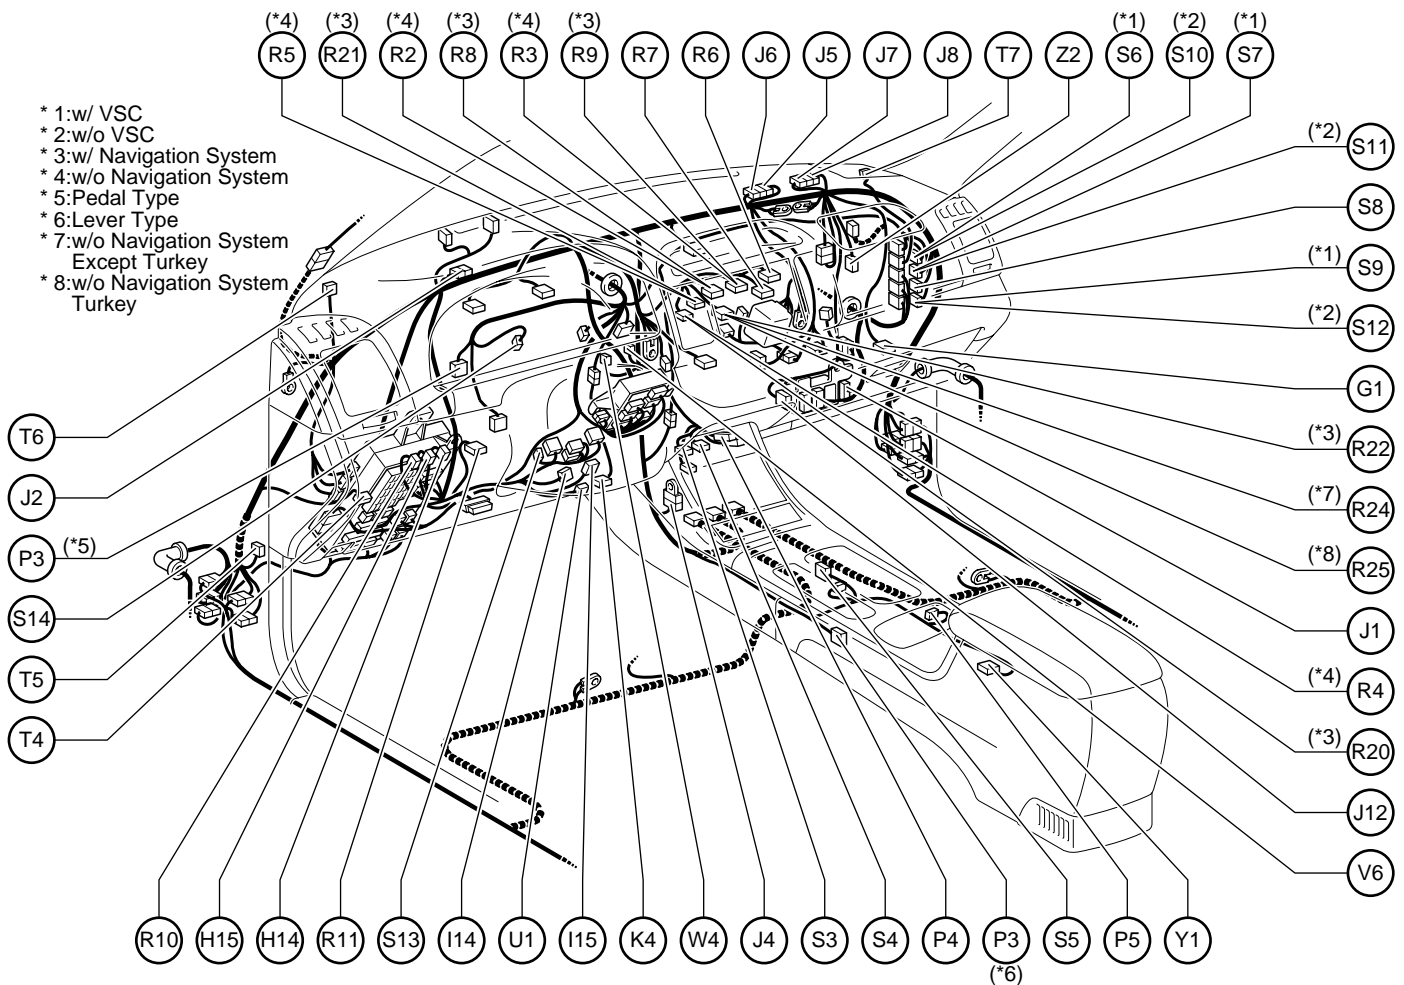

G 1 Glove Box Light and SW

H 14 Headlight Beam Level Control SW
H 15 Headlight Cleaner SW

I 14 Ignition Key Cylinder Light
Transponder Key Amplifier
I 15 Ignition SW

J 1 Junction Connector
J 2 Junction Connector
J 4 Junction Connector
J 5 Junction Connector
J 6 Junction Connector
J 7 Junction Connector
J 8 Junction Connector
J 12 Junction Connector

K 4 Kick Down SW

P 3 Parking Brake SW
P 4 Power Outlet (Front)
P 5 Power Outlet (Rear)

R 2 Radio and Player
R 3 Radio and Player
R 4 Radio and Player
R 5 Radio and Player
R 6 Radio and Player with Display
R 7 Radio and Player with Display
R 8 Radio and Player with Display
R 9 Radio and Player with Display
R 10 Rear Fog Light SW
R 11 Rheostat

R 20 Radio and Player with Display
R 21 Radio and Player with Display
R 22 Radio and Player with Display
R 24 Radio and Player
R 25 Radio and Player

S 3 Seat Heater SW LH
S 4 Seat Heater SW RH
S 5 Shift Lock Control ECU
S 6 Skid Control ECU
S 7 Skid Control ECU
S 8 Skid Control ECU
S 9 Skid Control ECU
S 10 Skid Control ECU
S 11 Skid Control ECU
S 12 Skid Control ECU
S 13 Steering Sensor
S 14 Stop Light SW

T 4 TRC OFF SW
T 5 Turn Signal Flasher Relay
T 6 Tweeter LH
T 7 Tweeter RH

U 1 Unlock Warning SW

V 6 VSC Warning Buzzer

W 4 Wiper Relay

Y 1 Yaw Rate Sensor

Z 2 Option Connector (TVSS ECU)