


SPEED SENSOR REPLACEMENT


400G7-01

1. REMOVE BATTERY
2. REMOVE ENGINE COVER SUB-ASSY NO.1
3. REMOVE AIR CLEANER ASSY
4. REMOVE AIR CLEANER HOSE NO.1

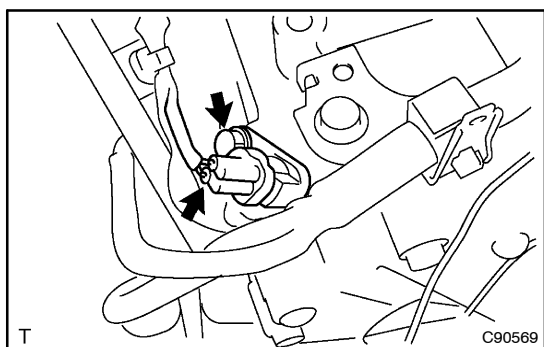


5. REMOVE SPEED SENSOR(NT SENSOR)

- (a) Disconnect the speed sensor connector.
- (b) Remove the bolt and speed sensor.

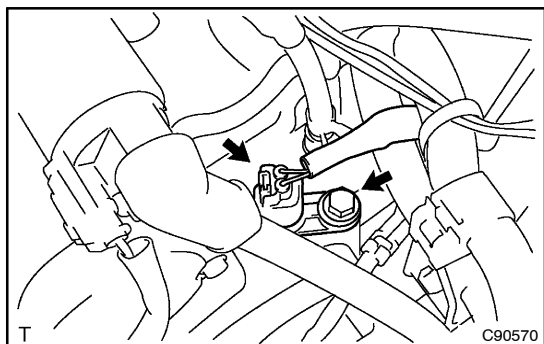

6. REMOVE SPEED SENSOR(NC SENSOR)

- (a) Disconnect the speed sensor connector.
- (b) Remove the bolt and speed sensor.

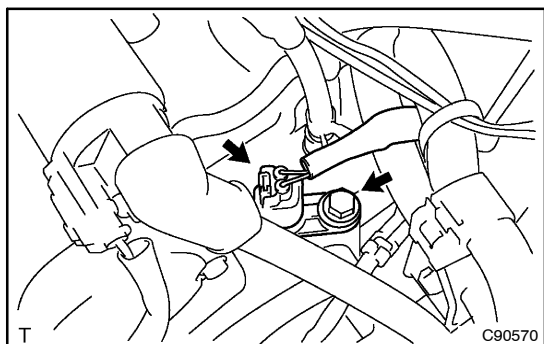


7. INSTALL SPEED SENSOR(NC SENSOR)

- (a) Coat an O-ring with ATF.
- (b) Install the speed sensor with the bolt.
Torque: 11.3 N·m (115 kgf·cm, 8 ft·lbf)

HINT:

Make sure of the manufacturer's name.

- (c) Connect the speed sensor connector.

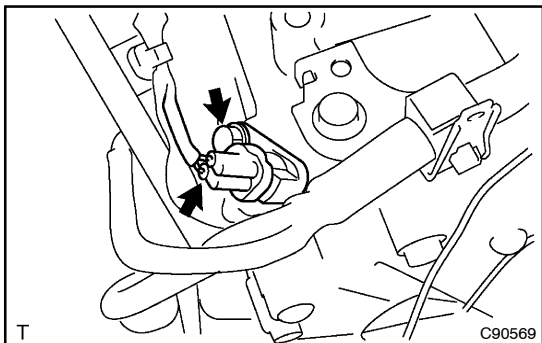**8. INSTALL SPEED SENSOR(NT SENSOR)**

- (a) Coat an O-ring with ATF.
- (b) Install the speed sensor with the bolt.

Torque: 11.3 N·m (115 kgf·cm, 8 ft·lbf)

HINT:

Make sure of the manufacturer's name.

- (c) Connect the speed sensor connector.

9. INSTALL AIR CLEANER HOSE NO.1**10. INSTALL AIR CLEANER ASSY**

Torque: 5.0 N·m (51 kgf·cm, 44 in·lbf)

11. INSTALL ENGINE COVER SUB-ASSY NO.1