


HEADLAMP UNIT LH

REPLACEMENT


650C4-01

1. REMOVE ENGINE UNDER COVER LH
(See [page 76-2](#))
2. REMOVE ENGINE UNDER COVER RH
(See [page 76-2](#))
3. REMOVE FRONT FENDER LINER RH
(See [page 76-2](#))
4. REMOVE FRONT FENDER LINER LH
(See [page 76-2](#))
5. REMOVE FRONT BUMPER COVER
(See [page 76-2](#))

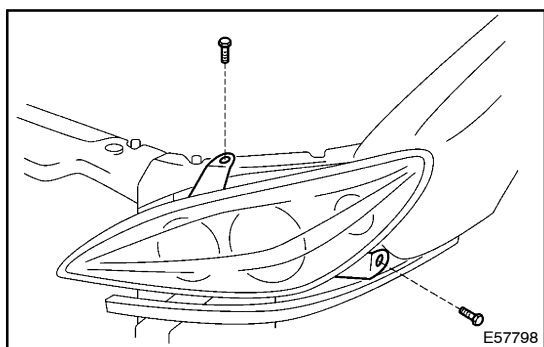

6. REMOVE HEADLAMP UNIT LH

- (a) Remove the 2 bolts.
- (b) Disconnect the connectors.

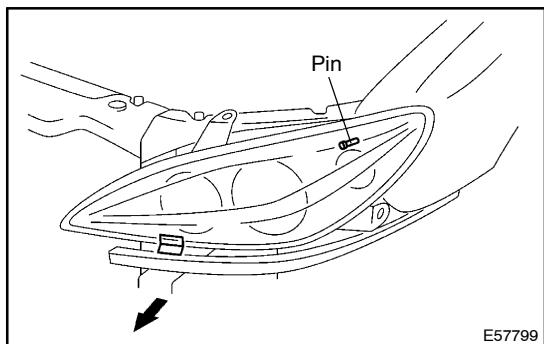


- (c) Pull out the headlight unit forward.
- (d) Remove the headlight assy.

7. REMOVE FRONT TURN SIGNAL LAMP BULB
8. REMOVE CLEARANCE LAMP BULB
9. REMOVE HEADLAMP, NO.1 BULB
10. REMOVE HEADLAMP, NO.2 BULB

11. INSTALL HEADLAMP PROTECTOR RETAINER UPPER LH

HINT:


When only the installation part of the headlight unit assy LH is damaged, it can be repaired inexpensively by using a headlight protector retainer UPPER LH. In this case, however, the headlight unit assy LH itself should not be damaged.

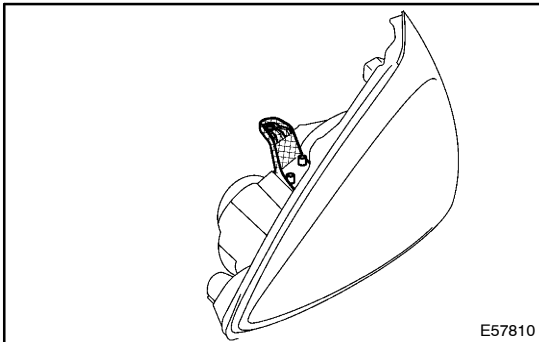

- (a) Cut off the part shaded in the illustration and sand smooth with sandpaper.

NOTICE:

After cutting off the part roughly, place the headlight protector retainer UPPER LH against the bosses and gradually file any interfering part until the proper condition for installation is made.

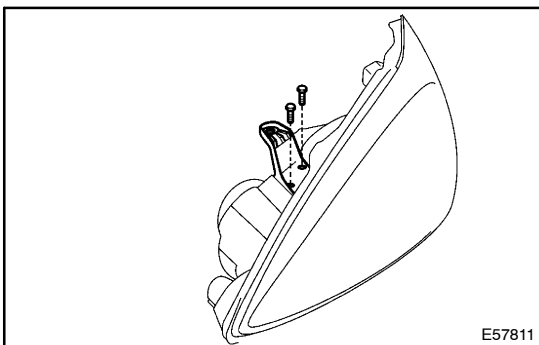

- (b) Install the headlight protector retainer UPPER LH with the 2 screws.

12. HEADLIGHT AIM ONLY (See page 65-11)