



Seat Belt Warning

- * 1 : Automatic A/C
- * 2 : Manual A/C
- * 3 : w/ Power Seat
- * 4 : w/o Power Seat
- * 5 : TMC Made
- * 6 : TMMK Made

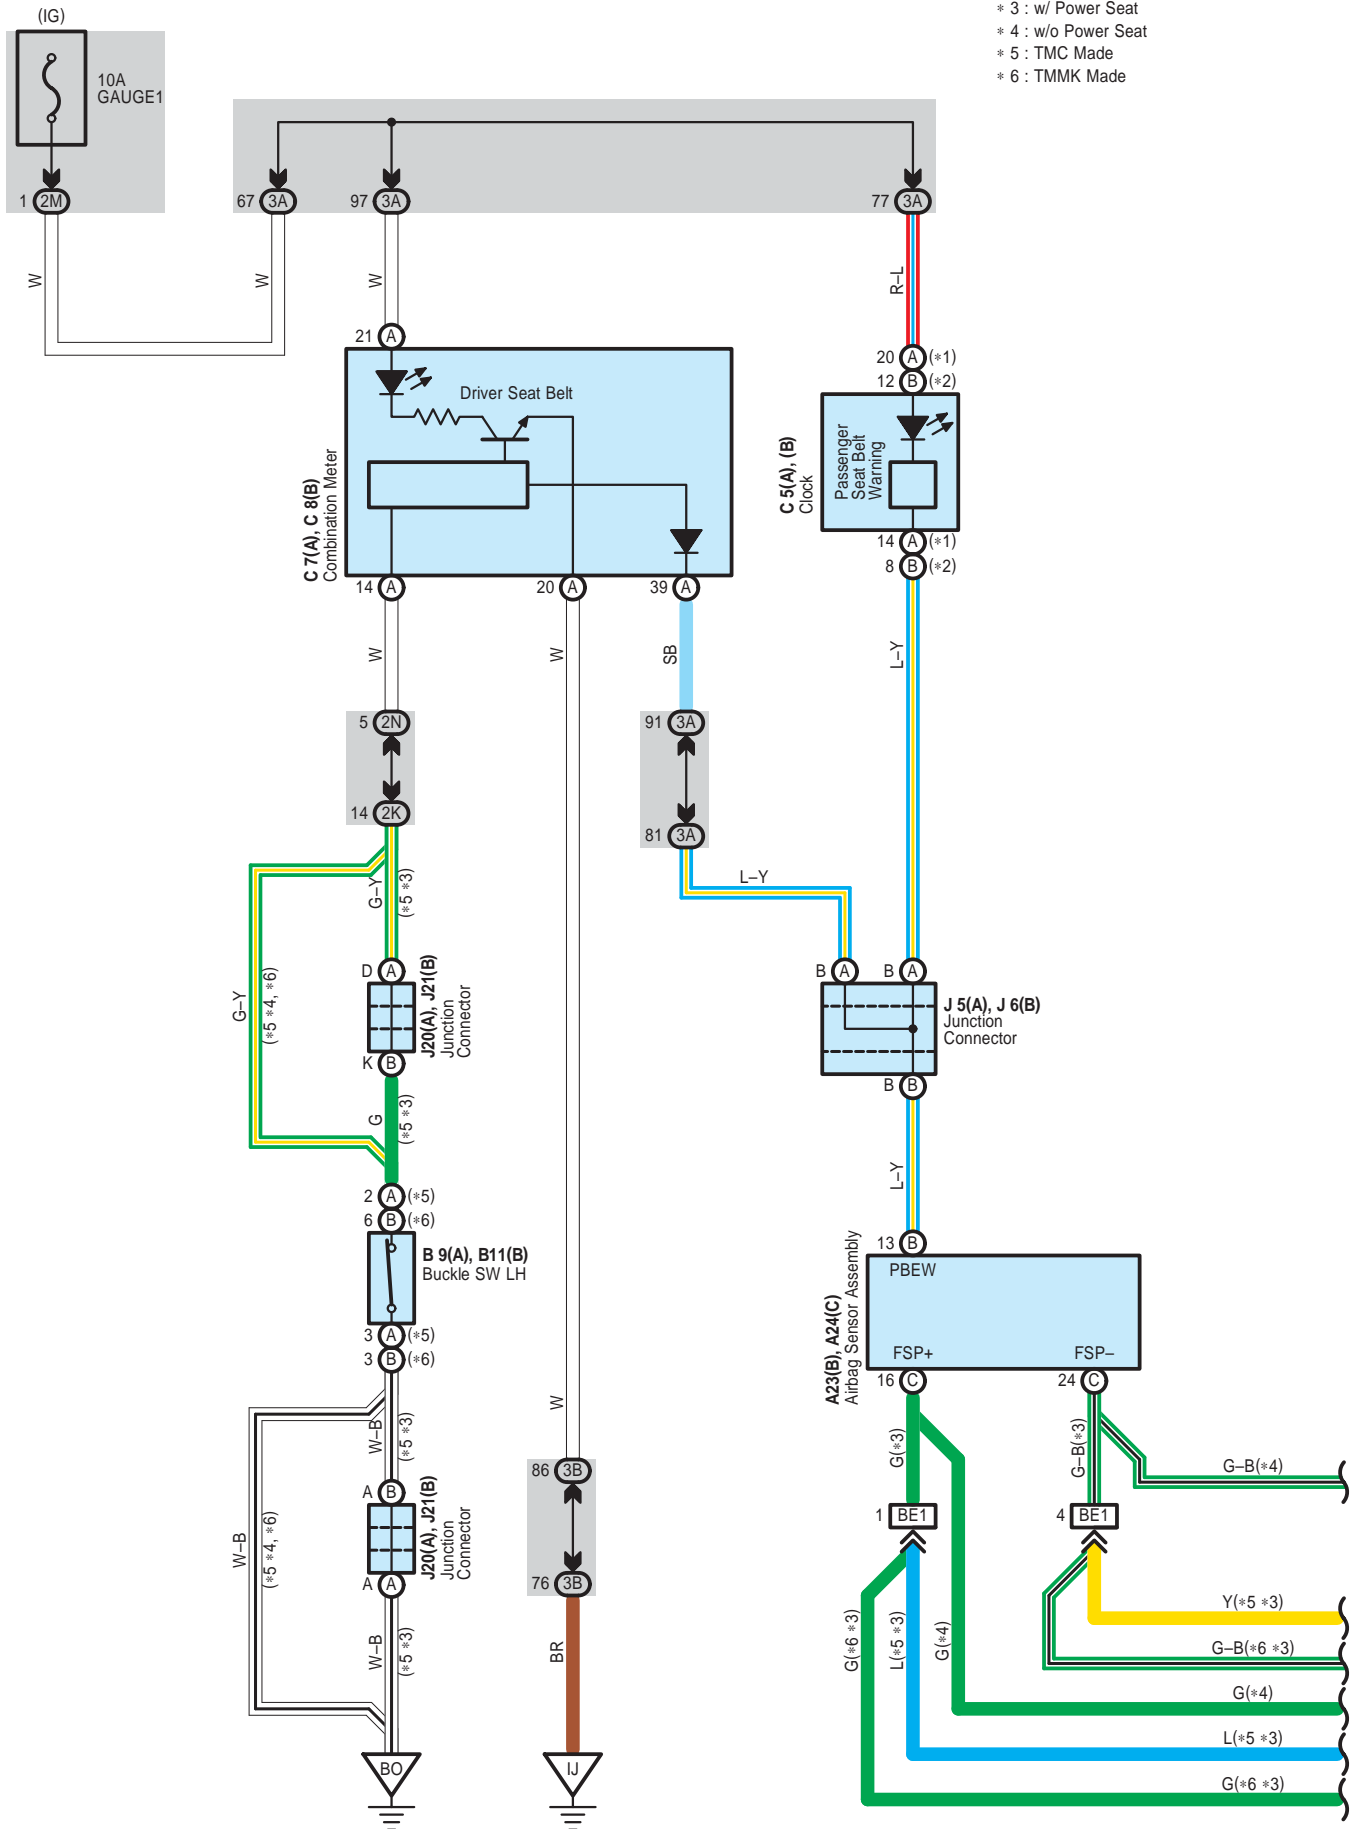

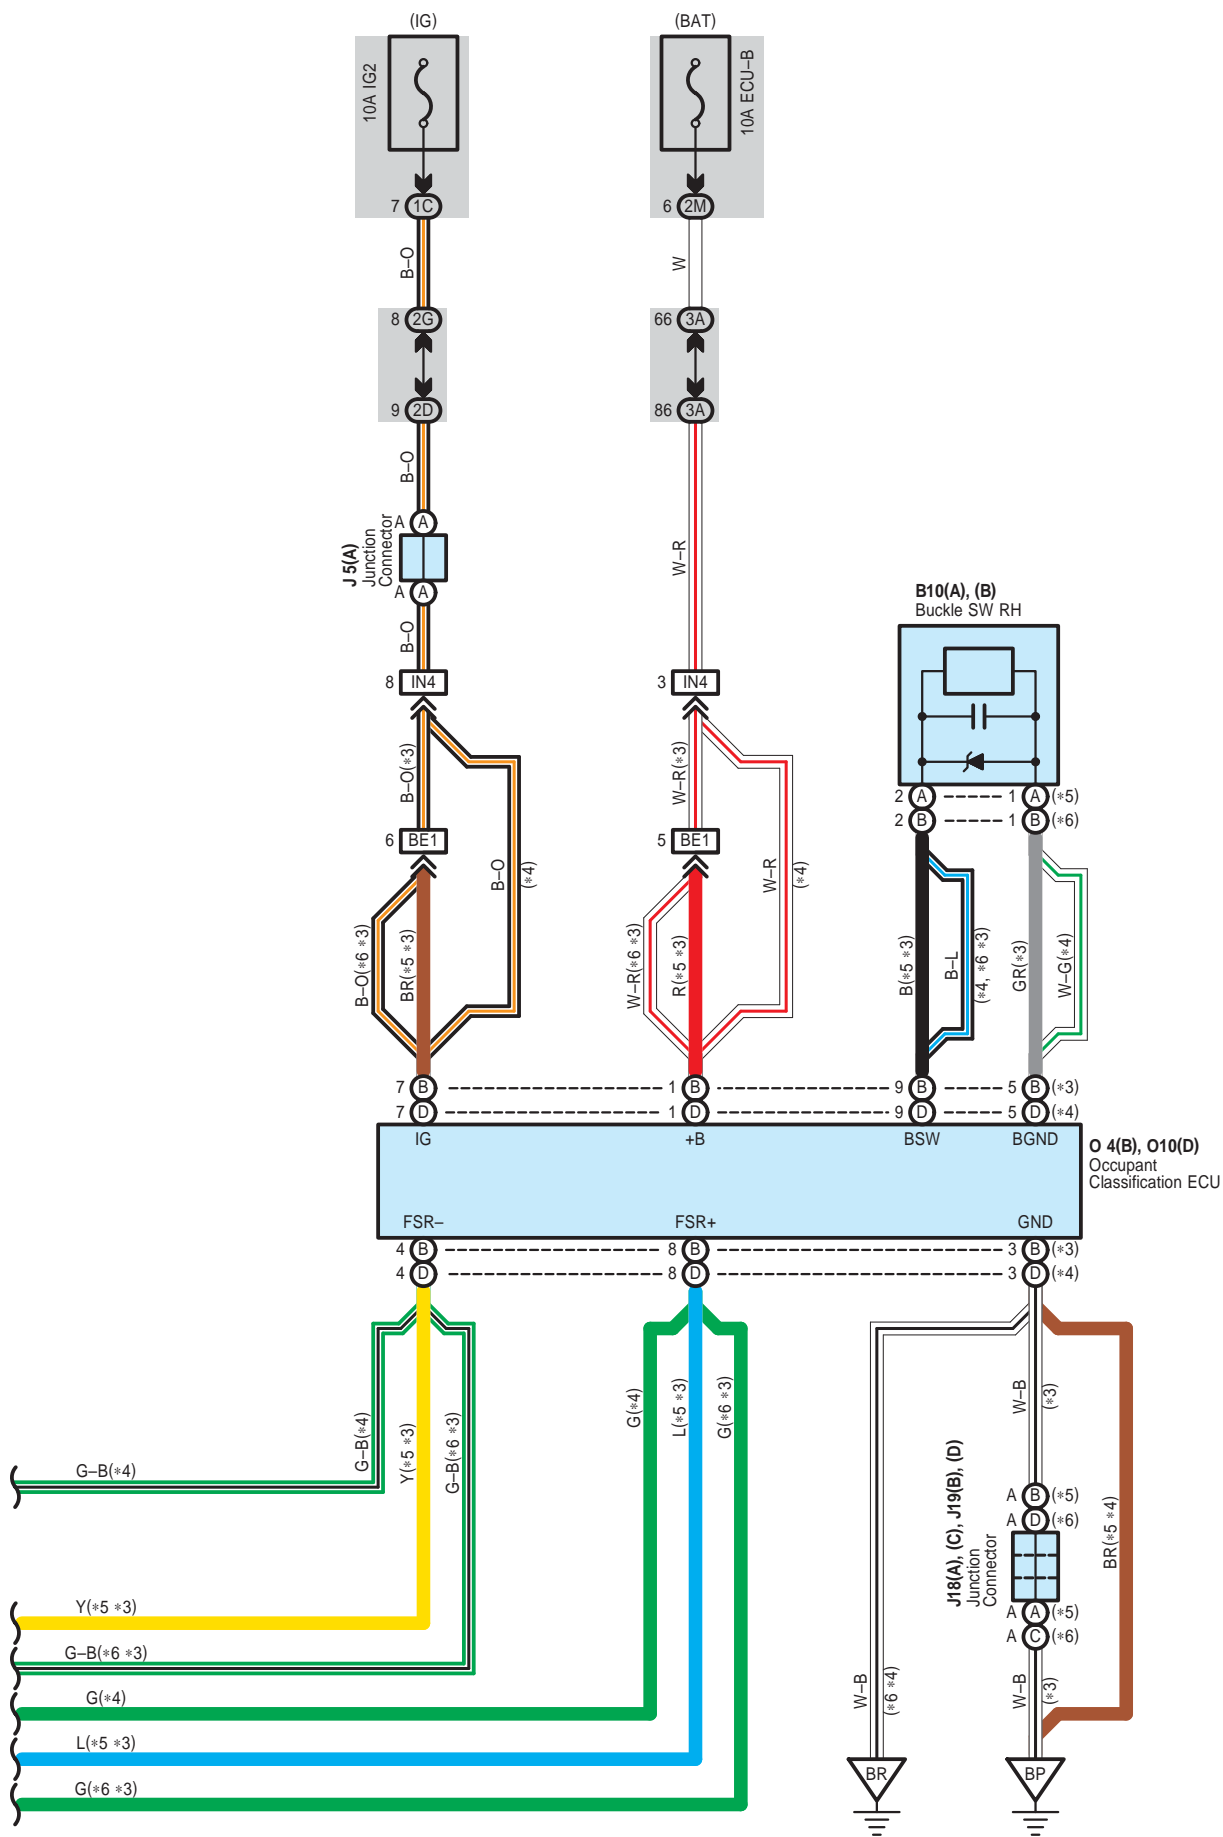

Seat Belt Warning

System Outline

When the driver has not fastened the seat belt while the ignition SW is ON, the driver seat belt warning light blinks, and a warning buzzer comes on.
Also, in the front passenger seat, a sensor recognizes passenger, and when the passenger has not fastened the seat belt, the front passenger seat belt warning light blinks.

○ : Parts Location

Code		See Page	Code		See Page	Code		See Page
A23	B	42	B11	B	47 (*4)	J19	B	46 (*3)
A24	C	42	C5	A	42		D	46 (*3)
B9	A	46 (*3)		B	42	J20	A	46 (*3)
		47 (*4)	C7	A	42			47 (*4)
B10	A	46 (*3)	C8	B	42	J21	B	46 (*3)
		47 (*4)	J5	A	43			47 (*4)
	B	46 (*3)	J6	B	43	O4	B	46 (*3)
		47 (*4)	J18	A	46 (*3)	O10	D	47 (*4)
B11	B	46 (*3)		C	46 (*3)			

○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1C	25	Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)
2D	28	Instrument Panel Wire and Driver Side J/B (Lower Finish Panel)
2G	28	Engine Room Main Wire and Driver Side J/B (Lower Finish Panel)
2K	28	Floor Wire and Driver Side J/B (Lower Finish Panel)
2M	29	Instrument Panel Wire and Driver Side J/B (Lower Finish Panel)
2N		
3A	34	Instrument Panel Wire and Passenger Side J/B (Instrument Panel Brace RH)
3B		

□ : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IN4	51	Instrument Panel Wire and Floor No.2 Wire (Right Kick Panel)
BE1	53	Floor No.2 Wire and Front Seat RH Wire (Under the Front Passenger's Seat)

▽ : Ground Points

Code	See Page	Ground Points Location
IJ	50	Instrument Panel Brace LH
BO	52	Under the Driver's Seat
BP	52	Under the Front Passenger's Seat
BR	52	Front Side of Rear Quarter Wheel House RH

* 1 : 1MZ-FE, 3MZ-FE * 2 : 2AZ-FE * 3 : w/ Power Seat * 4 : w/o Power Seat

