


## SYSTEM CHECK MODE (DTC CLEAR/RECHECK)

HINT:


Illustrations may differ from the actual vehicle depending on the device settings and options. Therefore, some detailed areas may not be shown exactly the same as on the actual vehicle.

### 1. Enter diagnostic mode (see page 05-39).

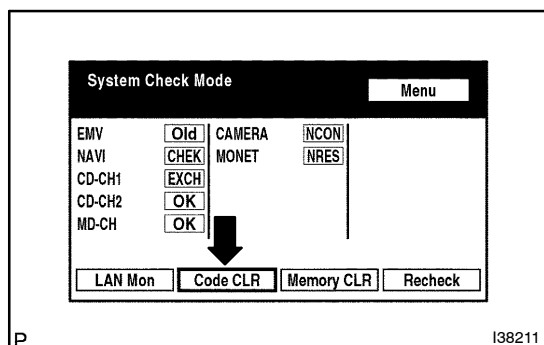

### 2. Clear DTC


- (a) Press the "Code CLR" switch for 3 seconds.

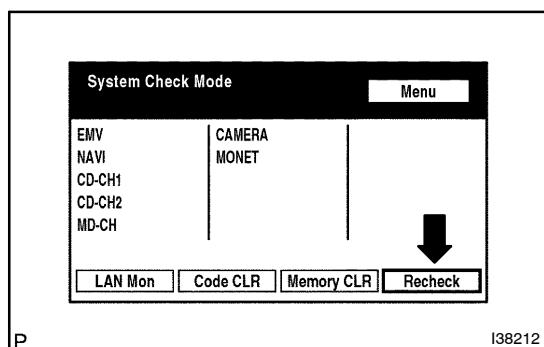

- (b) Check result is cleared.


### 3. Recheck

- (a) Press the "Recheck" switch.

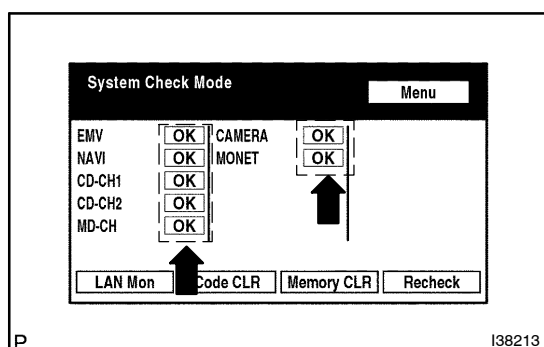


- (b) Confirm that all diagnostic codes are "OK" when the check results are displayed.

If a code other than "OK" is displayed, troubleshoot again.

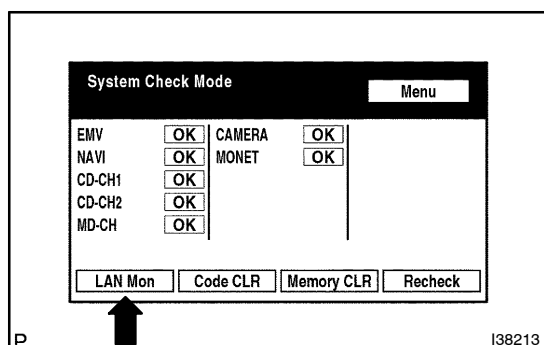

- (c) Press the "LAN Mon" switch to change to "LAN Monitor" mode.

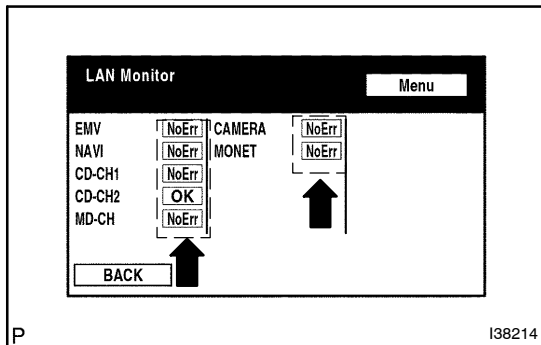

- (d) Confirm that all diagnostic codes are "No Err".  
If a code other than "No Err" is displayed, troubleshoot again.