


CRUISE CONTROL MAIN SWITCH ASSY

8201R-01


REPLACEMENT

1. ☐ DISCONNECT BATTERY NEGATIVE TERMINAL (See page 60-1)
2. REMOVE STEERING WHEEL COVER LOWER NO.2
3. REMOVE CONNECTOR COVER
(See page 82-1)
4. PLACE FRONT WHEELS FACING STRAIGHT AHEAD
5. REMOVE HORN BUTTON ASSY
(See page 60-15)
6. REMOVE STEERING WHEEL ASSY
(See page 50-6)
SST 09950-50013 (09951-05010, 09952-05010, 09953-05020, 09954-05021)
7. REMOVE STEERING PAD SWITCH
(See page 82-1)

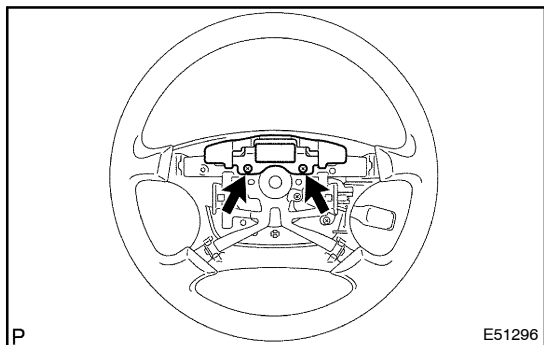


8. REMOVE CRUISE CONTROL MAIN SWITCH ASSY

- (a) Remove the 2 screws and steering wheel damper.

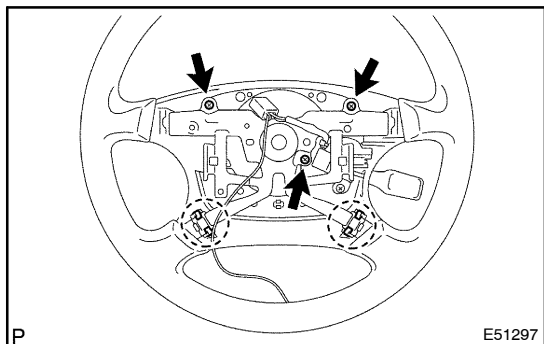


- (b) Remove the 3 screws.
(c) Disengage the 2 claws and remove the steering wheel boss cover LWR.

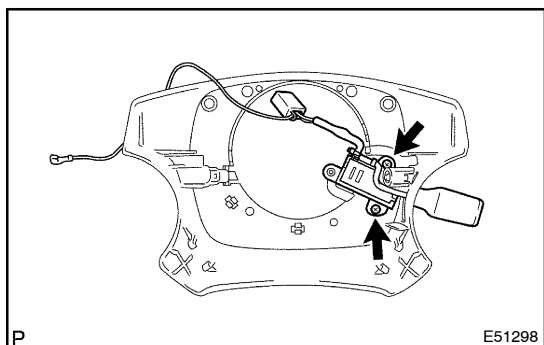

- (d) Remove the 2 screws and cruise control main switch assy.

CRUISE CONTROL - CRUISE CONTROL MAIN SWITCH ASSY

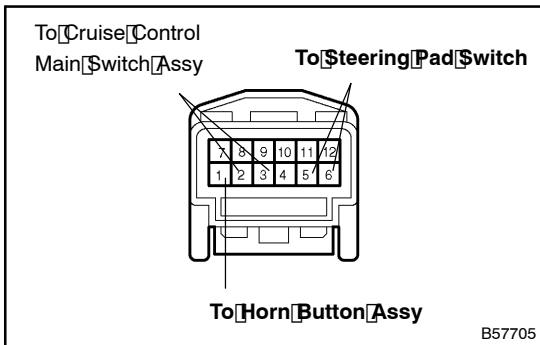

- (e) Disengage the wiring pins other than the cruise control main switch Assy from the connector, and pull them out.

9. CENTER SPIRAL CABLE (See page 60-24)
10. INSTALL STEERING WHEEL ASSY
(See page 50-6)
11. INSPECT STEERING WHEEL CENTER POINT
12. INSPECT HORN BUTTON ASSY
(See page 60-15)
13. INSTALL HORN BUTTON ASSY
(See page 60-15)
14. INSPECT SRS WARNING LIGHT