


OIL COOLER ASSY REPLACEMENT


400GA-01

1. REMOVE FRONT BUMPER COVER (See page 76-2)

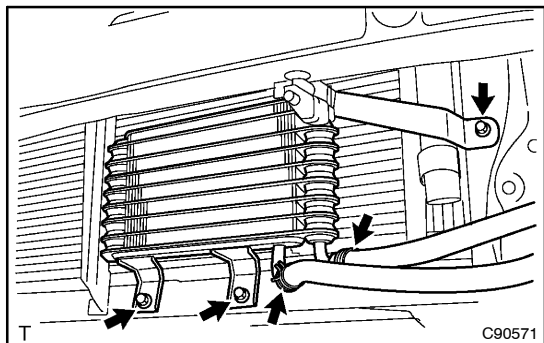

2. REMOVE OIL COOLER ASSY

- Loosen the clip and disconnect the oil cooler hose.
- Loosen the clip and disconnect the transmission oil cooler hose No. 1.
- Remove the bolt, 2 nuts and oil cooler Assy.

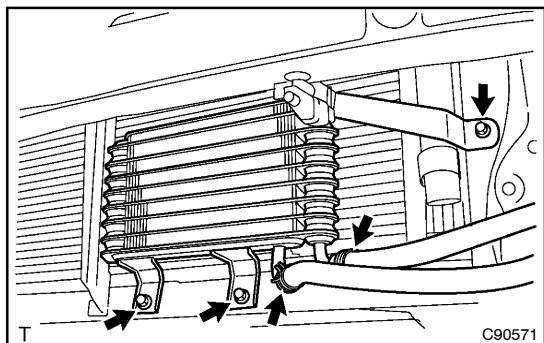

3. INSTALL OIL COOLER ASSY

- Install the oil cooler Assy, bolt and 2 nuts.
Torque: 7.0 N·m (71 kgf·cm, 62 in. lbf)
- Install the transmission oil cooler hose No. 1 and clip.
- Install the oil cooler hose and clip.

4. INSTALL FRONT BUMPER COVER (See page 76-2)

5. ADD AUTOMATIC TRANSAXLE FLUID

6. INSPECT AUTOMATIC TRANSAXLE FLUID (See page 40-1)