


E ELECTRICAL WIRING ROUTING

Position of Parts in Engine Compartment

[RHD : 1MZ-FE]

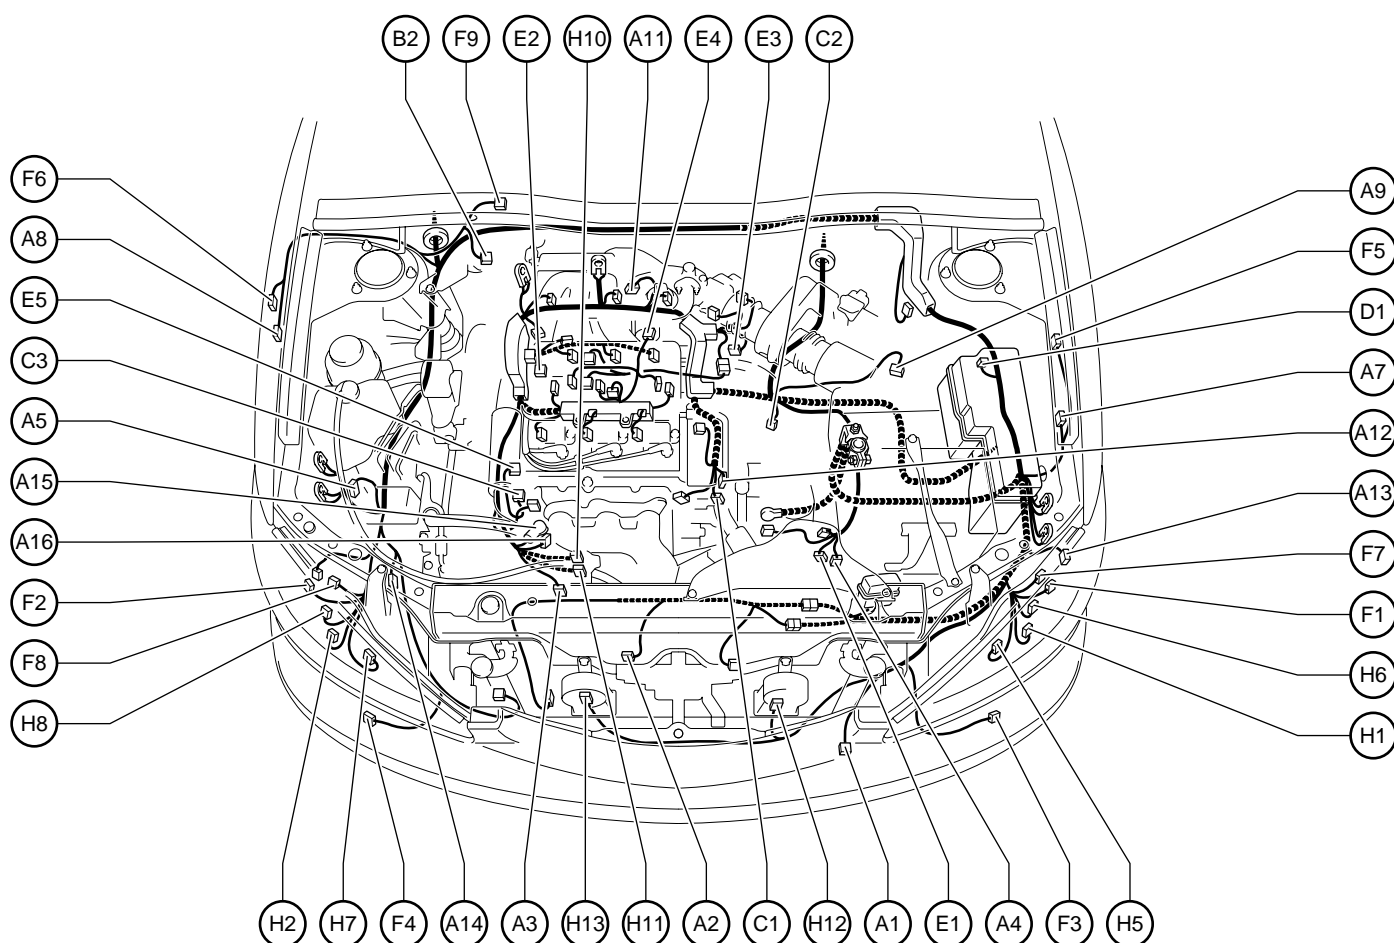

A 1 A/C Ambient Temp. Sensor

A 2 A/C Condenser Fan Motor

A 3 A/C Lock Sensor

A/C Magnetic Clutch

A 4 A/T Indicator Light SW

Back-Up Light SW

Neutral Start SW

A 5 ABS & BA & TRC & VSC Actuator

A 7 ABS Speed Sensor Front LH

A 8 ABS Speed Sensor Front RH

A 9 Air Flow Meter

A 11 Air Fuel Ratio Sensor (Bank 1 Sensor 1)

A 12 Air Fuel Ratio Sensor (Bank 2 Sensor 1)

A 13 Airbag Sensor Front LH

A 14 Airbag Sensor Front RH

A 15 Alternator

A 16 Alternator

B 2 Brake Fluid Level Warning SW

C 1 Camshaft Position Sensor

C 2 Counter Gear Speed Sensor

C 3 Crankshaft Position Sensor

D 1 Diode (A/C No.1)

E 1 ECT Solenoid

E 2 EFI Water Temp. Sensor

E 3 EGR Gas Temp. Sensor

E 4 EGR Valve Position Sensor

E 5 Engine Oil Level Sensor

F 1 Front Clearance Light LH

F 2 Front Clearance Light RH

F 3 Front Fog Light LH

F 4 Front Fog Light RH

F 5 Front Side Turn Signal Light LH

F 6 Front Side Turn Signal Light RH

F 7 Front Turn Signal Light LH

F 8 Front Turn Signal Light RH

F 9 Front Wiper Motor

H 1 Headlight Beam Level Control Actuator LH

H 2 Headlight Beam Level Control Actuator RH

H 5 Headlight LH (High)

H 6 Headlight LH (Low)

H 7 Headlight RH (High)

H 8 Headlight RH (Low)

H 10 Heated Oxygen Sensor (Bank 1 Sensor 1)

H 11 Heated Oxygen Sensor (Bank 2 Sensor 1)

H 12 Horn (High)

H 13 Horn (Low)