


Position of Parts in Instrument Panel

[RHD]

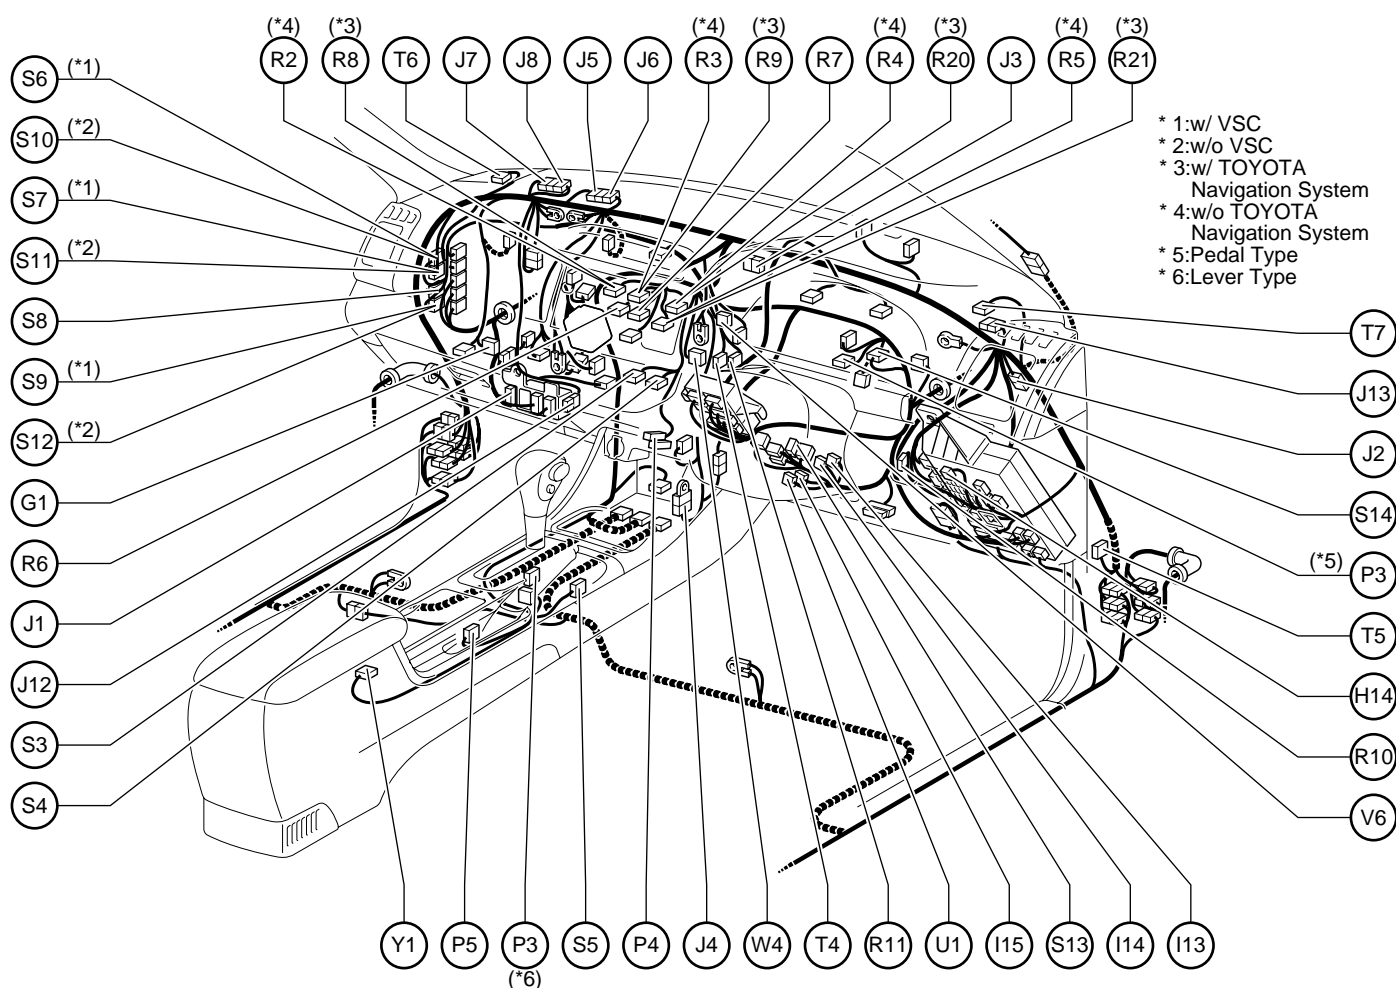

G 1 Glove Box Light and SW

H14 Headlight Beam Level Control SW

I 13 Ignition Key Cylinder Light

I 14 Ignition Key Cylinder Light
Transponder Key Amplifier

I 15 Ignition SW

J 1 Junction Connector

J 2 Junction Connector

J 3 Junction Connector

J 4 Junction Connector

J 5 Junction Connector

J 6 Junction Connector

J 7 Junction Connector

J 8 Junction Connector

J 12 Junction Connector

J 13 Junction Connector

P 3 Parking Brake SW

P 4 Power Outlet (Front)

P 5 Power Outlet (Rear)

R 2 Radio and Player

R 3 Radio and Player

R 4 Radio and Player

R 5 Radio and Player

R 6 Radio and Player with Display

R 7 Radio and Player with Display

R 8 Radio and Player with Display

R 9 Radio and Player with Display

R10 Rear Fog Light SW

R11 Rheostat

R20 Radio and Player with Display

R21 Radio and Player with Display

S 3 Seat Heater SW LH

S 4 Seat Heater SW RH

S 5 Shift Lock Control ECU

S 6 Skid Control ECU

S 7 Skid Control ECU

S 8 Skid Control ECU

S 9 Skid Control ECU

S10 Skid Control ECU

S11 Skid Control ECU

S12 Skid Control ECU

S13 Steering Sensor

S14 Stop Light SW

T 4 TRC OFF SW

T 5 Turn Signal Flasher Relay

T 6 Tweeter LH

T 7 Tweeter RH

U 1 Unlock Warning SW

V 6 VSC Warning Buzzer

W 4 Wiper Relay

Y 1 Yaw Rate Sensor