


CHARCOAL CANISTER ASSY (1MZ-FE/3MZ-FE)

REPLACEMENT


120BL-03

1. REMOVE FUEL TANK ASSY (See page 11-52)

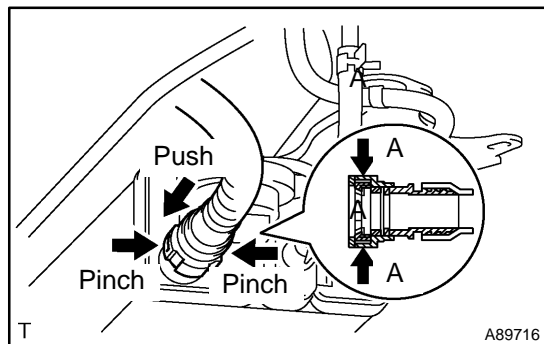


2. REMOVE CHARCOAL CANISTER ASSY

- (a) Disconnect the fuel tank vent hose.
- (1) Push the connector deep into the charcoal canister assy to release the locking tab.
 - (2) Pinch portion A.
 - (3) Pull out the connector.

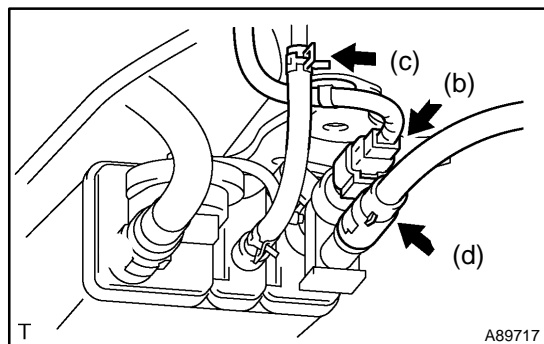

- (b) Disconnect the VSV connector for CCV.
- (c) Disconnect the fuel emission hose.
- (d) Disconnect the air inlet line hose.

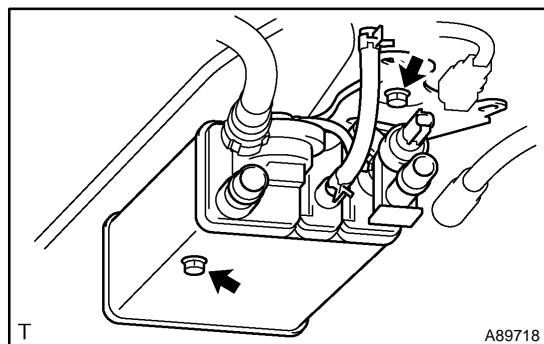

- (e) Remove the 2 bolts and charcoal canister.

3. INSTALL CHARCOAL CANISTER ASSY

Torque: 39.2 N·m (400 kgf·cm, 29 in.·lbf)

4. INSTALL FUEL TANK ASSY (See page 11-52)