

REPLACEMENT

HINT:


Installation is in the reverse order of removal.

1. **PRECAUTION** (SEE PAGE 60-1)
2. **DISCONNECT BATTERY NEGATIVE TERMINAL**

CAUTION:

After removing the terminal, wait for at least 90 seconds before starting the operation.


3. **PLACE FRONT WHEELS FACING STRAIGHT AHEAD**
4. **REMOVE STEERING WHEEL COVER LOWER NO.2** (SEE PAGE 60-19)
5. **REMOVE STEERING WHEEL COVER LOWER NO.3** (SEE PAGE 60-19)
6. **REMOVE HORN BUTTON ASSY** (SEE PAGE 60-19)
7. **REMOVE STEERING WHEEL ASSY** (SEE PUB. NO. RM915E, PAGE 50-6)
SST 09950-50013 (09951-05010, 09952-05010, 09953-05020, 09954-05021)
8. **REMOVE STEERING COLUMN COVER** (SEE PUB. NO. RM915E, PAGE 50-6)
9. **REMOVE FRONT DOOR SCUFF PLATE LH** (SEE PAGE 71-7)
10. **REMOVE INSTRUMENT PANEL UNDER COVER SUB-ASSY NO.1** (SEE PAGE 71-7)
11. **REMOVE COWL SIDE TRIM SUB-ASSY LH** (SEE PAGE 71-7)
12. **REMOVE INSTRUMENT PANEL SUB-ASSY LOWER** (SEE PAGE 71-7)

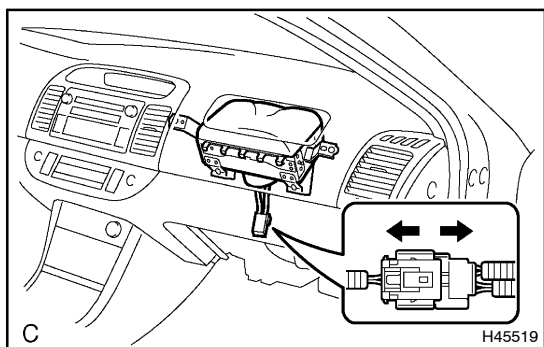

13. **DISCONNECT FRONT PASSENGER AIRBAG ASSY CONNECTOR**

(a) Disconnect the front passenger airbag connectors.

14. **REMOVE INSTRUMENT PANEL SAFETY PAD SUB-ASSY W/FRONT PASSENGER AIRBAG ASSY** (SEE PAGE 71-7)

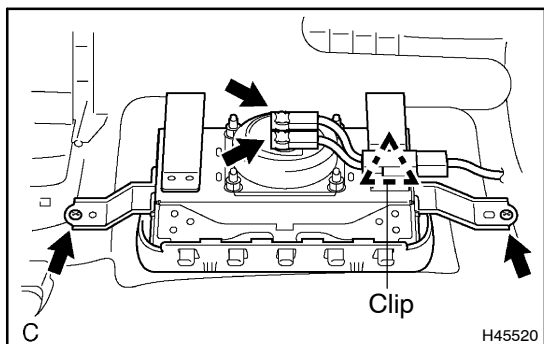


15. **REMOVE INSTRUMENT PANEL WIRE NO.2**

(a) Remove the clip.
(b) Disconnect the connectors from the front passenger airbag assy.

16. **REMOVE FRONT PASSENGER AIRBAG ASSY**


(a) Remove the 2 screws.

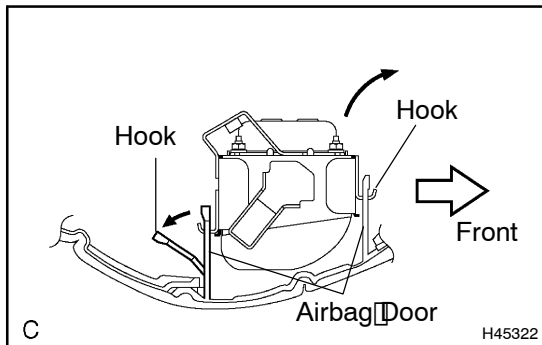

- (b) Release the rear side airbag door from the hook by slightly deflecting it and roll the front passenger airbag assembly forward.
- (c) Release the front side airbag door from the other hook and remove the instrument panel door airbag assembly.

17. INSPECT FRONT PASSENGER AIRBAG ASSY (SEE PAGE 60-13)

18. INSTALL FRONT PASSENGER AIRBAG ASSY

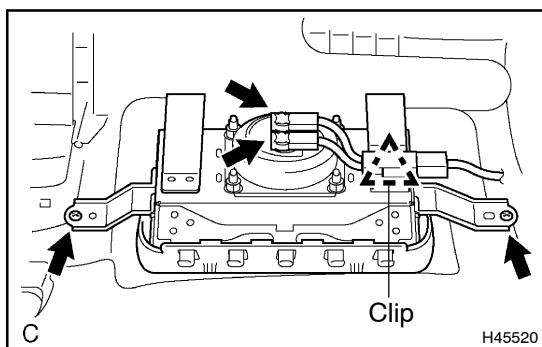

19. INSTALL INSTRUMENT PANEL WIRE NO.2

- (a) Install the clip.
- (b) Connect the 2 connectors to the front passenger airbag assembly.

NOTICE:

When handling the airbag connector, take care not to damage the airbag wire harness.

20. INSTALL INSTRUMENT PANEL SAFETY PAD SUB-ASSY W/ FRONT PASSENGER AIRBAG ASSY (SEE PAGE 71-7)

21. INSTALL SPIRAL CABLE SUB-ASSY (SEE PAGE 60-28)

22. ADJUST SPIRAL CABLE SUB-ASSY (SEE PAGE 60-28)

23. INSTALL STEERING WHEEL ASSY (SEE PUB. NO. RM915E, PAGE 50-6)

24. ADJUST STEERING WHEEL CENTER POINT

25. INSTALL HORN BUTTON ASSY (SEE PAGE 60-19)

26. CONNECT BATTERY NEGATIVE TERMINAL

27. INSPECT HORN BUTTON ASSY (SEE PUB. NO. RM915E, PAGE 69-3)

28. INSPECT SRS WARNING LIGHT (SEE PAGE 05-10)