


DISPOSAL

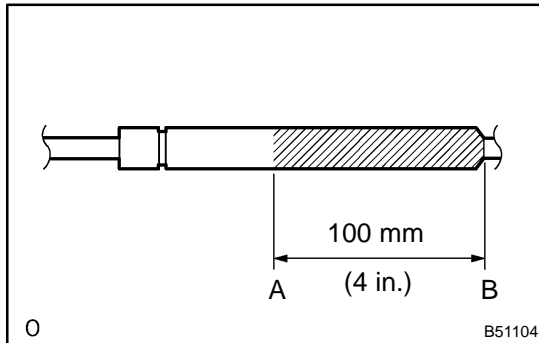

1. DISPOSE OF HOOD SUPPORT ROD

- (a) Fix the hood stay assembly, with the piston-rod pulled out, on a vise.
- (b) With protection glasses on, cut a part between A and B as shown in the illustration with a metal saw to release the gas.

NOTICE:

Although the gas inside the hood stay assembly is colorless, odorless and harmless, there is a possibility that cutting tips of the metal saw would jump around, therefore cover it with clothes or something.