


OVERHAUL

HINT:


- COMPONENTS: [SEE PAGE 65-1.](#)
- Use the same procedures for the RH side and LH side.
- The procedures listed below are for the LH side.
- Installation is in the reverse order of removal.

1. REMOVE FRONT BUMPER ASSY ([SEE PAGE 76-2](#))

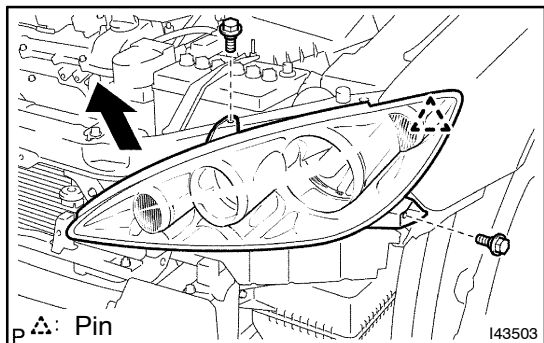


2. REMOVE HEADLAMP ASSY LH

- (a) Remove the 2 bolts and disengage the pin.
- (b) Pull the headlamp assy LH in the direction indicated by the arrow and remove the headlamp assy LH.

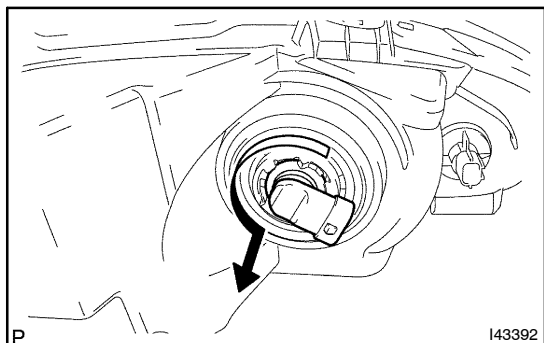


3. REMOVE HEADLAMP, NO.2 BULB

- (a) Turn in the direction indicated by the arrow and remove the headlamp, No.2 bulb.

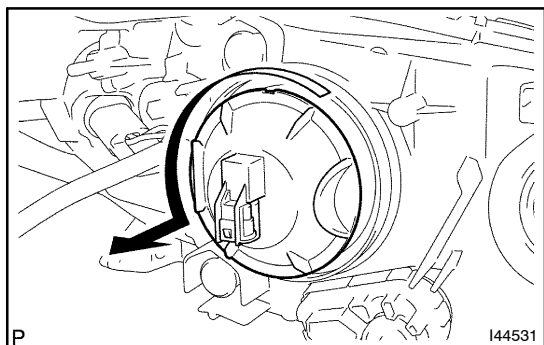


4. REMOVE HEADLAMP COVER NO.1


- (a) Turn in the direction indicated by the arrow and remove the headlamp cover No.1.

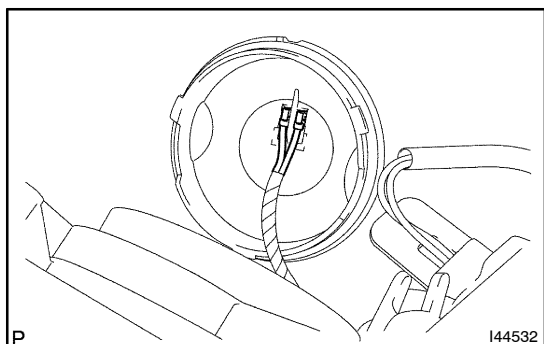

- (b) Disconnect the connector and remove the headlamp cover No.1.

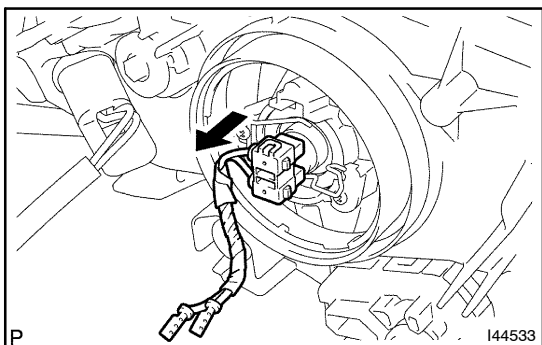


- (c) Remove the headlamp cord.

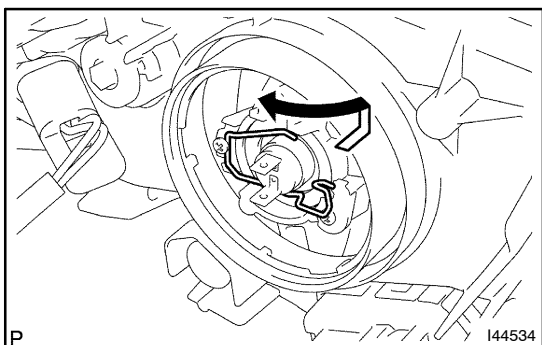


5. REMOVE HEADLAMP, NO.2 BULB

- (a) Release the set spring lock as shown in the illustration and remove the headlamp, No.2 bulb.

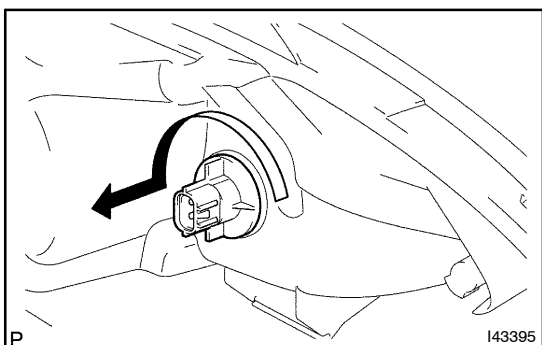


6. REMOVE FRONT TURN SIGNAL LAMP BULB

- (a) Turn in the direction indicated by the arrow and remove the front turn signal lamp socket and the front turn signal lamp bulb as a unit.
- (b) Remove the front turn signal lamp bulb from the front turn signal lamp socket.

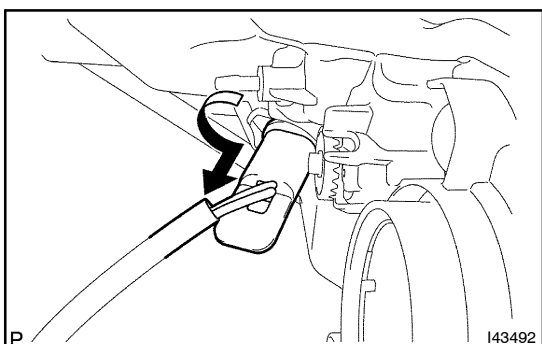

7. REMOVE CLEARANCE LAMP BULB

- (a) Turn in the direction indicated by the arrow and remove the clearance lamp socket and the clearance lamp bulb as a unit.
- (b) Remove the clearance lamp bulb from the clearance lamp socket.

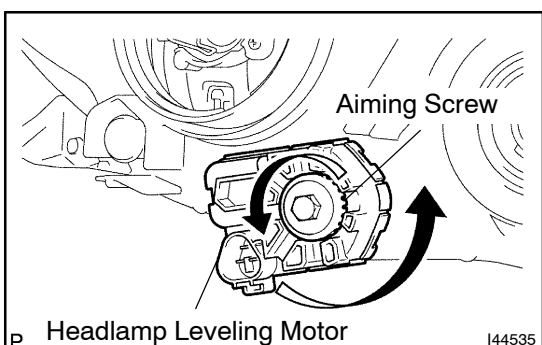

8. REMOVE HEADLAMP LEVELING MOTOR

- (a) Turn the headlamp leveling motor as shown in the illustration.
- (b) Turn the aiming screw counterclockwise to remove the headlamp leveling motor.

- 9. VEHICLE PREPARATION FOR HEADLAMP AIM ADJUSTMENT (SEE PAGE 65-5)
- 10. PREPARATION FOR HEADLAMP AIMING (Using a screen) (SEE PAGE 65-5)
- 11. HEADLAMP AIMING INSPECTION (SEE PAGE 65-5)
- 12. HEADLAMP AIMING ADJUSTMENT (SEE PAGE 65-5)
- 13. VEHICLE PREPARATION FOR FOG LAMP AIM ADJUSTMENT (SEE PAGE 65-12)
- 14. PREPARATION FOR FOG LAMP AIMING (SEE PAGE 65-12)
- 15. FOG LAMP AIMING INSPECTION (SEE PAGE 65-12)
- 16. FOG LAMP AIMING ADJUSTMENT (SEE PAGE 65-12)