


CLUTCH PEDAL SUB-ASSY REPLACEMENT

4202C-03


1. REMOVE INSTRUMENT CLUSTER FINISH PANEL
(SEE PAGE 71-16)
2. REMOVE COMBINATION METER ASSEMBLY
(SEE PAGE 71-29)
3. REMOVE INSTRUMENT PANEL SUB-ASSY UPPER
(SEE PAGE 71-16)
4. REMOVE INSTRUMENT PNL INSERT SUB-ASSY LWR LH
(SEE PAGE 71-16)
5. REMOVE CLUTCH MASTER CYLINDER PUSH ROD CLEVIS W/HOLE PIN

- (a) Remove the clip and hole pin.

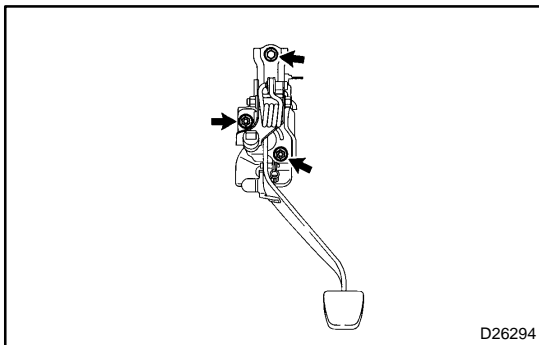


6. REMOVE CLUTCH PEDAL ASSY

- (a) Disconnect the clutch start switch clamp and connector.
- (b) Remove the bolt, 2 nuts and clutch pedal assy.

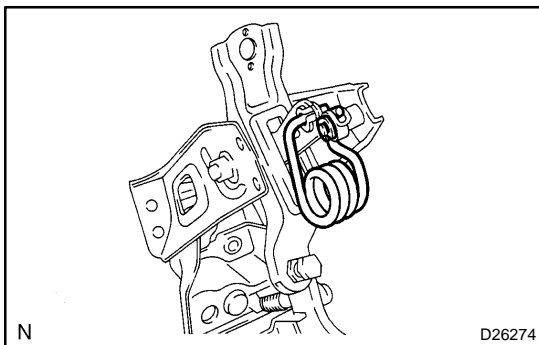


7. REMOVE TURN OVER SPRING SEAT COMPRESSION SPRING

- (a) Using a small screwdriver, remove the E-ring.
- (b) Remove the compression spring.

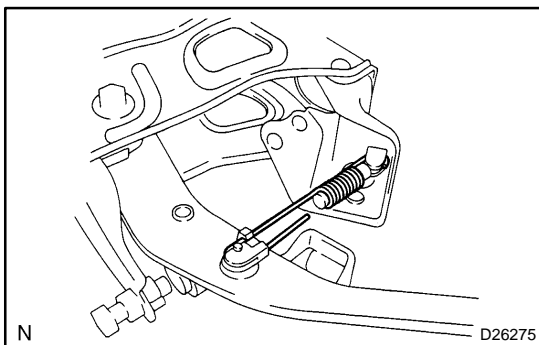


8. REMOVE CLUTCH PEDAL SUB-ASSY

- (a) Remove the clutch pedal spring.
- (b) Mount the clutch pedal assy in a soft jaw vise.

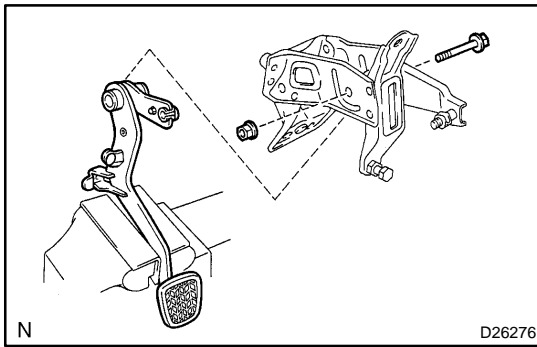


- (c) Remove the bolt, nut and clutch pedal sub-assy from clutch pedal support.

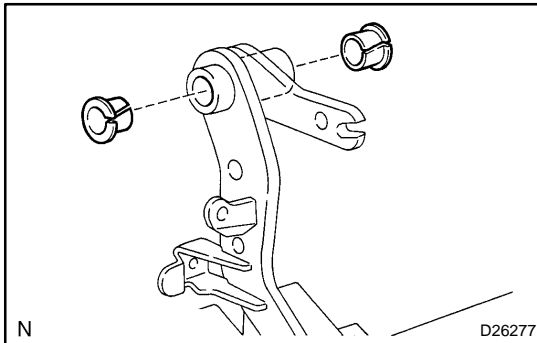

9. REMOVE CLUTCH PEDAL BUSH


- (a) Remove the 2 bushes from the clutch pedal sub-assy.

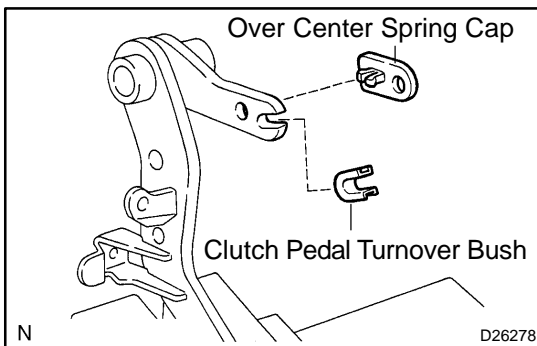


10. REMOVE CLUTCH PEDAL TURNOVER BUSH

11. REMOVE OVER CENTER SPRING CAP

12. REMOVE CLUTCH PEDAL PAD

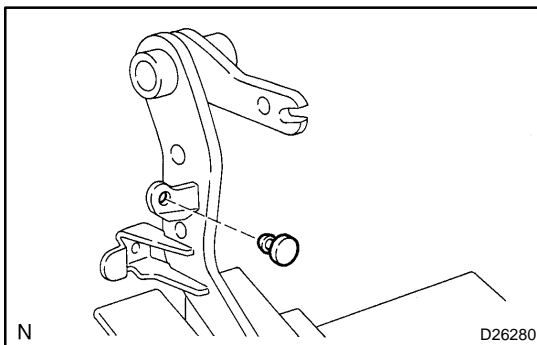


13. REMOVE CLUTCH PEDAL NO.1 CUSHION

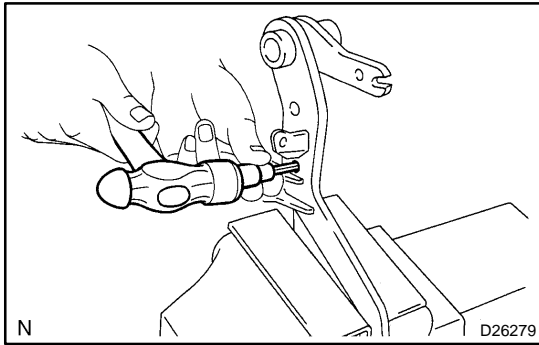

14. REMOVE CLUTCH MASTER CYLINDER PUSH ROD CLEVIS BUSH

- (a) Using a hexagon wrench (8 mm) and hammer, remove the clevis bush from the clutch pedal sub-assy.

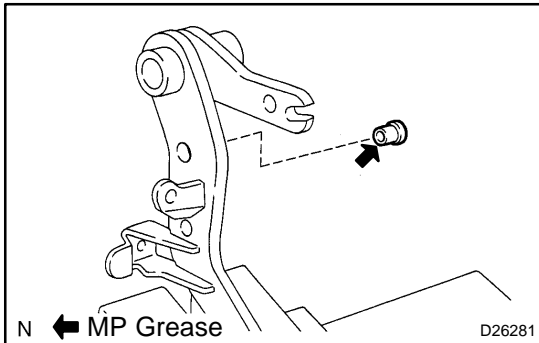

15. INSTALL CLUTCH MASTER CYLINDER PUSH ROD CLEVIS BUSH


- (a) Apply MP grease to inside of a new bush.
- (b) Install the clevis bush to the clutch pedal sub-assy.

HINT:

Install the clevis bush from the right side of the vehicle.

16. INSTALL CLUTCH PEDAL NO.1 CUSHION


17. INSTALL CLUTCH PEDAL PAD

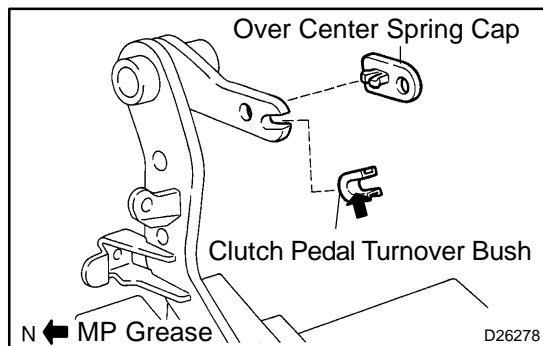

18. INSTALL OVER CENTER SPRING CAP


19. INSTALL CLUTCH PEDAL TURNOVER BUSH

- (a) Apply MP grease to inside of a new bush.
- (b) Install the bush to the clutch pedal sub-assy.

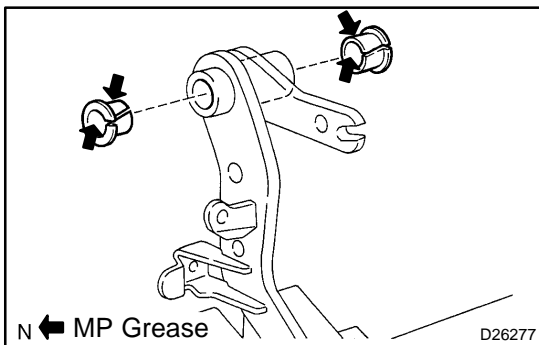

20. INSTALL CLUTCH PEDAL BUSH

- (a) Apply MP grease to both side of 2 new bushes.
- (b) Install the 2 bushes to the clutch pedal sub-assy.

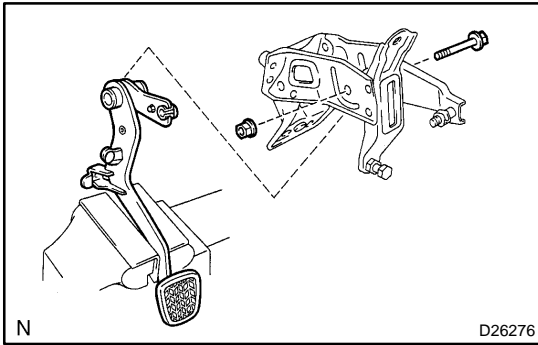


21. INSTALL CLUTCH PEDAL SUB-ASSY

- (a) Install the clutch pedal sub-assy to the clutch pedal support with the bolt and nut.


Torque: 37 N·m (375 kgf·cm, 27 ft·lbf)

HINT:

Install the bolt from the right side of the vehicle.

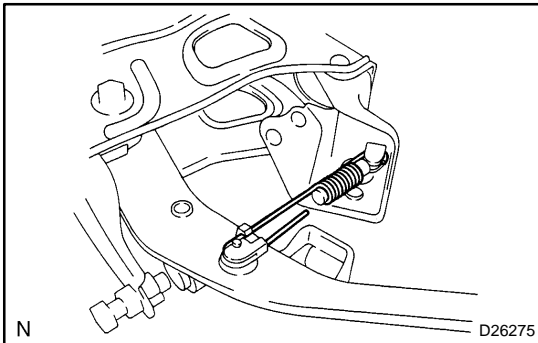

- (b) Install the clutch pedal spring.

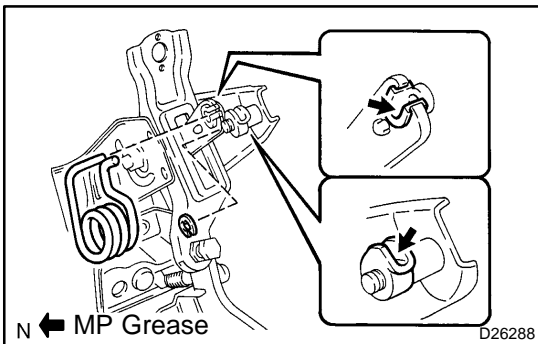

22. INSTALL TURN OVER SPRING SEAT COMPRESSION SPRING

- (a) Apply MP grease to the contact surface of the bush and spring.
 (b) Install the compression spring.
 (c) Using needle nose pliers, install the E-ring.

23. INSTALL CLUTCH PEDAL ASSY


- (a) Install the clutch pedal assy with the bolt and 2 nuts.

Torque:

Bolt: 19 N·m (195 kgf·cm, 14 ft·lbf)

Nut: 12 N·m (120 kgf·cm, 9 ft·lbf)

- (b) Connect the clutch start switch clamp and connector.

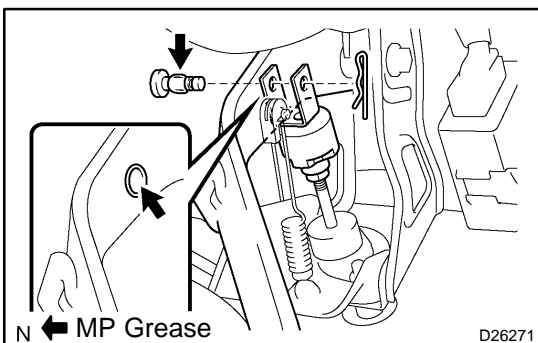

24. INSTALL CLUTCH MASTER CYLINDER PUSH ROD CLEVIS W/HOLE PIN

- (a) Apply MP grease to the contact surface of the hole pin and bush.
 (b) Connect the clevis to the clutch pedal assy with the hole pin.

HINT:

Install the hole pin from the left side of the vehicle.

- (c) Install the clip to the hole pin.

25. INSTALL INSTRUMENT PNL INSERT SUB-ASSY LWR LH
26. INSTALL INSTRUMENT PANEL SUB-ASSY UPPER
27. INSTALL COMBINATION METER ASSEMBLY
(SEE PAGE [71-29](#))
28. INSTALL INSTRUMENT CLUSTER FINISH PANEL
(SEE PAGE [71-16](#))
29. INSPECT AND ADJUST CLUTCH PEDAL SUB-ASSY
(SEE PAGE [42-7](#))
30. INSPECT CLUTCH START SWITCH ASSY
(SEE PAGE [42-19](#))