


## Position of Parts in Engine Compartment

[LHD : 1MZ-FE]

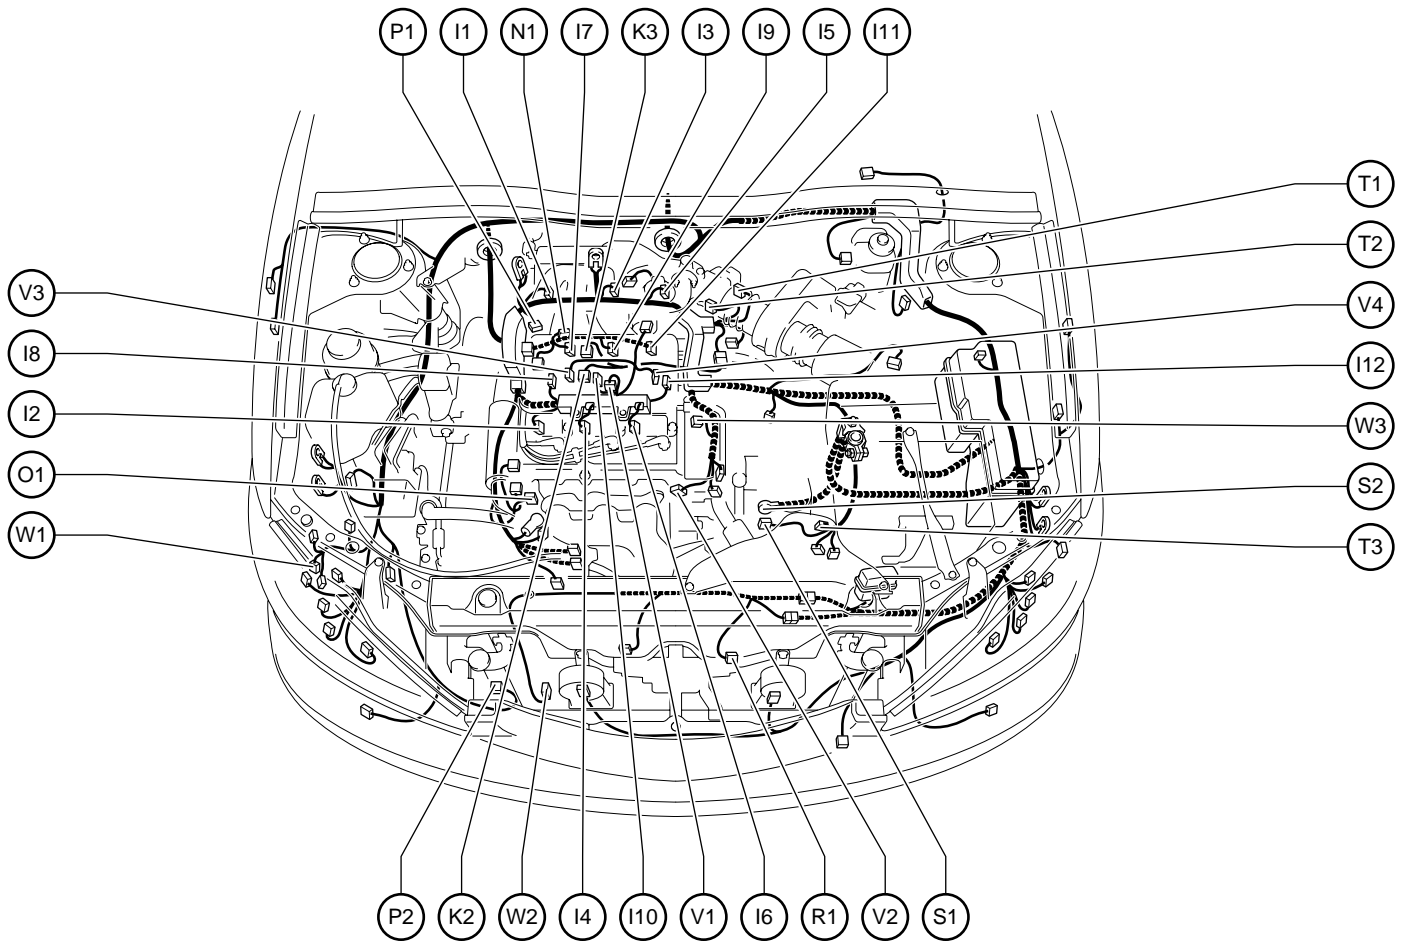

I 1 Ignition Coil and Igniter No.1  
 I 2 Ignition Coil and Igniter No.2  
 I 3 Ignition Coil and Igniter No.3  
 I 4 Ignition Coil and Igniter No.4  
 I 5 Ignition Coil and Igniter No.5  
 I 6 Ignition Coil and Igniter No.6  
 I 7 Injector No.1  
 I 8 Injector No.2  
 I 9 Injector No.3  
 I 10 Injector No.4  
 I 11 Injector No.5  
 I 12 Injector No.6

K 2 Knock Sensor No.1  
 K 3 Knock Sensor No.2

N 1 Noise Filter (Ignition)

O 1 Oil Pressure Sensor

P 1 Power Steering Oil Pressure SW

P 2 Pressure SW

R 1 Radiator Fan Motor

S 1 Starter

S 2 Starter

T 1 Throttle Control Motor

T 2 Throttle Position Sensor

T 3 Turbine Speed Sensor

V 1 VSV (ACIS)

V 2 VSV (AICV)

V 3 VSV (EGR)

V 4 VSV (EVAP)

W 1 Washer Motor

W 2 Water Temp. SW No.1

W 3 Water Temp. SW No.2