


INSPECTION

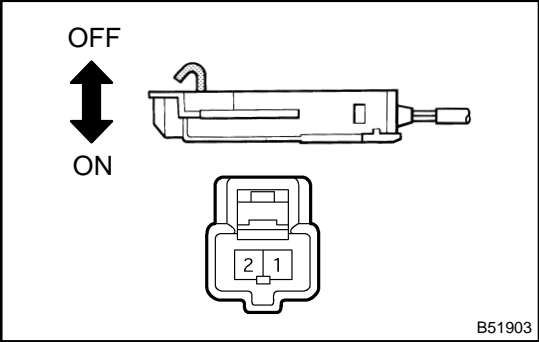


1. INSPECT UN-LOCK WARNING SWITCH ASSY

- (a) Check the switch continuity.

Standard:

Terminals No.	Condition	Specification
1 ⇔ 2	Switch pressed in	Continuity
	Switch not pressed in	No continuity

If the continuity is not as specified, replace the switch.

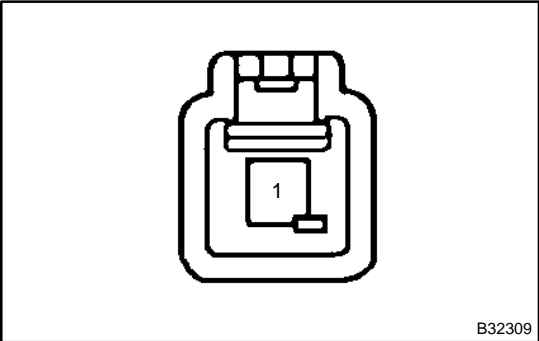

2. INSPECT FRONT DOOR COURTESY LAMP SWITCH ASSY

- (a) Check the switch continuity.

Standard:

Terminals No.	Condition	Specification
1 ⇔ Switch body	FREE	Continuity
	PUSH	No continuity

If the continuity is not as specified, replace the switch.