

# PARKING BRAKE CABLE ASSY NO.1 (From August, 2002)


## REPLACEMENT

3304W-03

HINT:


COMPONENTS: See page 33-3 and 71-9

1. REMOVE FRONT DOOR SCUFF PLATE LH (PEDAL TYPE PARKING BRAKE)(See page 71-16)
2. REMOVE COWL SIDE TRIM SUB-ASSY LH (PEDAL TYPE PARKING BRAKE)(See page 71-16)
3. REMOVE INSTRUMENT PANEL SUB-ASSY UPPER (PEDAL TYPE PARKING BRAKE)(See page 71-16)
4. REMOVE INSTRUMENT PNL INSERT SUB-ASSY LWR LH (PEDAL TYPE PARKING BRAKE)(See page 71-16)
5. REMOVE CONSOLE PANEL UPPER REAR(See page 71-16)
6. REMOVE CONSOLE BOX CARPET(See page 71-16)
7. REMOVE RR CONSOLE BOX(See page 71-16)
8. REMOVE INSTRUMENT PANEL ASH RECEPTACLE ASSY(See page 71-16)
9. REMOVE CONSOLE PANEL UPPER(See page 71-16)
10. REMOVE CONSOLE BOX FRONT(See page 71-16)
11. REMOVE AIR DUCT REAR NO.1(See page 71-16)
12. REMOVE AIR DUCT REAR NO.2(See page 71-16)
13. REMOVE CONSOLE BOX DUCT NO.1(See page 71-16)
14. REMOVE SHIFT LEVER SHAFT HOUSING ASSY(See page 71-16)
15. REMOVE YAWRATE SENSOR (W/ VSC)(See page 32-71)

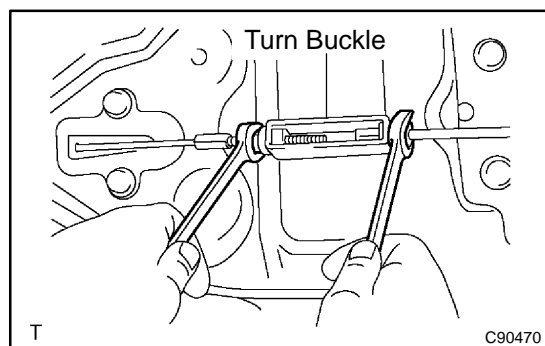



### 16. REMOVE PARKING BRAKE CABLE ASSY NO.1 (PEDAL TYPE PARKING BRAKE)

- (a) Loosen the turn buckle, disconnect the parking brake cable assy No.1 from the parking brake cable assy No.4.
- (b) Remove the 2 bolts and console box mounting bracket No.2.

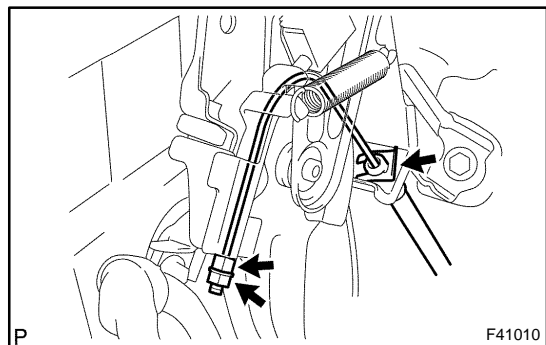


- (c) Remove the lock nut, adjusting nut, clip and disconnect the parking brake cable assy No.1 from the parking brake control pedal assy.

- (d) Remove the 2 nuts, 2 bolts, clip and parking brake cable assy No.1.

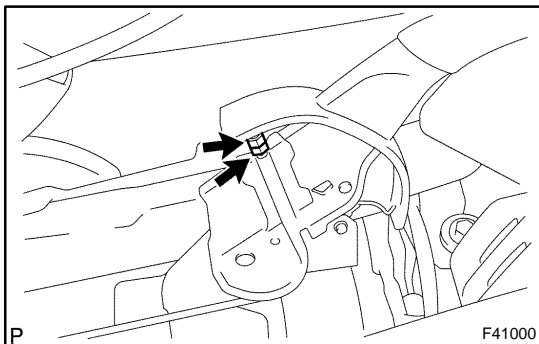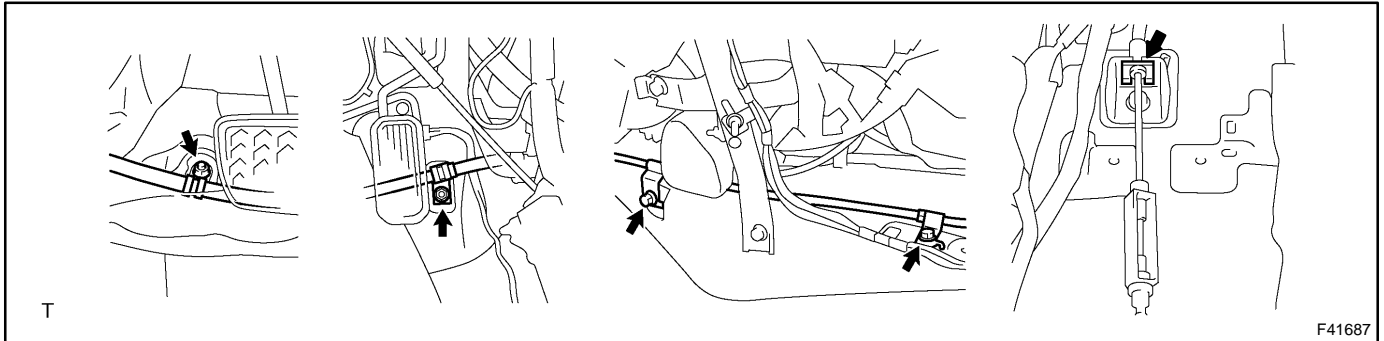

**17. REMOVE PARKING BRAKE CABLE ASSY NO.1 (LEVER TYPE PARKING BRAKE)**


- (a) Remove the lock nut and adjusting nut from the parking brake cable assy No.1.  
(b) Remove the 2 bolts and console box mounting bracket No.2.

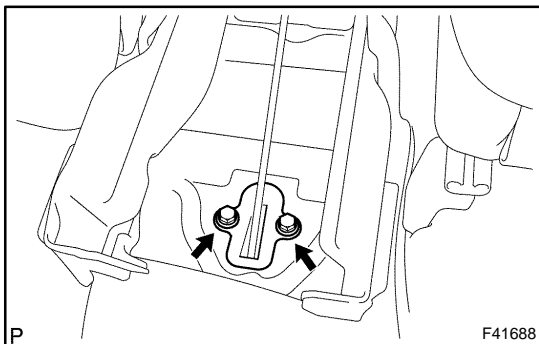


- (c) Remove the 2 bolts and separate the parking brake cable No.1 from the parking brake equalizer.

**18. INSTALL PARKING BRAKE CABLE ASSY NO.1 (PEDAL TYPE PARKING BRAKE)**

- (a) Install the parking brake cable assy No.1 with the 2 nuts, 2 bolts and clip.

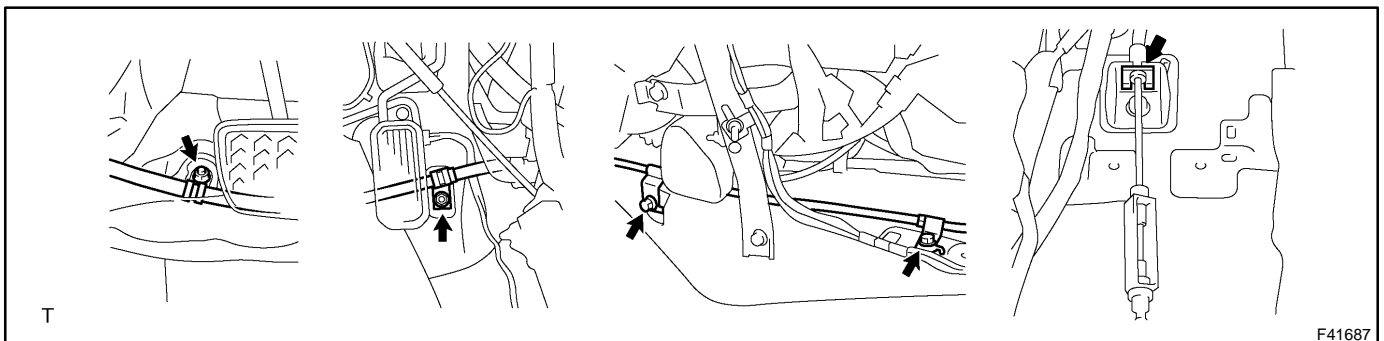

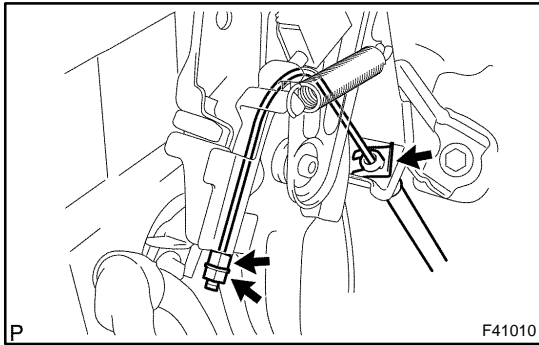


- (b) Install the parking brake cable assy No.1 with the clip, adjusting nut and lock nut to the parking brake control pedal assy.

**Torque: 5.4 N·m (55 kgf·cm, 48 in.-lbf)**


- (c) Install the console box mounting bracket No.2 with the 2 bolts.

**Torque: 12.5 N·m (128 kgf·cm, 9 ft.-lbf)**

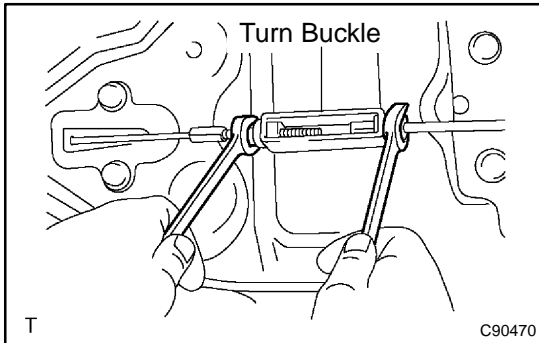

- (d) Tighten the turn buckle, connect the parking brake cable assy No. 1 to the parking brake cable assy No.4.

**Torque: 5.4 N·m (55 kgf·cm, 48 in.-lbf)**

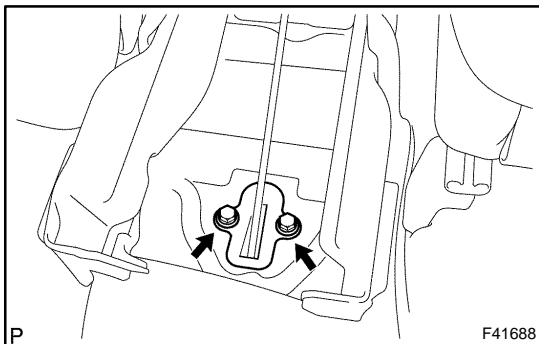


#### 19. INSTALL PARKING BRAKE CABLE ASSY NO.1 (LEVER TYPE PARKING BRAKE)

- (a) Install the parking brake cable assy No.1 with the 2 bolts to the parking brake equalizer.

**Torque: 23 N·m (235 kgf·cm, 17 ft.-lbf)**

- (b) Install the console box mounting bracket No.2 with the 2 bolts.

**Torque: 12.5 N·m (128 kgf·cm, 9 ft.-lbf)**

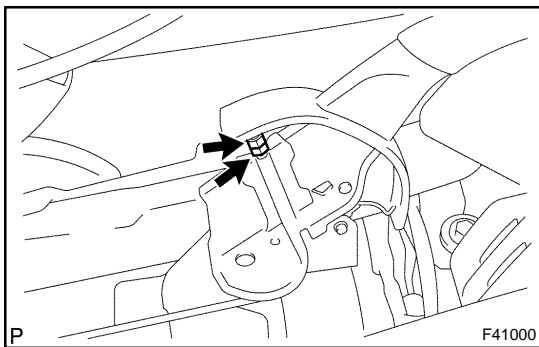

- (c) Install the parking brake cable assy No.1 with the adjusting nut and lock nut to the parking brake lever assy.

**Torque: 5.0 N·m (51 kgf·cm, 44 in.-lbf)**

20. INSTALL YAWRATE SENSOR (W/ VSC)(See page 32-71)

21. INSTALL SHIFT LEVER SHAFT HOUSING ASSY(See page 71-16)

22. INSTALL CONSOLE BOX DUCT NO.1(See page 71-16)

23. INSTALL AIR DUCT REAR NO.2(See page 71-16)

24. INSTALL AIR DUCT REAR NO.1(See page 71-16)

25. INSTALL CONSOLE BOX FRONT(See page 71-16)

26. INSTALL CONSOLE PANEL UPPER(See page 71-16)

27. INSTALL INSTRUMENT PANEL ASH RECEPTACLE ASSY(See page 71-16)

28. INSTALL RR CONSOLE BOX(See page 71-16)

29. INSTALL CONSOLE BOX CARPET(See page 71-16)

30. INSTALL CONSOLE PANEL UPPER REAR(See page [71-16](#))
31. INSTALL INSTRUMENT PNL INSERT SUB-ASSY LWR LH (PEDAL TYPE PARKING BRAKE)(See page [71-16](#))
32. INSTALL INSTRUMENT PANEL SUB-ASSY UPPER (PEDAL TYPE PARKING BRAKE)(See page [71-16](#))
33. INSTALL COWL SIDE TRIM SUB-ASSY LH (PEDAL TYPE PARKING BRAKE)(See page [71-16](#))
34. INSTALL FRONT DOOR SCUFF PLATE LH (PEDAL TYPE PARKING BRAKE)(See page [71-16](#))
35. INSPECT AND ADJUST PARKING BRAKE PEDAL TRAVEL (PEDAL TYPE PARKING BRAKE)(See page [33-2](#))
36. INSPECT AND ADJUST PARKING BRAKE LEVER TRAVEL (LEVER TYPE PARKING BRAKE)(See page [33-2](#))
37. PERFORM YAWRATE SENSOR ZERO POINT CALIBRATION (W/ VSC)(See page [05-987](#))