


INSPECTION

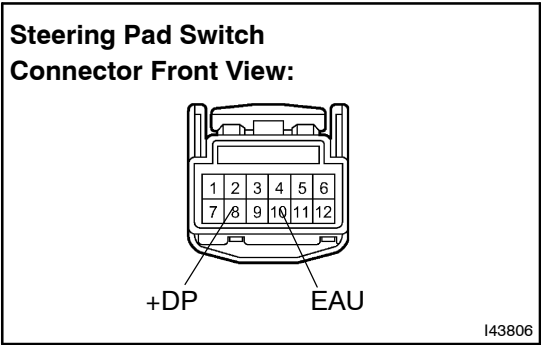

INSPECT STEERING PAD SWITCH

- (a) Remove the steering pad switch.
- (b) Measure the resistance between terminals 8 (+DP) and 10 (EAU) of the steering pad switch connector.

Standard:

Condition	Resistance
INFO switch is pressed	Below 2.5 Ω
INFO switch is not pressed	10 kΩ or higher
MODE/RSET switch is pressed	2.1 to 2.3 kΩ
MODE/RSET switch is not pressed	10 kΩ or higher