


REAR AXLE LH HUB BOLT REPLACEMENT


HINT:

- COMPONENTS: SEE PAGE 30-4
 - Replace the RH side by the same procedures with the LH side.
1. REMOVE REAR WHEEL
 2. REMOVE REAR DISC BRAKE CALIPER ASSY LH (DISC REAR BRAKE TYPE)
(SEE PAGE 30-29)
 3. REMOVE REAR DISC (DISC REAR BRAKE TYPE)
 4. REMOVE REAR BRAKE DRUM SUB-ASSY (DRUM REAR BRAKE TYPE)

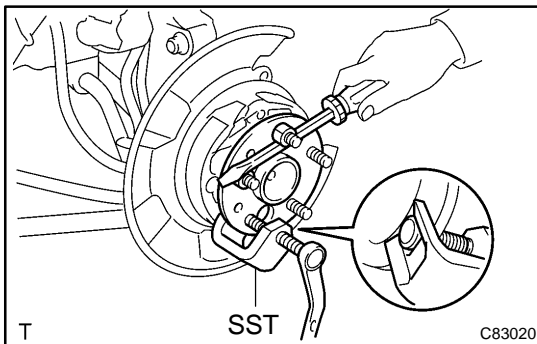

5. REMOVE REAR AXLE LH HUB BOLT

- (a) Using SST and a screwdriver or an equivalent to hold, remove the rear axle LH hub bolt.
SST 09628-10011

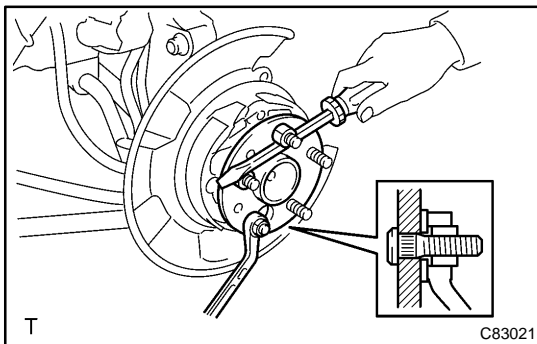

6. INSTALL REAR AXLE LH HUB BOLT

- (a) Install a washer and nut to a new rear axle LH hub bolt as shown in the illustration.
- (b) Using a screwdriver to hold, install the rear axle LH hub bolt by torquing the nut.

7. INSTALL REAR DISC (DISC REAR BRAKE TYPE)
8. INSTALL REAR DISC BRAKE CALIPER ASSY LH (DISC REAR BRAKE TYPE)
(SEE PAGE 30-29)
9. INSTALL REAR BRAKE DRUM SUB-ASSY (DRUM REAR BRAKE TYPE)
10. INSTALL REAR WHEEL
Torque: 103 N·m (1,050 kgf·cm, 76 ft·lbf)