


CENTER STOP LAMP ASSY REPLACEMENT

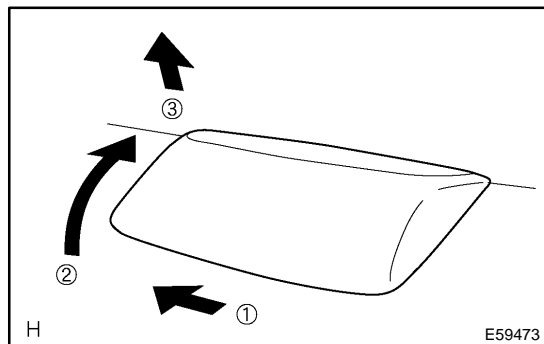


1. REMOVE CENTER STOP LAMP ASSY (W/O REAR SPOILER LED)

- (a) Pull out the center stop light assy shown in the illustration.
- (b) Disconnect connector.

2. REMOVE LUGGAGE COMPARTMENT DOOR COVER (W/ REAR SPOILER LED) (See Page 76-9)

3. REMOVE REAR SPOILER SUB-ASSY (W/ REAR SPOILER LED) (See Page 76-9)

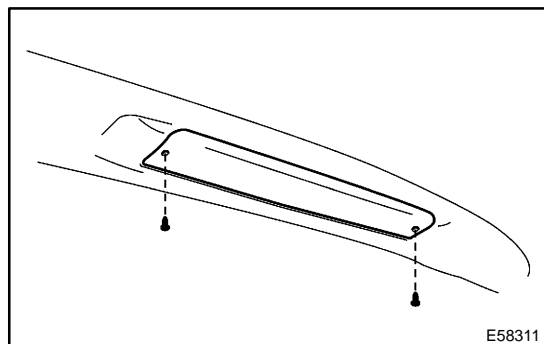

4. REMOVE CENTER STOP LAMP ASSY (W/ REAR SPOILER LED)

- (a) Remove the 2 screws and center stop light assy.

5. INSTALL REAR SPOILER SUB-ASSY (W/ REAR SPOILER LED) (See Page 76-9)