


Connector Joining Wire Harness and Wire Harness

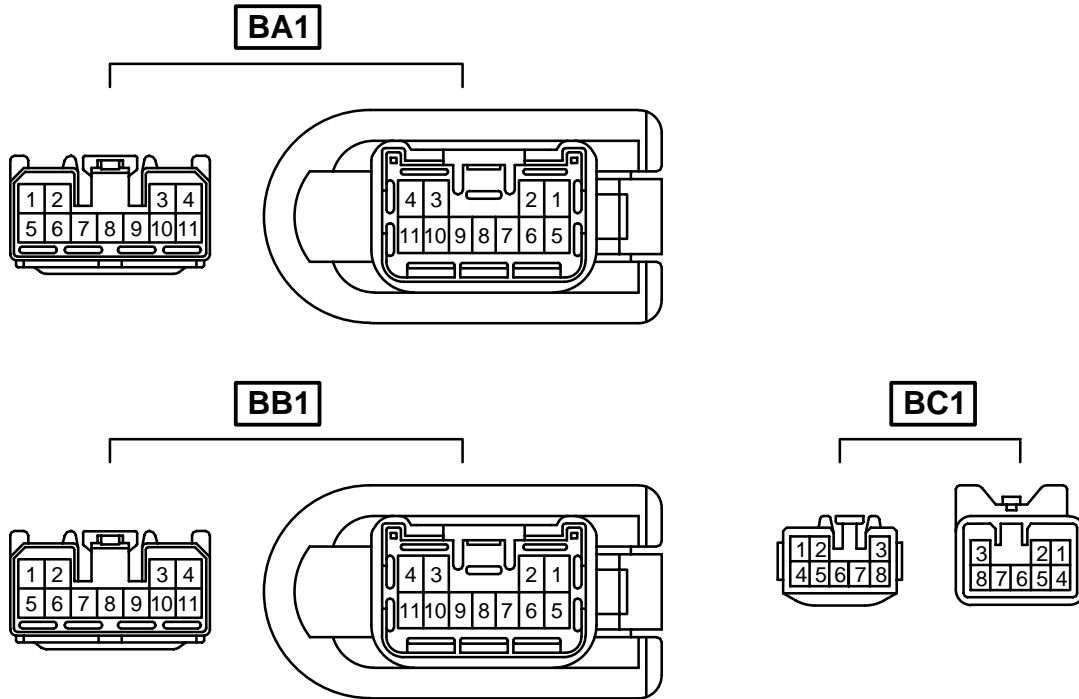

Code	Joining Wire Harness and Wire Harness (Connector Location)
BA1	Rear Door LH Wire and Floor Wire (Left Center Pillar)
BB1	Rear Door RH Wire and Floor No.2 Wire (Right Center Pillar)
BC1	Floor No.4 Wire and Floor No.2 Wire (Behind the Rear Passenger's Seat RH)