


# STEERING PAD SWITCH LH REPLACEMENT

671DX-01


## HINT:

- COMPONENTS: [SEE PAGE 67-1](#).
  - Installation is in the reverse order of removal.
1. **PRECAUTION** ([SEE PAGE 60-1](#))
  2. **DISCONNECT BATTERY NEGATIVE TERMINAL** ([SEE PAGE 60-1](#))
  3. **REMOVE STEERING WHEEL COVER LOWER NO.2** ([SEE PUB. NO. RM915E, PAGE 50-6](#))
  4. **REMOVE STEERING WHEEL COVER LOWER NO.3** ([SEE PUB. NO. RM915E, PAGE 50-6](#))
  5. **REMOVE HORN BUTTON ASSY** ([SEE PAGE 60-19](#))

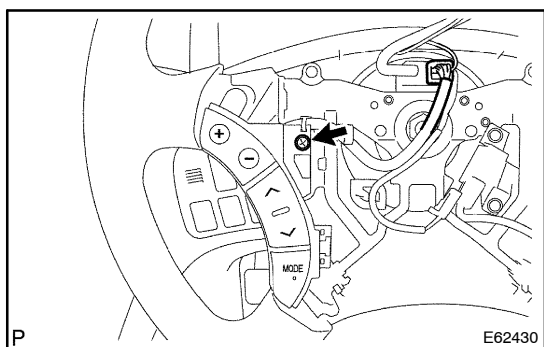


## 6. REMOVE STEERING PAD SWITCH LH (4 SPOKE STEERING WHEEL ASSY)


- (a) Disconnect the connector.
- (b) Disconnect the connector of cruise control main switch.
- (c) Remove the screw.

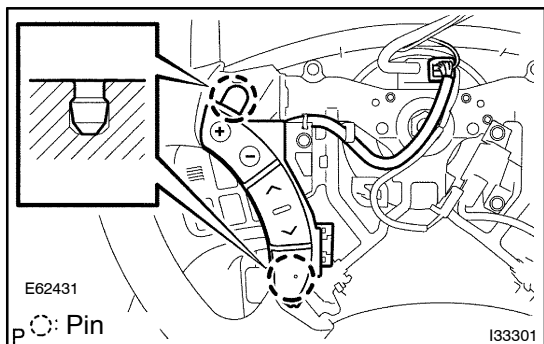


- (d) w/o steering pad switch RH:  
Release the 2 pins and remove the steering pad switch LH.

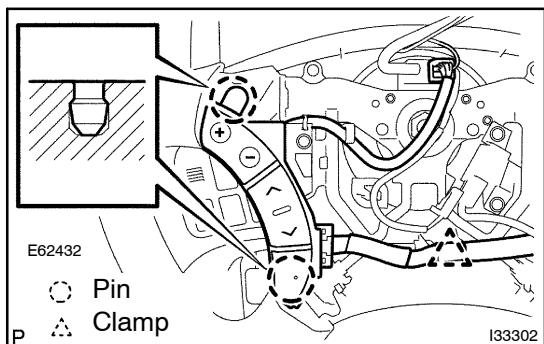


- (e) w/ steering pad switch RH:  
Remove the clamp.
- (f) w/ steering pad switch RH:  
Release the 2 pins and release the steering pad switch LH from steering wheel.

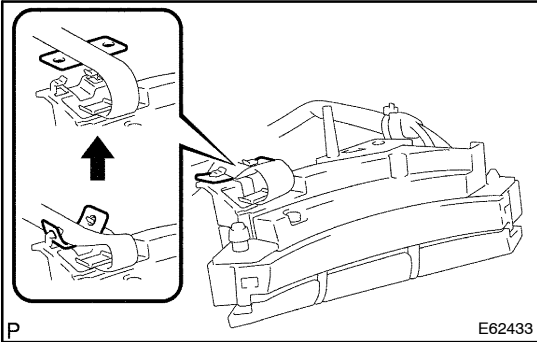


- (g) w/ steering pad switch RH:  
Release the tab of steering pad switch cable from steering pad switch LH as shown in the illustration.

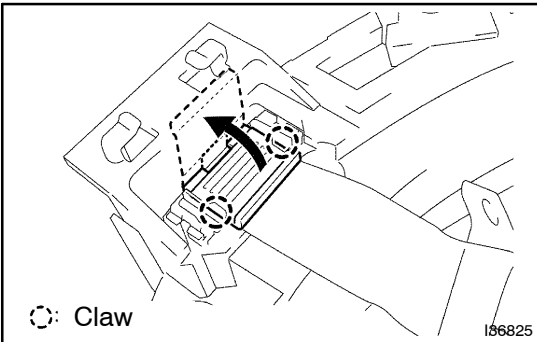

- (h) w/ steering pad switch RH:  
Disengage the 2 claws as shown in the illustration and open the latch on the top of the connector.

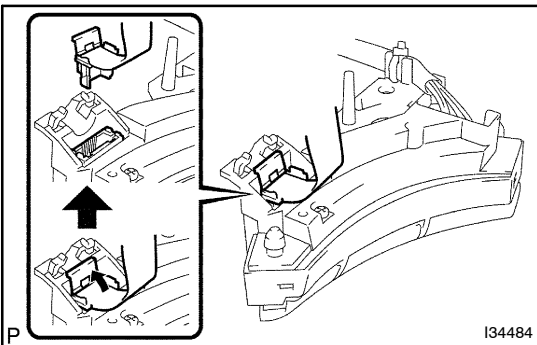


- (i) w/ steering pad switch RH:  
Pull out the connector while pinching the latch with fingers and disconnect the steering pad switch cable from the steering pad switch LH.

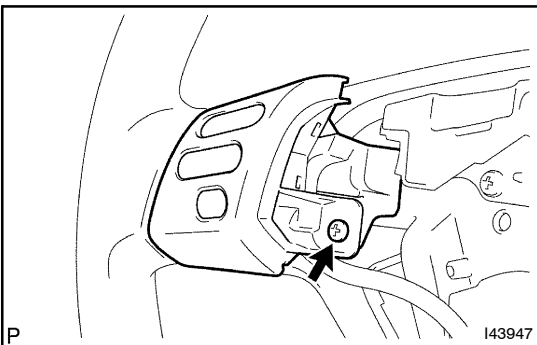

## 7. REMOVE STEERING PAD SWITCH LH (3 SPOKE STEERING WHEEL ASSY)

- (a) Disconnect the connector.  
(b) Remove the screw.

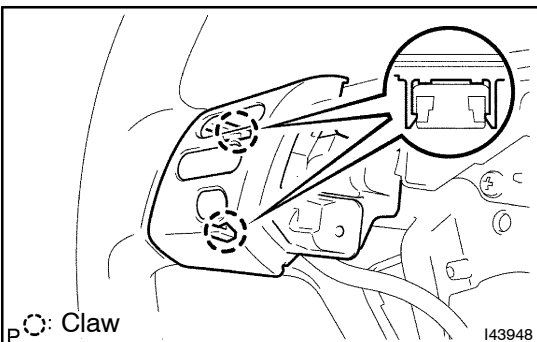

- (c) Disengage the 2 claws.  
(d) Remove the steering pad switch LH.

8. INSTALL HORN BUTTON ASSY (SEE PAGE 60-19)
9. CONNECT BATTERY NEGATIVE TERMINAL
10. INSPECT SRS WARNING LIGHT (SEE PAGE 60-19)