


VENTILATION VALVE SUB-ASSY (1MZ-FE/3MZ-FE)

REPLACEMENT

120BR-05

1. REMOVE VENTILATION VALVE SUB-ASSY

- (a) Disconnect the PCV hose from the PCV valve.
- (b) Remove the PCV valve.

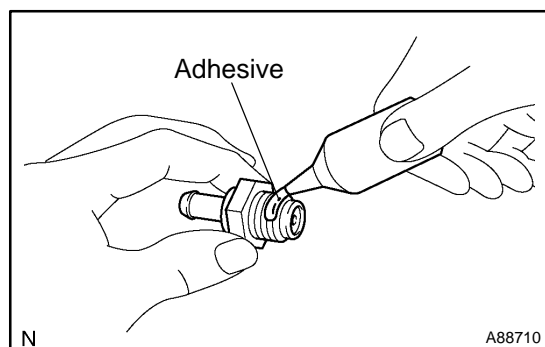

2. INSTALL VENTILATION VALVE SUB-ASSY

- (a) Reinstall the PCV valve.
 - (1) Apply adhesive to 2 or 3 threads.

Adhesive:
Part No. 08833-00070, THREE BOND 1324 or equivalent

 - (2) Reinstall the PCV valve.

Torque: 19 N·m (193 kgf·cm, 14 ft·lbf)
- (b) Connect the PCV hose to the PCV valve.