


FOG LAMP ASSY LH OVERHAUL

HINT:


- Use the same procedures for the RH side and LH side.
- The procedures listed below are for the LH side.
- Installation is in the reverse order of removal.

1. REMOVE FRONT BUMPER ASSY (SEE PAGE 76-2)

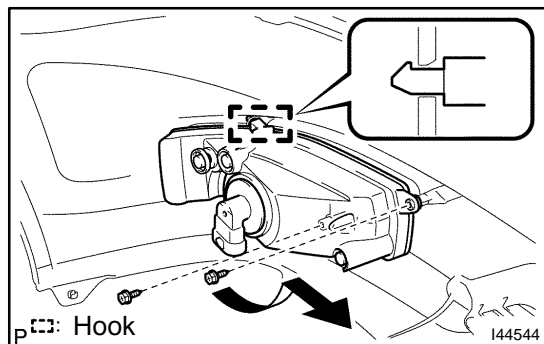

2. REMOVE FOG LAMP ASSY LH

- (a) Remove the 2 screws.
- (b) Move the fog lamp assy LH in the direction indicated by the arrow, disengage the hook, and remove the fog lamp assy LH.

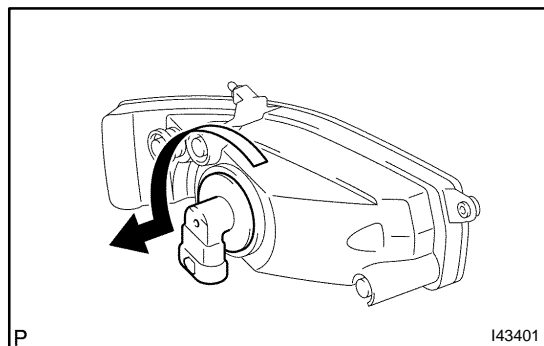

3. REMOVE FOG LAMP BULB

- (a) Turn the fog lamp bulb in the direction as shown in the illustration and remove the fog lamp bulb.

4. VEHICLE PREPARATION FOR FOG LAMP AIM ADJUSTMENT (SEE PAGE 65-17)
5. PREPARATION FOR FOG LAMP AIMING (SEE PAGE 65-17)
6. FOG LAMP AIMING INSPECTION (SEE PAGE 65-17)
7. FOG LAMP AIMING ADJUSTMENT (SEE PAGE 65-17)